 

Assembly Instructions Jr 1.5m Wood Activity Table






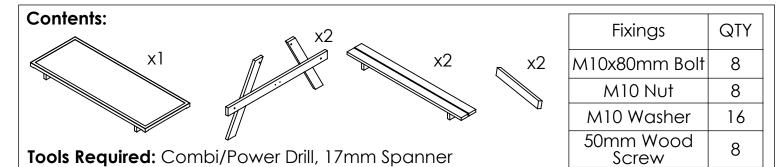


surface and bolt the a-frames to the tabletop using x4 M10x80 bolts.


Step 1: Lay the tabletop on a soft

Step 2: With at least two people, flip the table the right way up and bolt the seats into the a-frames.

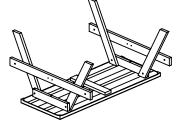


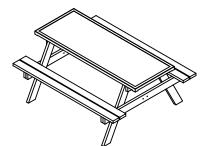


Step 3: Flip the table again and screw the diagonals into the a-frame crossbars and the middle table support.

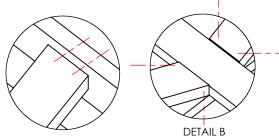

DETAIL A SCALE 1 : 8 SCALE 1 : 6

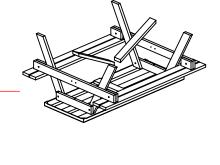

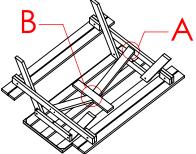

Maintenance:

15 years guarantee. If damaged, repair and treatment is required. Can be cleaned with soapy water. Dependent on environment, more frequent treatment may be required. Pressure treated tanalised timber (Class 4, BS EN 335-1 for direct contact with soil and fresh water).

Contact: Tel - 08081751903 Email - sales@picnictable.co.uk Web - picnictable.co.uk

THANK YOU FOR YOUR BUSINESS