

# Assembly Instructions




Email : [Sales@shelters4less.co.uk](mailto:Sales@shelters4less.co.uk)  
Web : [www.shelters4less.co.uk](http://www.shelters4less.co.uk)  
Tel : 0800 160 1002

**Shelter type: Canterbury 2m**

**CB2M-01-16012017-S4L**

Side Panel -  
Optional extra

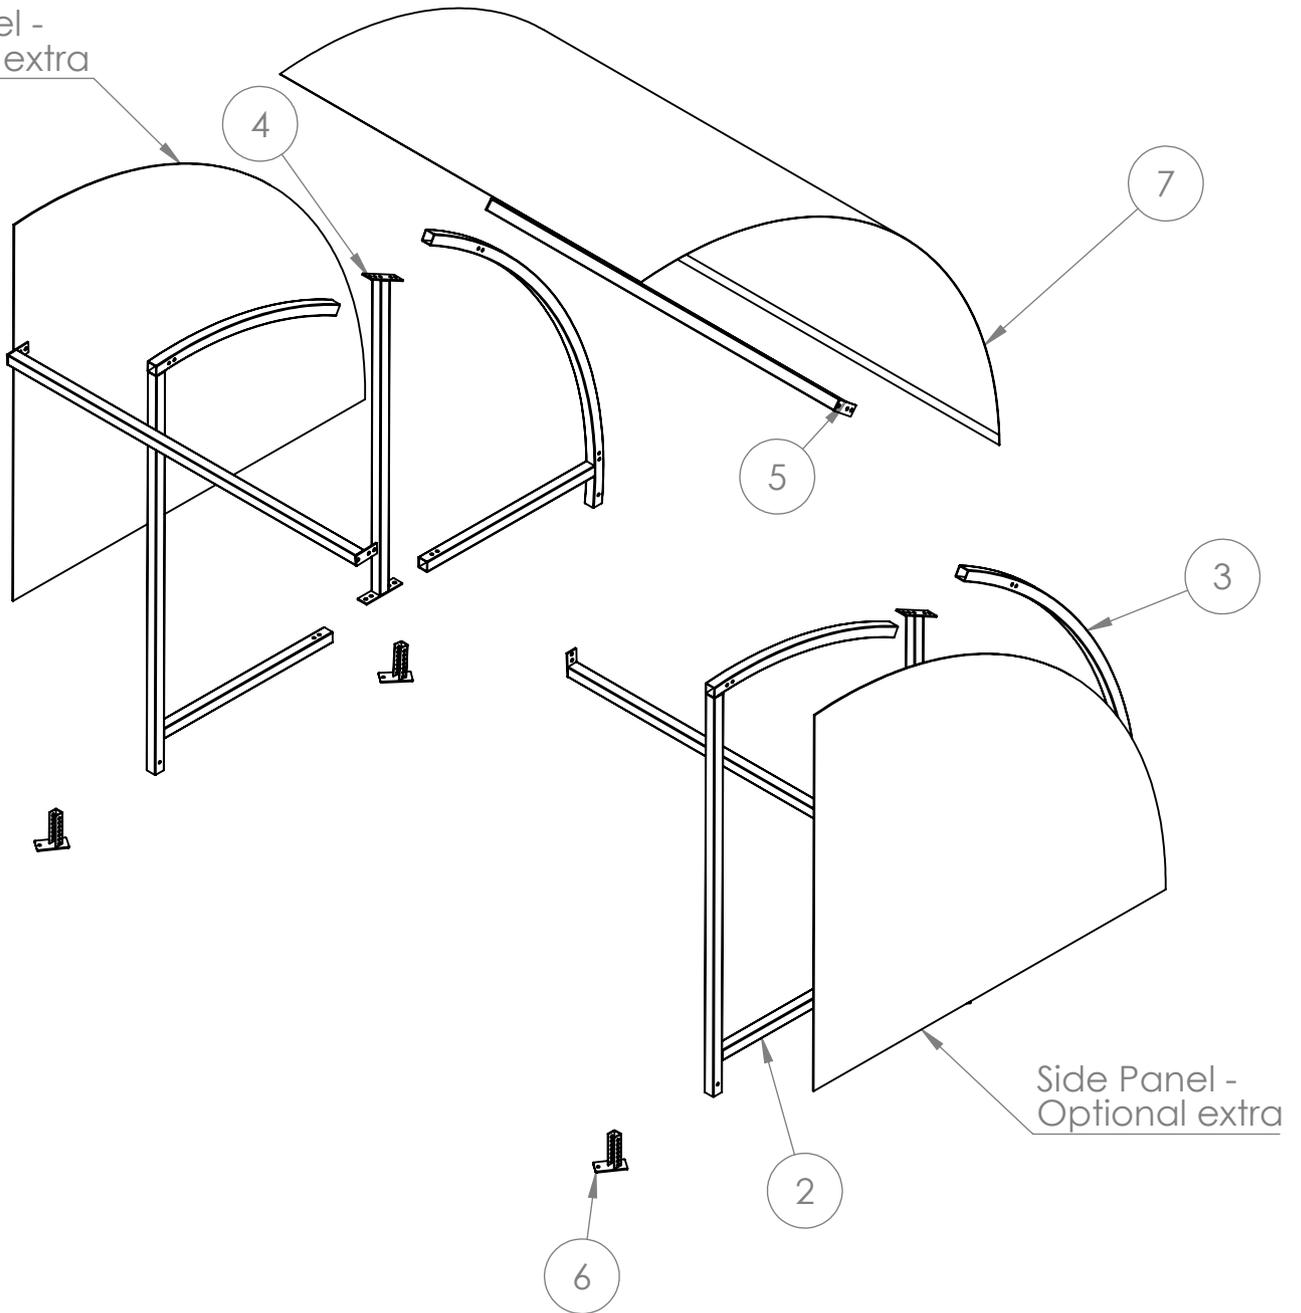

**Tools required: (Not supplied)**





Drill/Screwdriver



Socket set

# PARTS LIST & FITTINGS

ITEM NO.	PART NO.	DESCRIPTION	DIMENSION (mm)	IMAGE	QTY.
1	EC50	Plastic end cap	50 x 50		2
2	KFF	Kimmeridge Front Frame Assembly	1975 x 990		2
3	KRF	Kimmeridge Rear Frame Assembly	2115 x 985		2
4	KST	Kimmeridge Straight Tie Bar Assembly	1535		2
5	CTB	Central Tie Bar	1950		3
6	KIF	Kimmeridge Internal Foot	153		4
7	RP1	Outside Roof Panel	2995 x 2030		1


Fittings	M10 x 20 Hex head bolt	M10 x 70 Hex head bolt	M10 x 100 Anchor bolt	M10 Nuts	M10 Standard Washers	M12 Washers	25 Tech screws	Plastic caps M10
QTY.	28	4	4	4	36	4	110	36
Image								

If you have received the "Split End" version (If not go straight to Step 1)


**Join the three frame sections to make the Complete Side Frame using M10 bolts.**

**Note: Shelter has 2 sides Left and Right. Make sure all holes are in correct position before assembling. (Facing into shelter)**


2 people recommended to fit this shelter.

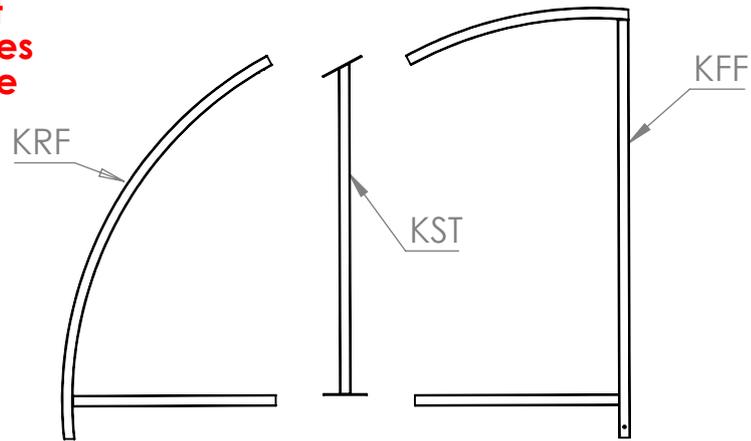


**Step 1** Take the **CF Side Frame** and attach the **CTB Tie Bar** to it in the positions shown below using the **M10x20 Bolts** supplied.

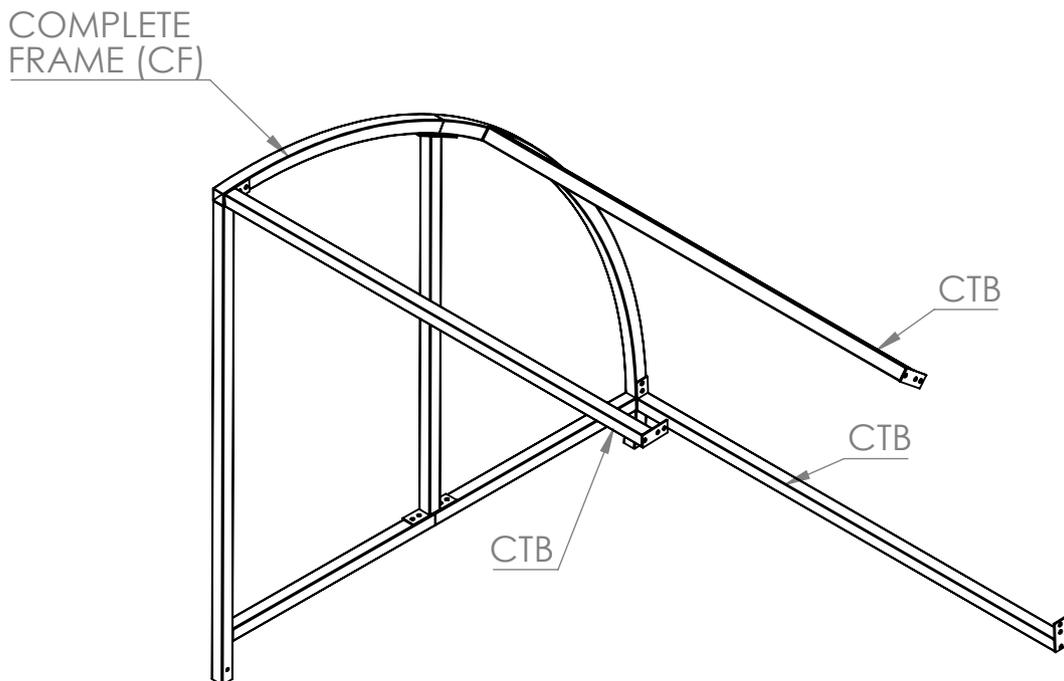

**Step 2** Repeat **Step 1** with the other side of the shelter. (**Structure should now stand without support.**) Make sure all bolts are tight at this point.

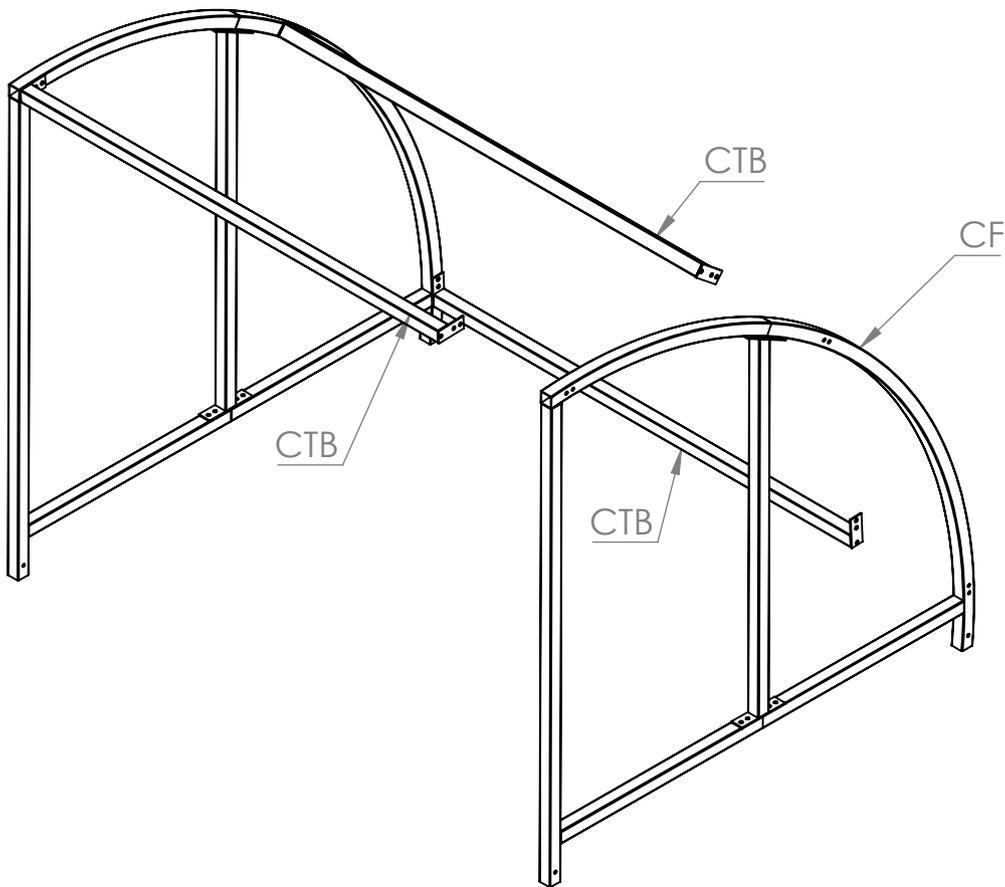


**Step 3** Secure the polycarbonate supplied with the shelter to the outer parameter, using **TEC 25 Screws** in the fixing kit. (Note: 200mm Spacings Between **TEC Screws**)

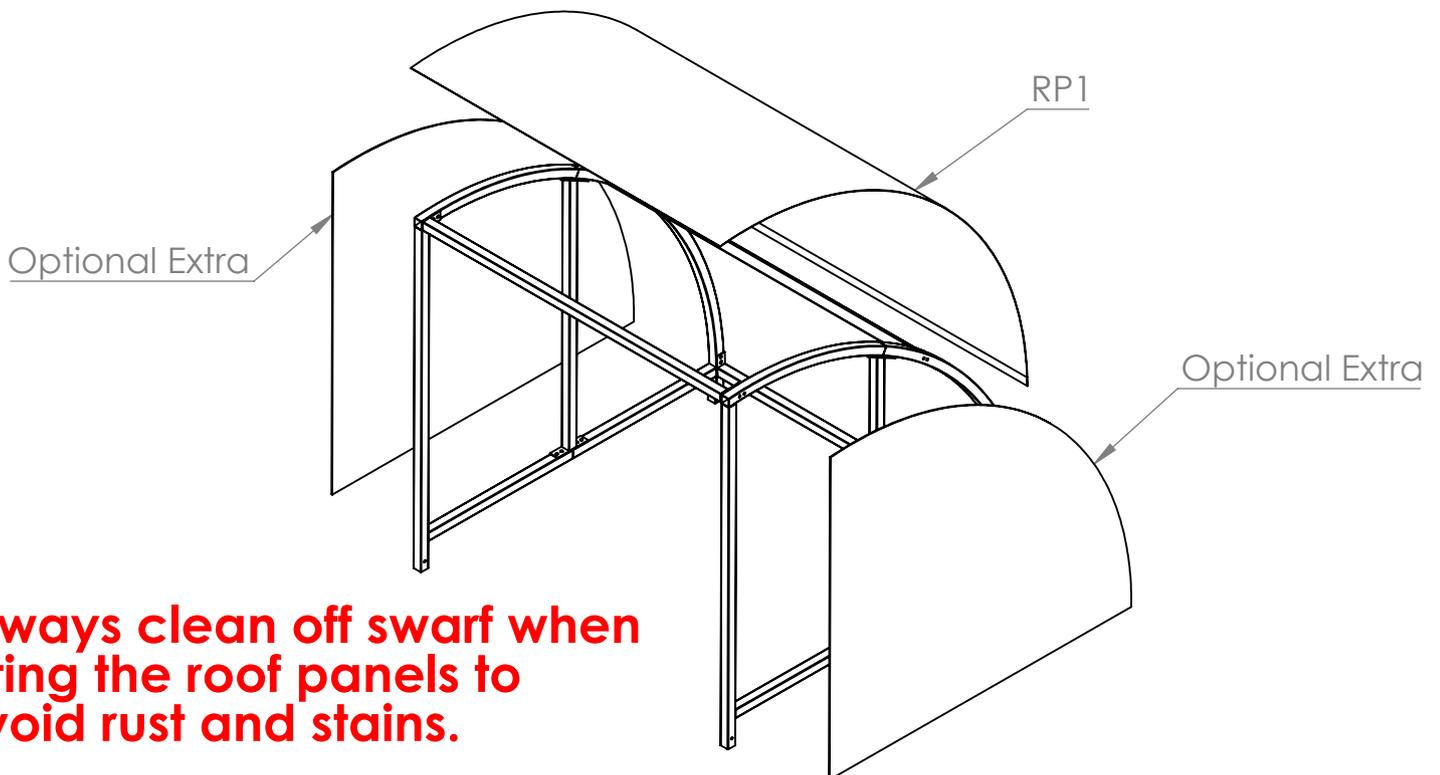


**Always clean off swarf when fitting the roof panels to avoid rust and stains.**

**Step 4** Now all the polycarbonate is attached, move shelter to desired location.

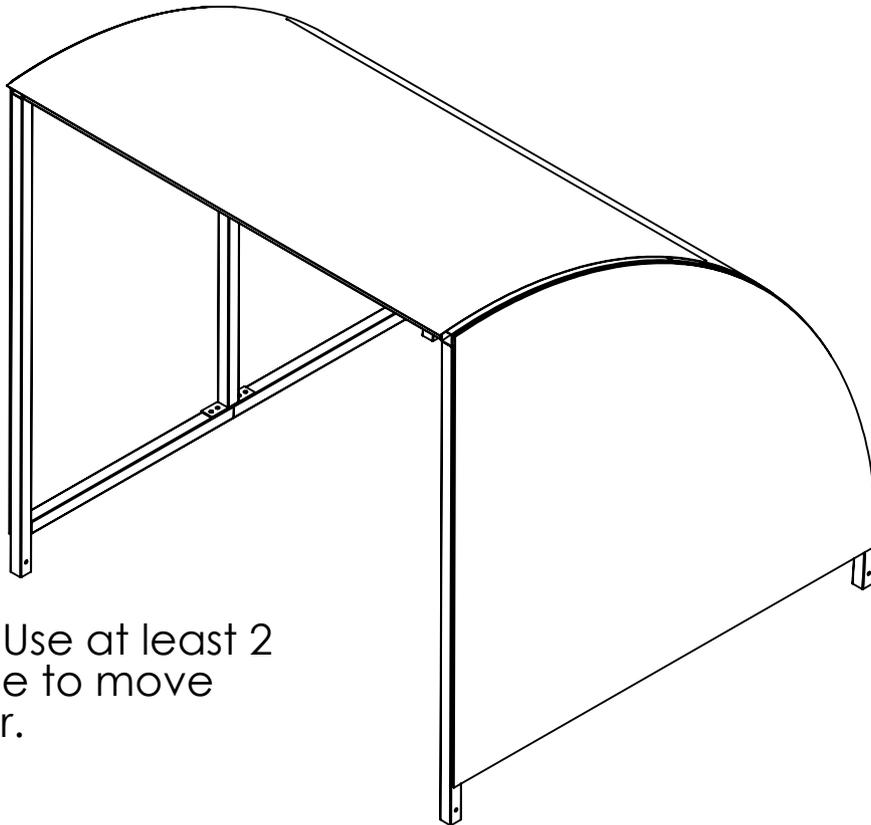

**Note:** Use at least 2 people to move shelter.

**Step 5** Once in desired location bolt the foot to the shelter (**M10x70**) and to ground (**M10x100**) using fixings within the kit provided.

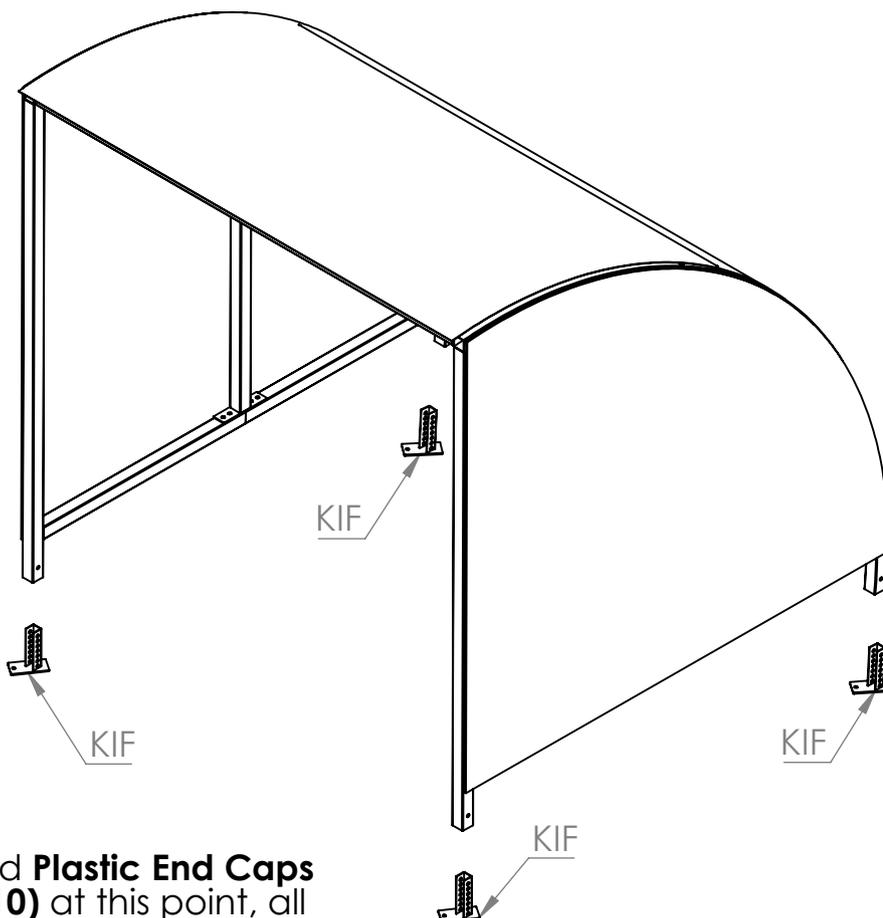

**Note:** Add **Plastic End Caps (M8 & M10)** at this point, all caps should be used.

**NOTES:**

# THANK YOU FOR PURCHASING THIS PRODUCT

## MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

## CONTACT DETAILS:

Email : Sales@shelters4less.co.uk

Web : www.shelters4less.co.uk

Tel : 0800 160 1002

Shelters4Less, Unit 3, 2 Lansdowne Crescent, Bournemouth, BH1 1SA

<b>All Parts and Fixings checked by:</b>	
Print Name:	Signature: