

Speyside 3 Seat Bench Instructions




Pre-Assembly Preparation

**15 Minutes
Assembly**

**Floor space
Needed: 1.5m²**

**1 Person
Assembly**

Part List

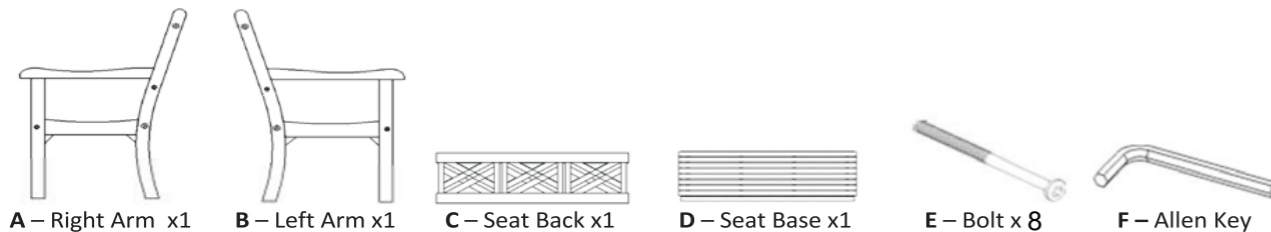

Care & Maintenance Of Your Furniture Pre-Assembly Instructions


1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For large items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assemble near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. Do not completely tighten bolts until all the bolts are properly fitted.
During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use any power tools.

- Please periodically check all fittings are re-tightened as necessary.
- Please do not drag or pull your furniture as this may damage it.
- To clean, wipe with a damp cloth, do not use bleach, acid solvents or abrasive cleaners for frame parts. Dry with a dry clean soft cloth.
- For a deep clean use a power hose on the product and then dry all areas.
- To remove any stubborn stains or marks, please use the provided sanding block
- A furniture cover is recommended to extend the lifespan of the product.
- During varying weather conditions and winter period, we recommend that it is stored in a dry area. Please ensure that it is clean and dry.

Step 1


Take out all the components and place them onto a soft, clean surface.

Using bolts (E) attach the Right arm (A) to the seat back (C)

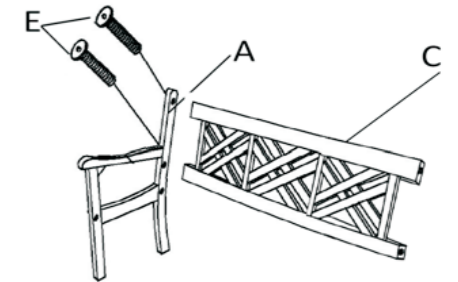

Step 2

Attach the Seat base (D) to the Right arm (A) and Seat back (C) using bolts (E)

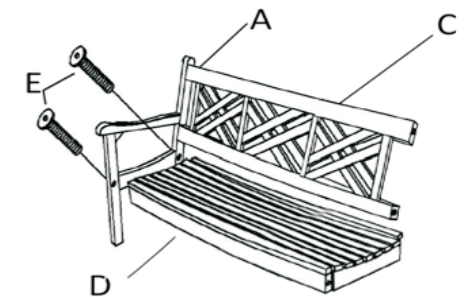

Step 3

Attach the Left arm (B) to the seat back (C) and seat base (D) using bolts (E). Ensure that all bolts are tightly in place using the provided allen key.

The bench is now ready to use.

