


Assembly Instructions


Cycle Shelter with Gates 2m

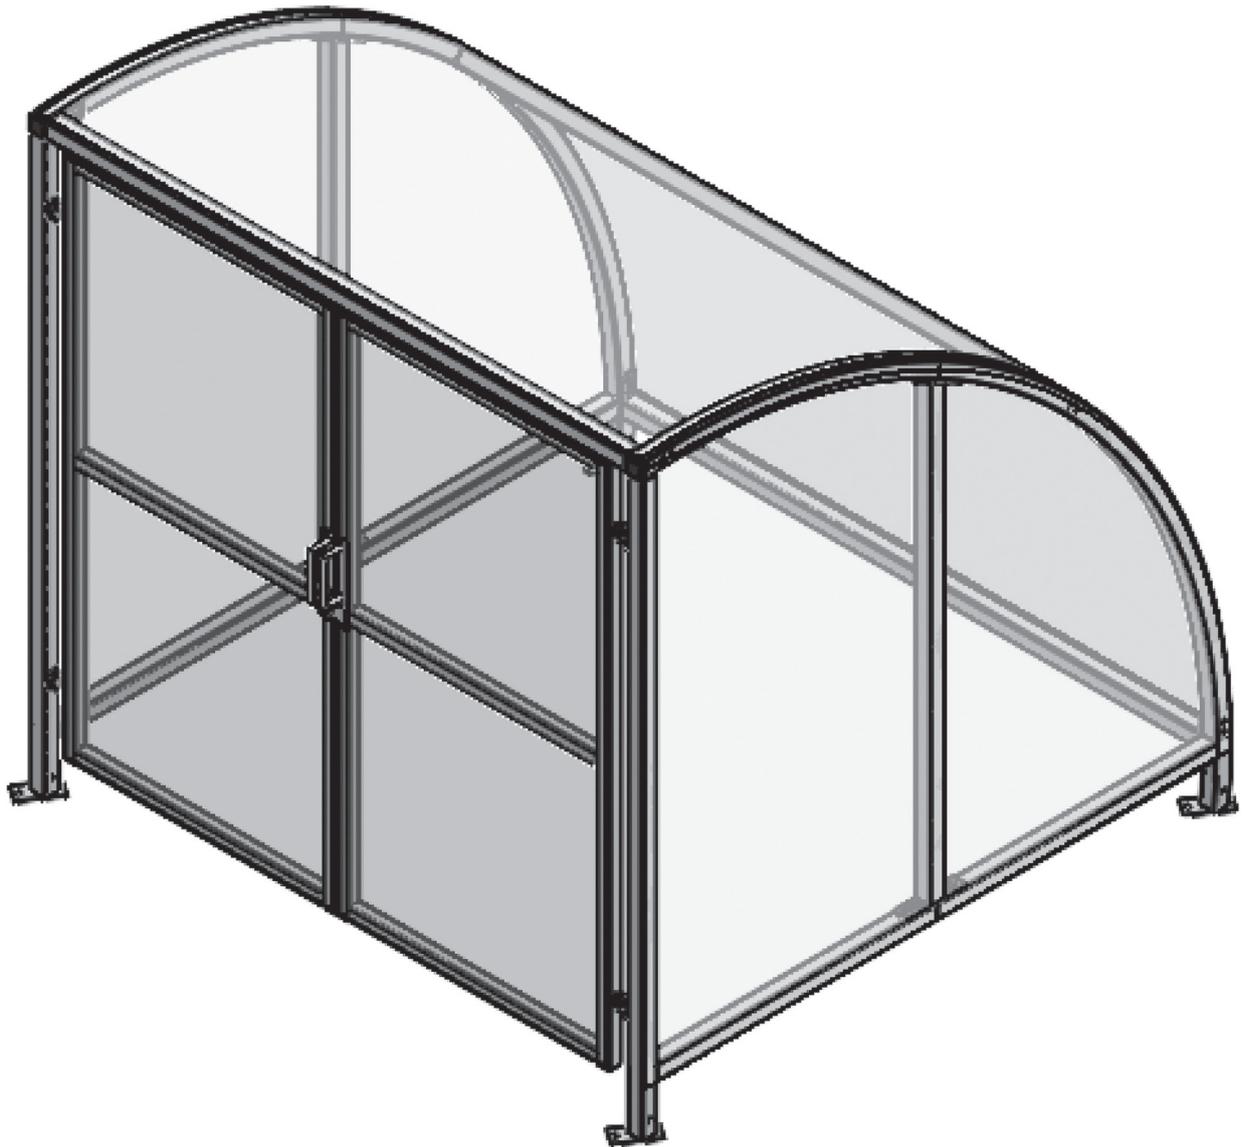

Health & Safety Information



2 people
required
for assembly

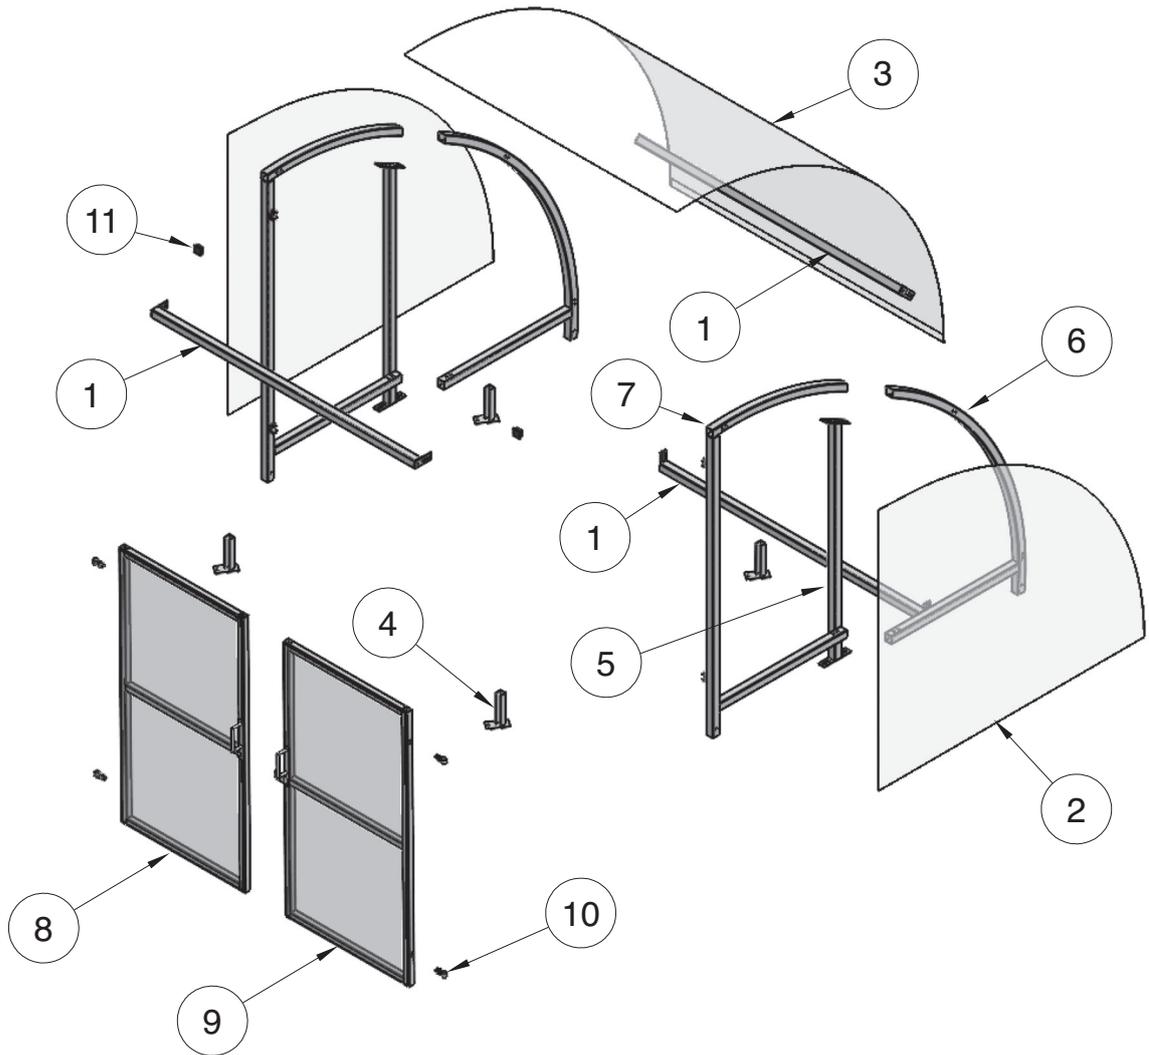

Tools Required			
	Drill / Screwdriver		Hacksaw
	Mallet		Hand Clamps
			17mm Spanner

Parts List

Item No	Part Code	Description	Dimensions (mm)	Dimensions (inches)	Image	Qty
		Instructions				1
1	CTB	Central Tie Bar	1950	76.8		3
2	SP	Side Panel	1815 x 1965	71.5 x 77.4		2
3	RP1	Outside Roof Panel	3050 x 2010	120.1 x 79.1		1
4	KIF	Internal Foot	155	6.1		4
5	KST	Straight Tie Assembly	1535	60.4		2
6	KRF	Rear Frame Assembly	2115 x 985	83.3 x 38.8		2
7	KFF	Front Frame Assy w/Hinge	1975 x 990	77.7 x 39		2
8	LHD	Left Hand Door	915 x 1770	36 x 70		1
9	RHD	Right Hand Door	915 x 1770	36 x 70		1
10	SGH	Gate Hinge	24 x 73	1 x 2.9		4
11	EC50	Plastic End Cap	50 x 50	2 x 2		2


Fittings

12	MB1	M10 x 70 Bolt	10 x 70	0.4 x 2.8		4
13	MB2	M10 x 20 Bolt	10 x 20	0.4 x 0.8		28
14	N1	M10 Nut				4
15	W1	M10 Washer				36
16	W2	M12 Washer				4
17	T25	Tek Screw	25	1		158
18	BC	Black Caps				40
19	BTANC M10100	M10 x 100 Concrete Bolt	10x 100	0.4 x 3.9		4

Ground Anchor & Overall Size

Suggested size for concrete base: 200mm / 7.87in oversized (on all four sides)

■ mm
■ inches



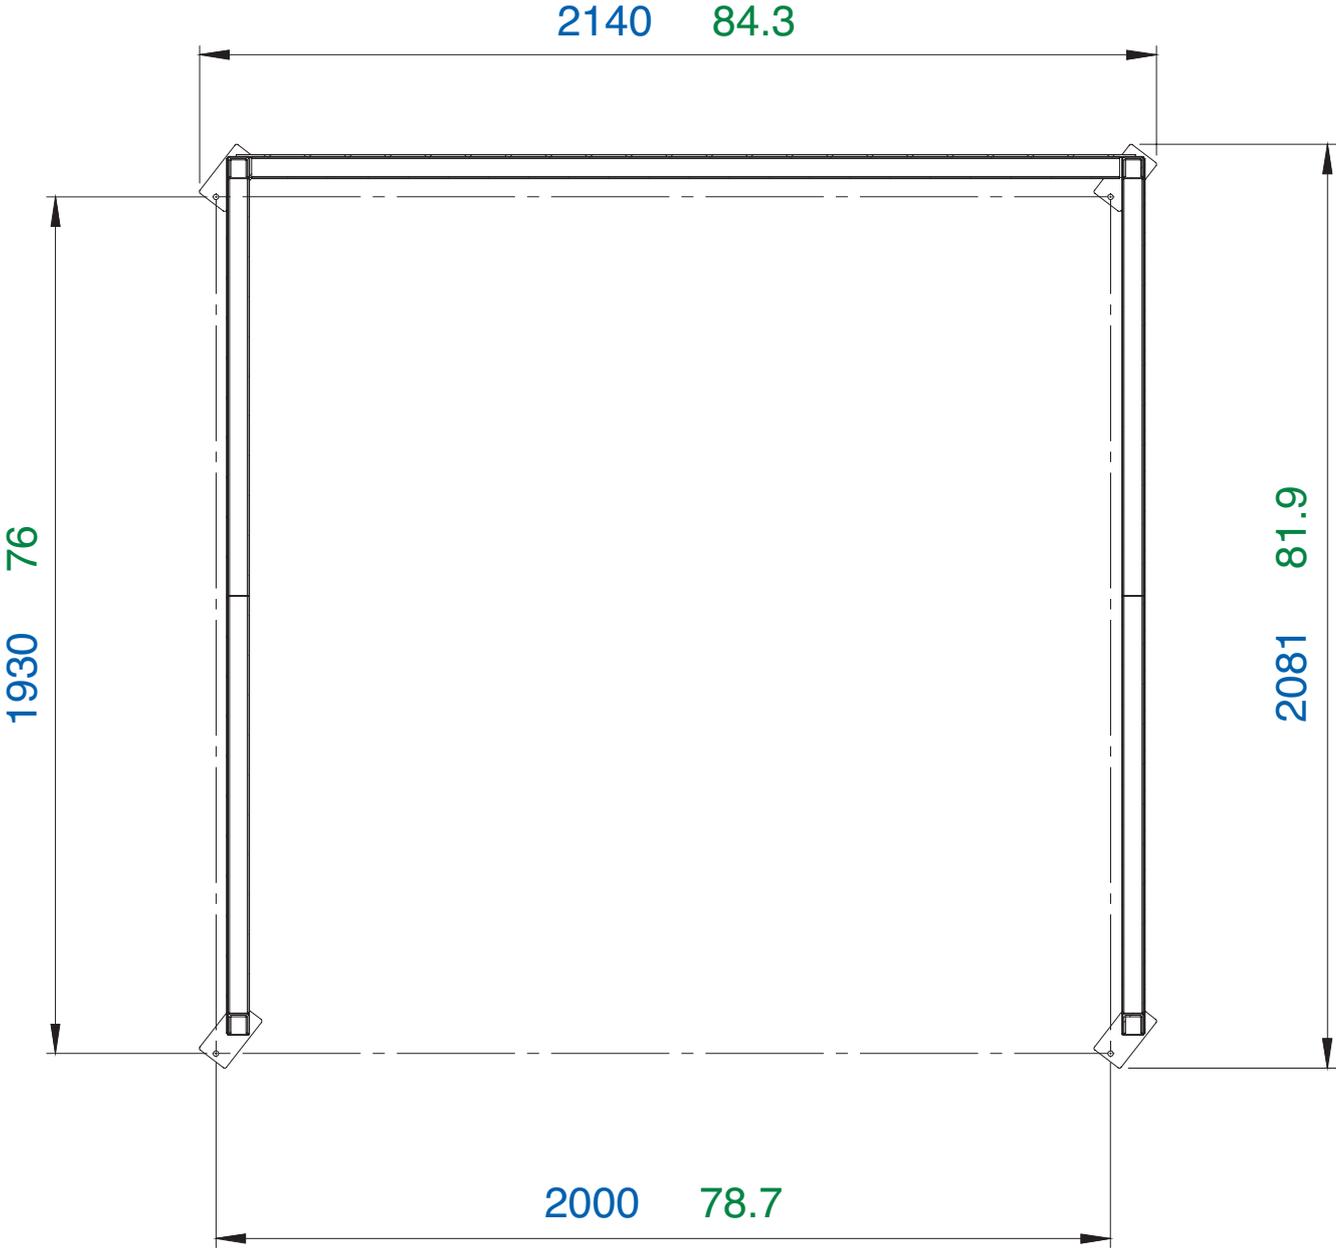


Stage 1

Assemble Side Frames

You will need

Item No	Part No	Description	Qty
5	KST	Straight Tie Assembly	2
6	KRF	Rear Frame Assembly	2
7	KFF	Front Frame Assy w/Hinge	2
13	MB3	M10 x 20 Bolt	16
15	W1	M10 Washer	16

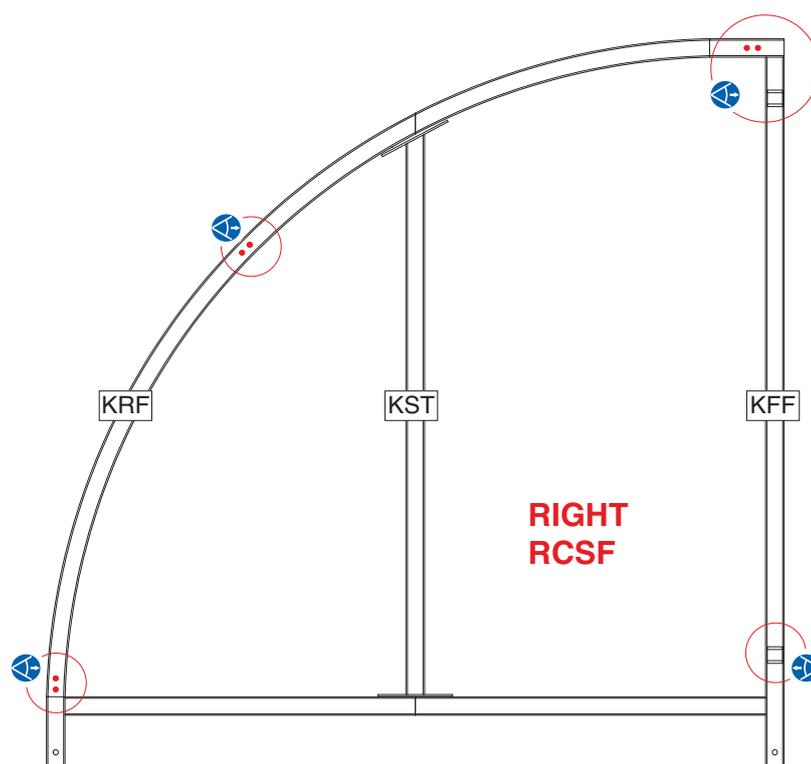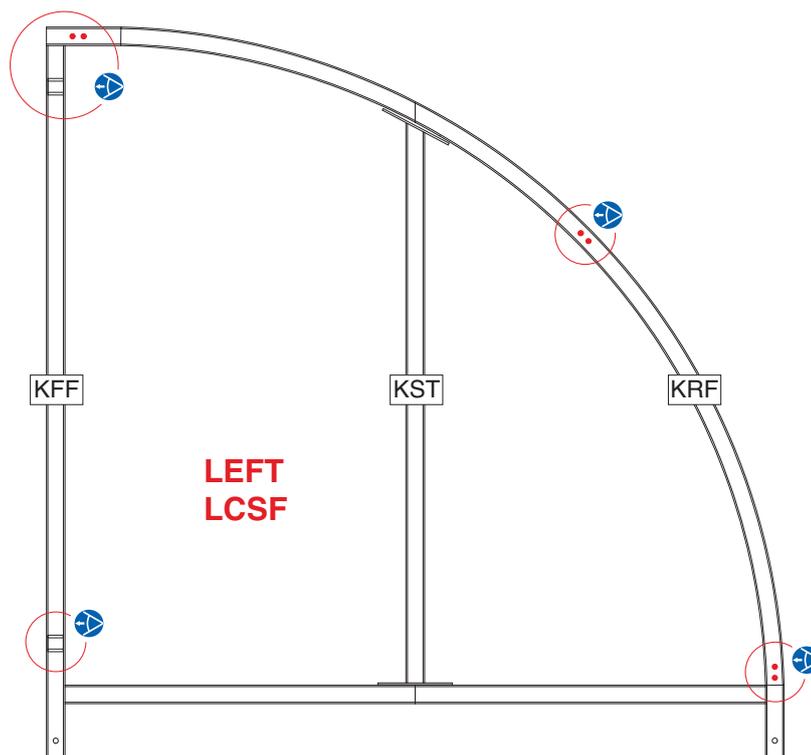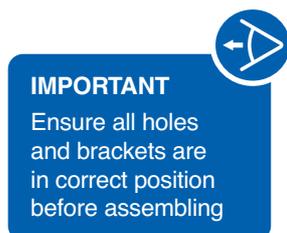


Stage 2

Attach Tie Bars to Left Frame

You will need


Item No	Part No	Description	Qty
	LCSF	Left Complete Side Frame	1
1	CTB	Central Tie Bar	3
13	MB3	M10 x 20 Bolt	6
15	W1	M10 Washer	6

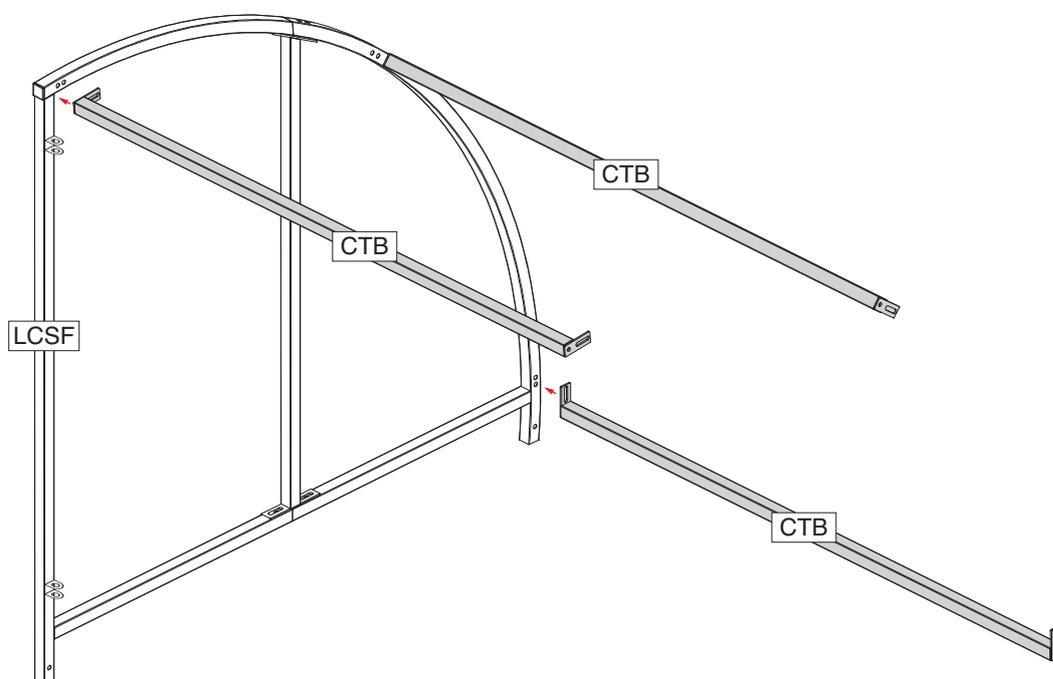

Stage 3 Attach Right Frame

You will need

Item No	Part No	Description	Qty
	RCSF	Right Complete Side Frame	1
13	MB2	M10 x 20 Bolt	6
15	W1	M10 Washer	6

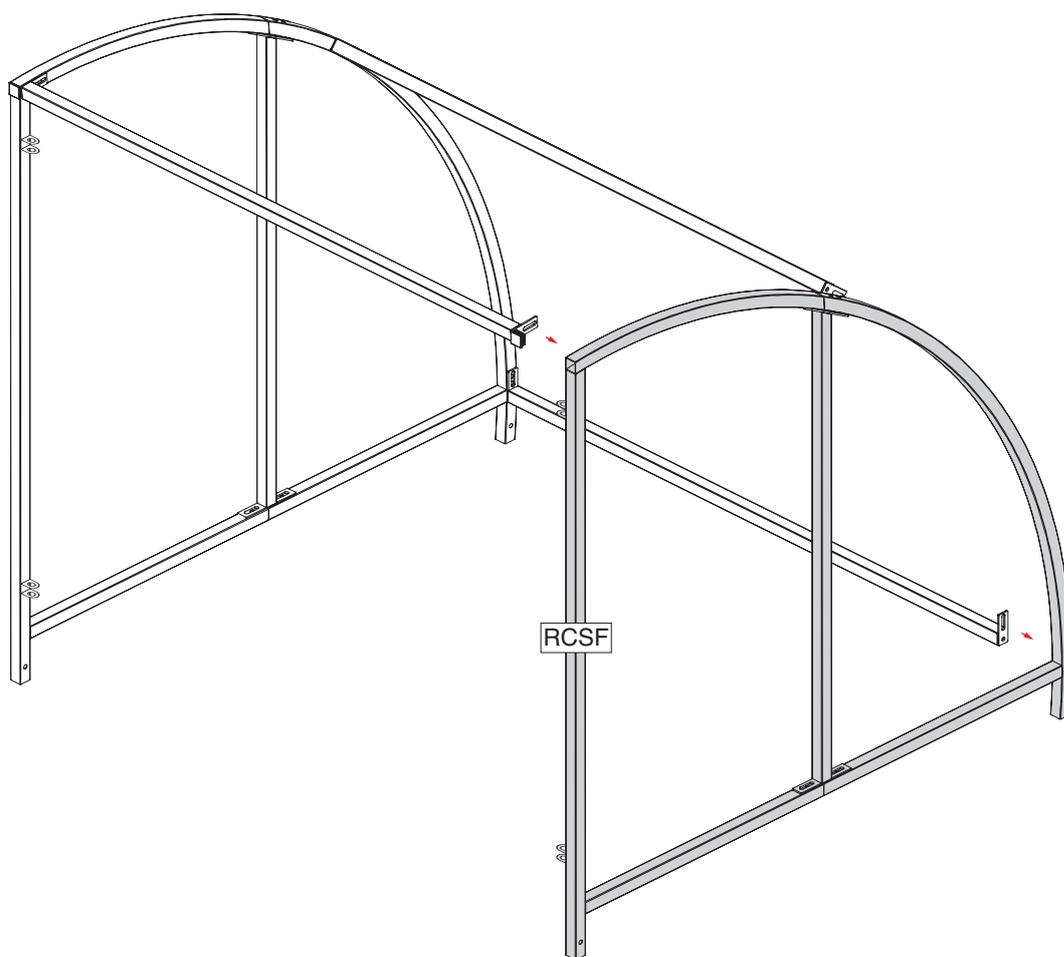


Stage 4 Affix Roof Panel & End Caps

You will need


Item No	Part No	Description	Qty
2	SP	Side Panel	2
3	RP1	Roof Panel	1
11	EC50	End Cap	2
17	T25	Tek Screw	158

	Drill / Screwdriver
	Clamps

 Hold panel to frame using clamps before screwing into place

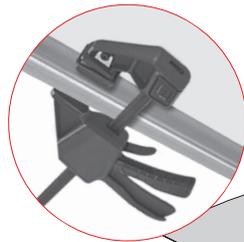

 Offer panel to the shelter as shown and secure in place using **T25** Tek Screws. Recommended 1 screw every 200mm / 8"

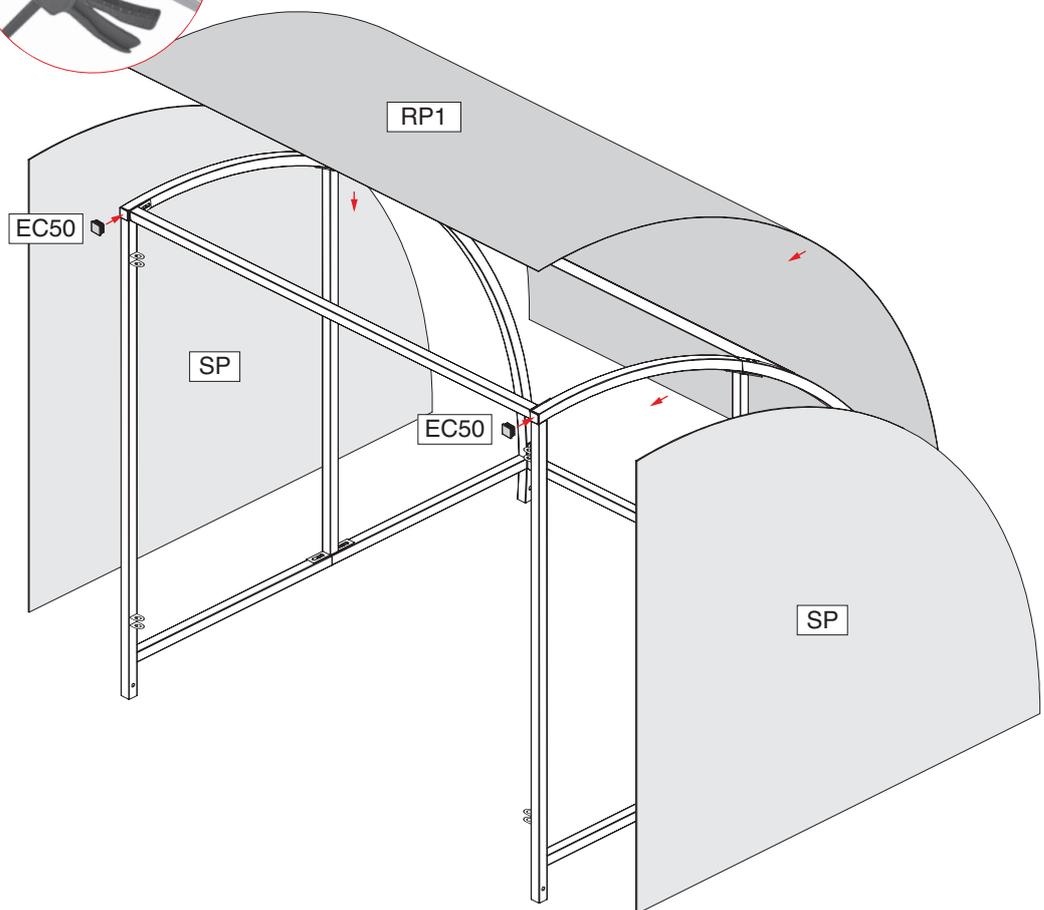

PLEASE NOTE  Always clean off swarf when fixing the roof panels to avoid rust stains


Stage 5 Affix Feet Brackets

You will need


Item No	Part No	Description	Qty
4	KIF	Internal Foot	4
12	MB1	M10 x 70 Bolt	4
14	N1	M10 Nut	4
15	W1	M10 Washer	4
16	W2	M12 Washer	4
15	BC	Black Caps	40
19	BTANCM10100	Concrete Bolt	4

	Drill / Screwdriver
	17mm Spanner

 Use at least 2 people to move shelter to desired location

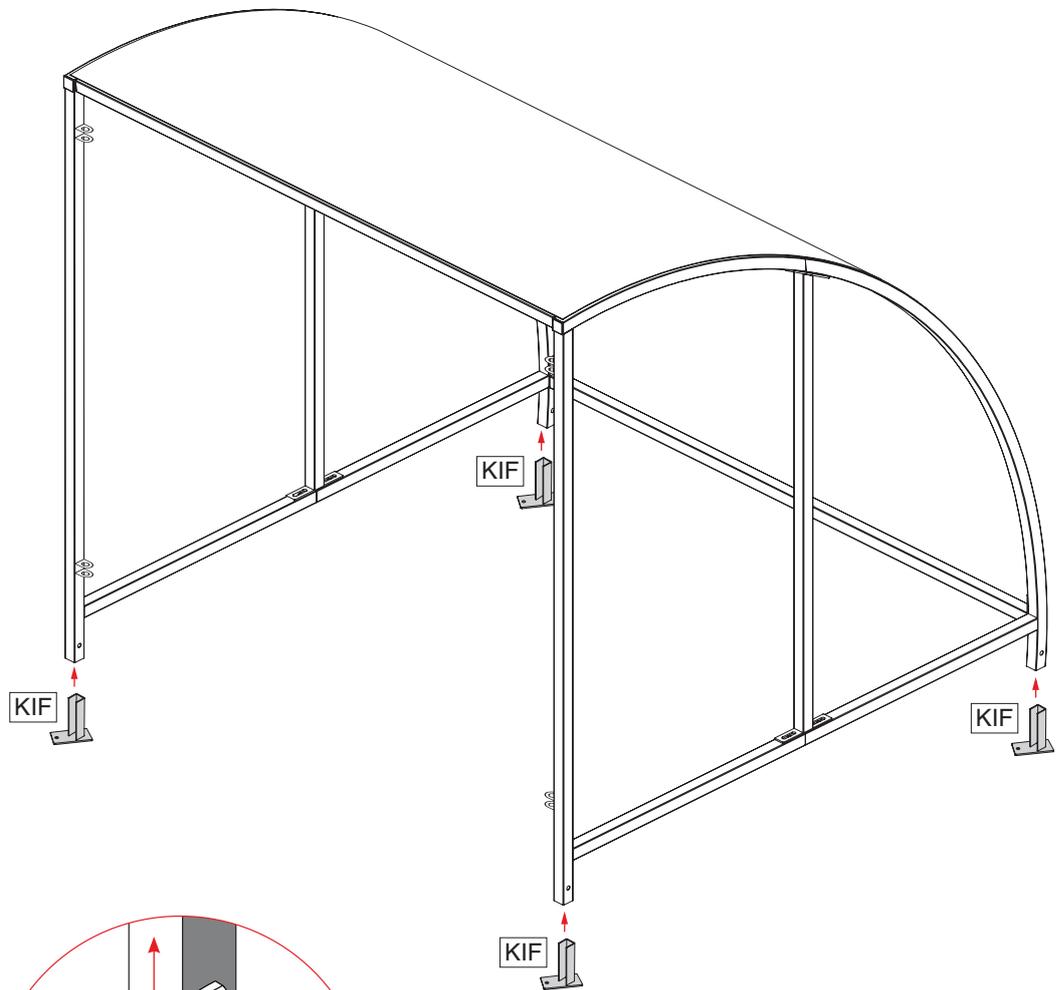

 Move shelter to desired position and place **KIF** Foot into each leg. Adjust the shelter until level then drill through the foot and secure with **MB1** Bolts.

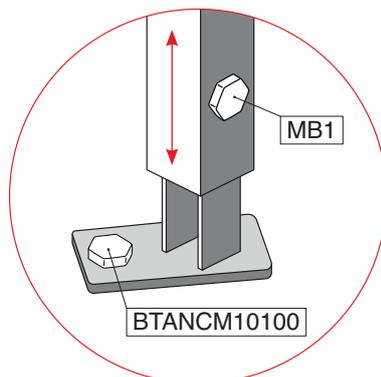


Stage 6



Attach Doors

You will need

Item No	Part No	Description	Qty
8	LHD	Left Hand Door	1
9	RHD	Right Hand Door	1
10	SGH	Gate Hinge	4

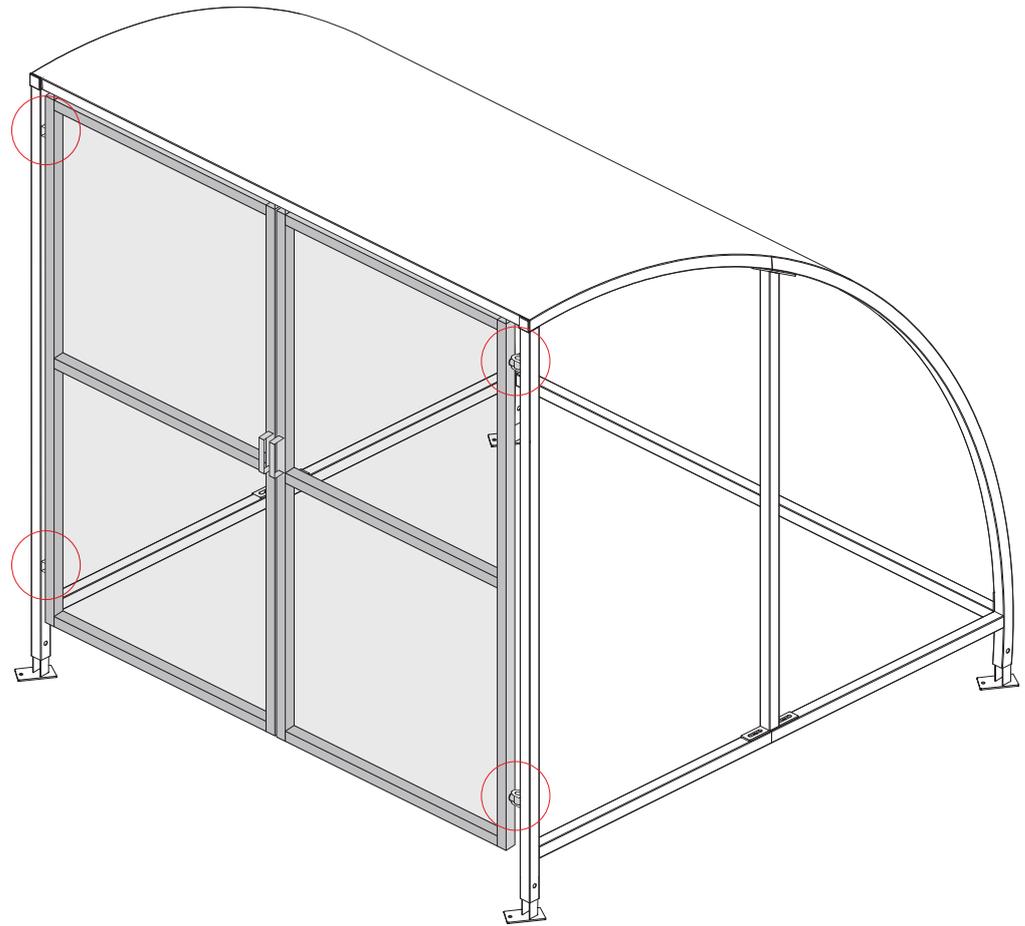

! Screw **SGH** Gate Hinge into the boss on the **LHG/RHG** Doors. Place the hinge into the brackets on the **LCSF/RCSF** Frames pushing **Pin** through the bracket hole using the **Nut** to hold in place. The doors can be adjusted by turning the **Boss Nut** accordingly.

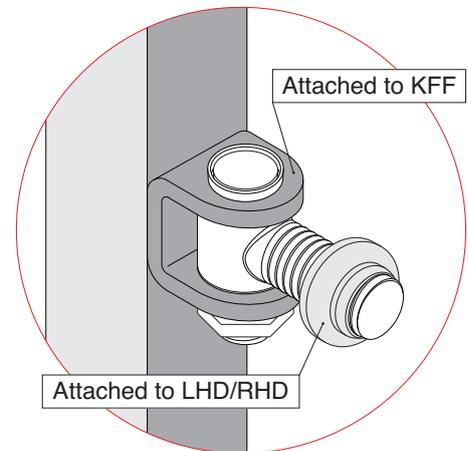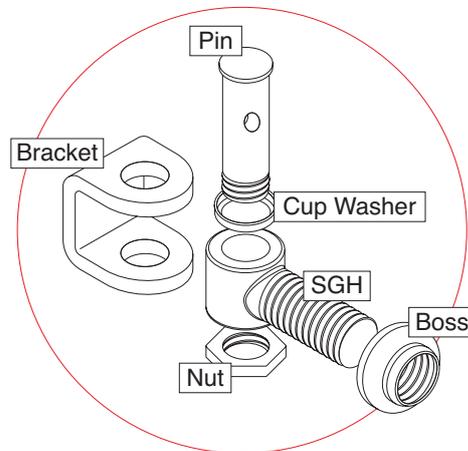

! Finally, fit **BC** Black Caps on all exposed nuts and bolts

Thank you for purchasing this product

Maintenance

**To ensure your products give you
many years of use we recommend that you:**

- **Clean panels regularly with soapy water**
- **Ensure all fittings are tight (for example after a big storm)**
- **Touch up any exposed metal should it get scratched**