


# Assembly Instructions

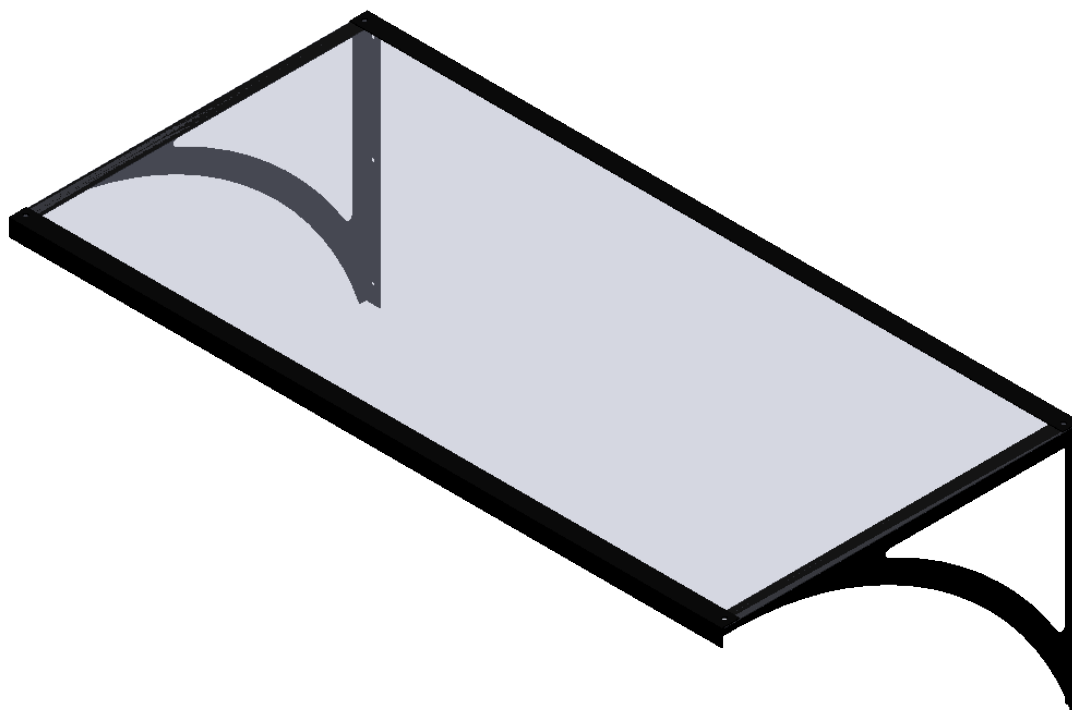

Email : [Sales@nobutts.co.uk](mailto:Sales@nobutts.co.uk)


Web : [www.nobutts.co.uk](http://www.nobutts.co.uk)

Tel : 0800 1777 052

Product Code: CSM01

Doc. No.: CSM01-01-090616-UK

## EXPLODED VIEW & PARTS LIST

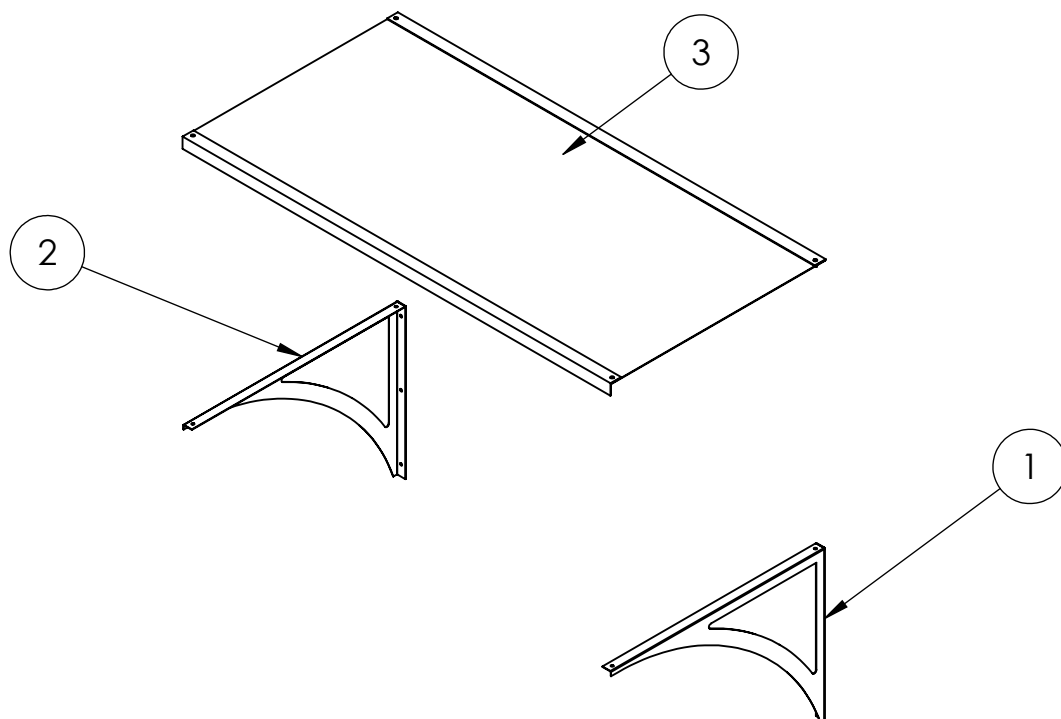

ITEM NO.	PART NO.	DESCRIPTION	DIMENSION	QTY.
1	RSF	RH side frame	1000 x 700	1
2	LSF	LH side frame	1000 x 700	1
3	RA	Roof Assembly	2000 x 1000	1


FITTINGS		
TYPE	Image	QTY.
M8 x 20 Bolt		4
M8 Washer		8
M8 Nut		4

### Tools required for assembly:




13mm Spanners x2

**Step 1** Attach the two side frames (RSF & LSF) to the Roof assembly (RA)

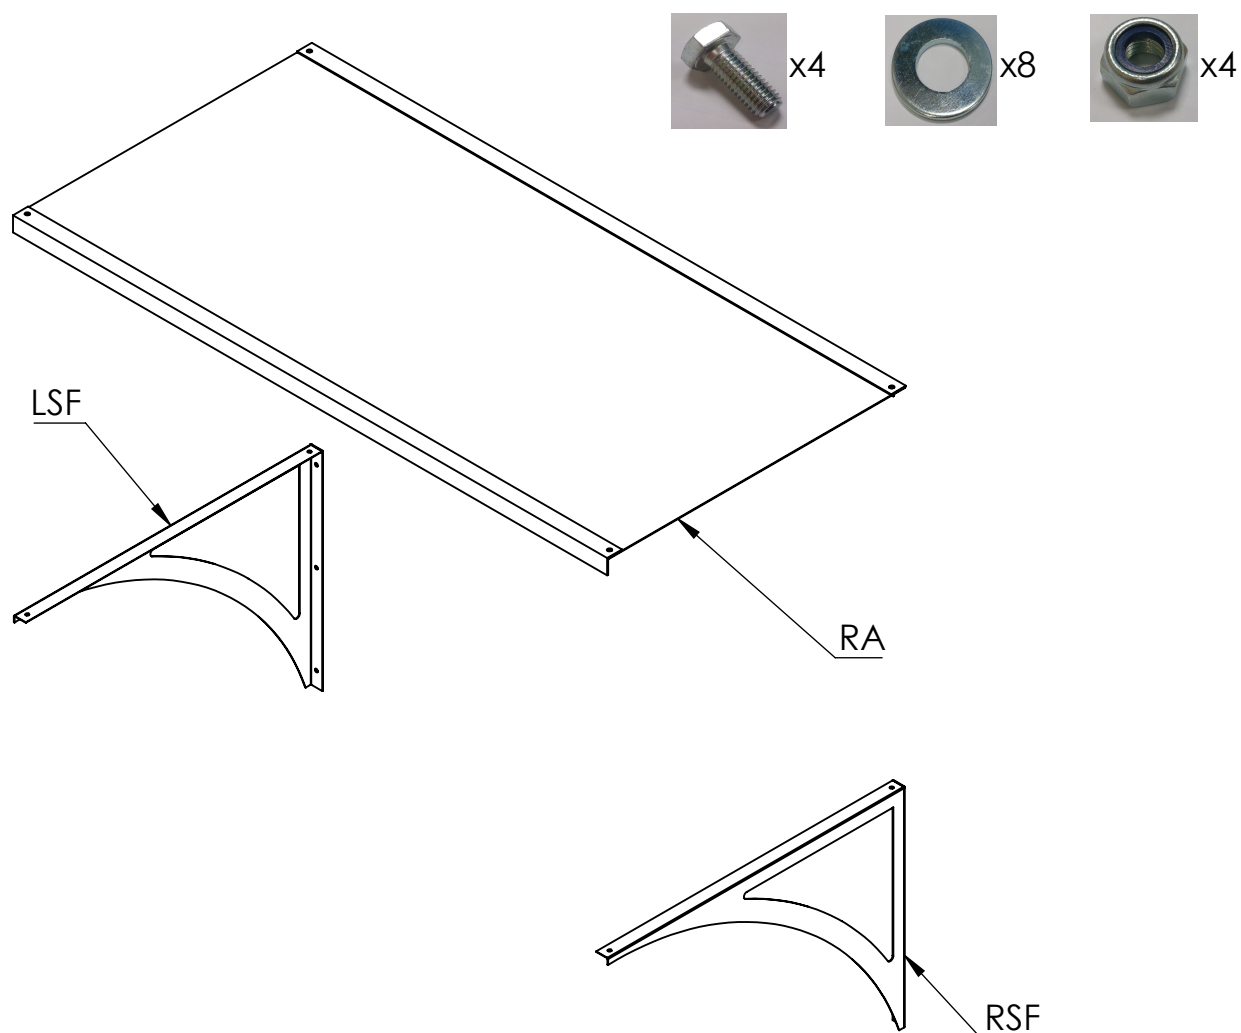

**Step 2** Another person will be required to attach the canopy to the wall. It helps to hold and level the canopy in the desired position before marking and drilling the holes in the wall.

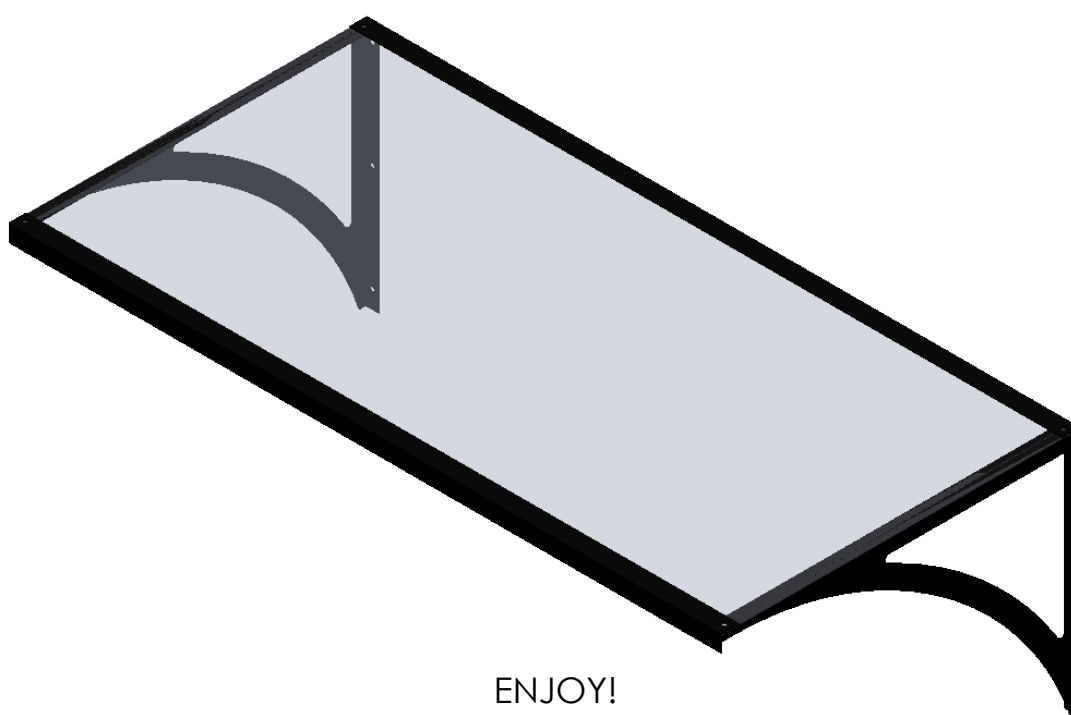

# THANK YOU FOR PURCHASING THIS PRODUCT

## **MAINTENANCE:**

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Inspect all fittings periodically (particularly after a big storm)
- Touch up any exposed metal should it get scratched

## **CONTACT DETAILS:**

Email : Sales@nobutts.co.uk

Web : www.nobutts.co.uk

Tel : 0800 1777 052

NBB, Unit 5, 145 Sterte Road, Poole, Dorset BH15 2AF

<b>All Parts and Fixings checked by:</b>	
Print Name:	Signature