


Assembly Instructions

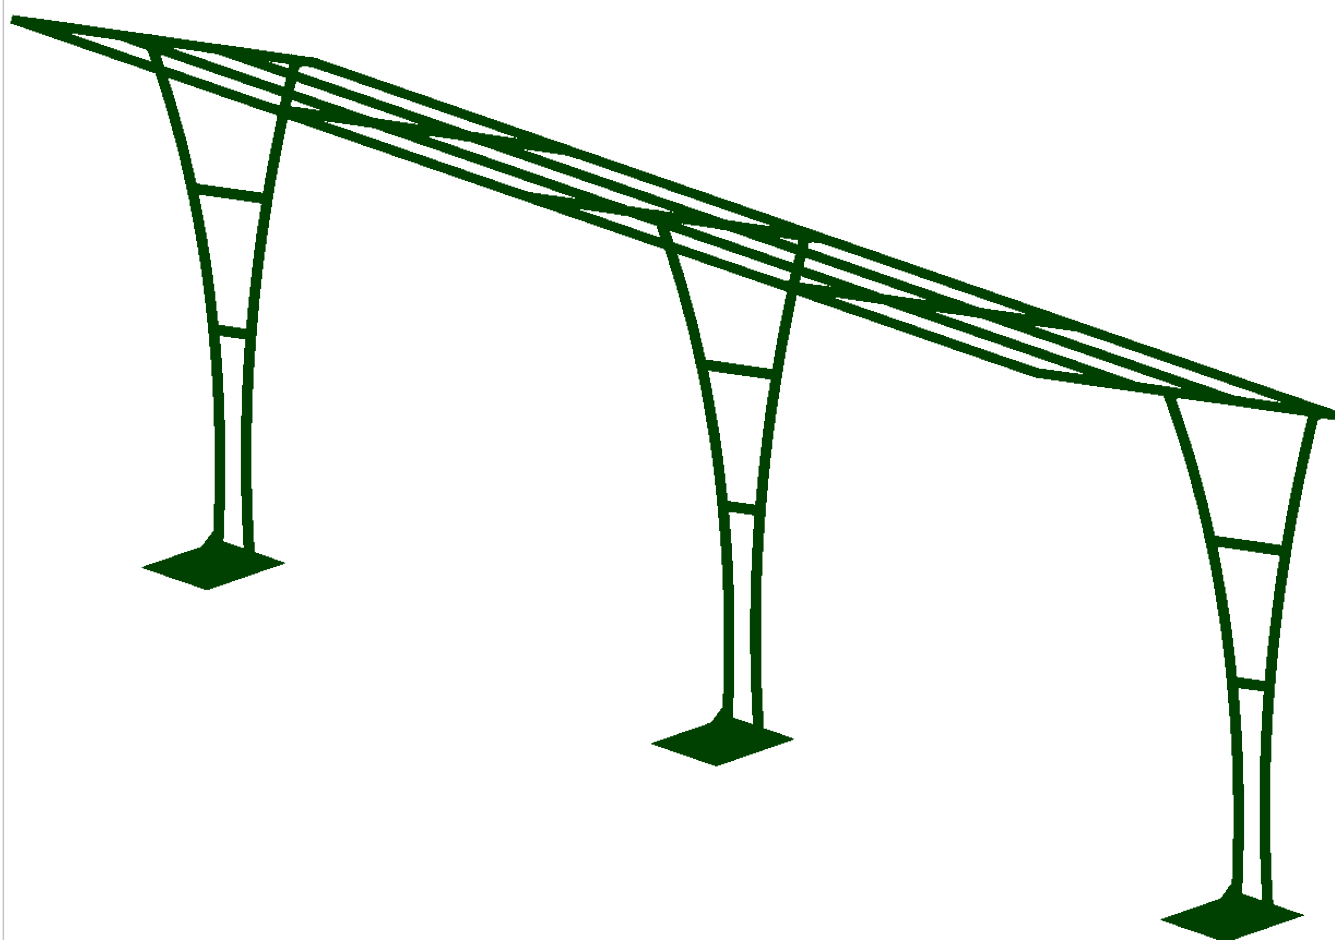


Email : Sales@nobutts.co.uk
Web : www.nobutts.co.uk
Tel : 0800 1777 052

Shelter type: Peveril 8m

CVCS2ZC-02-27022017-UK

Exploded View

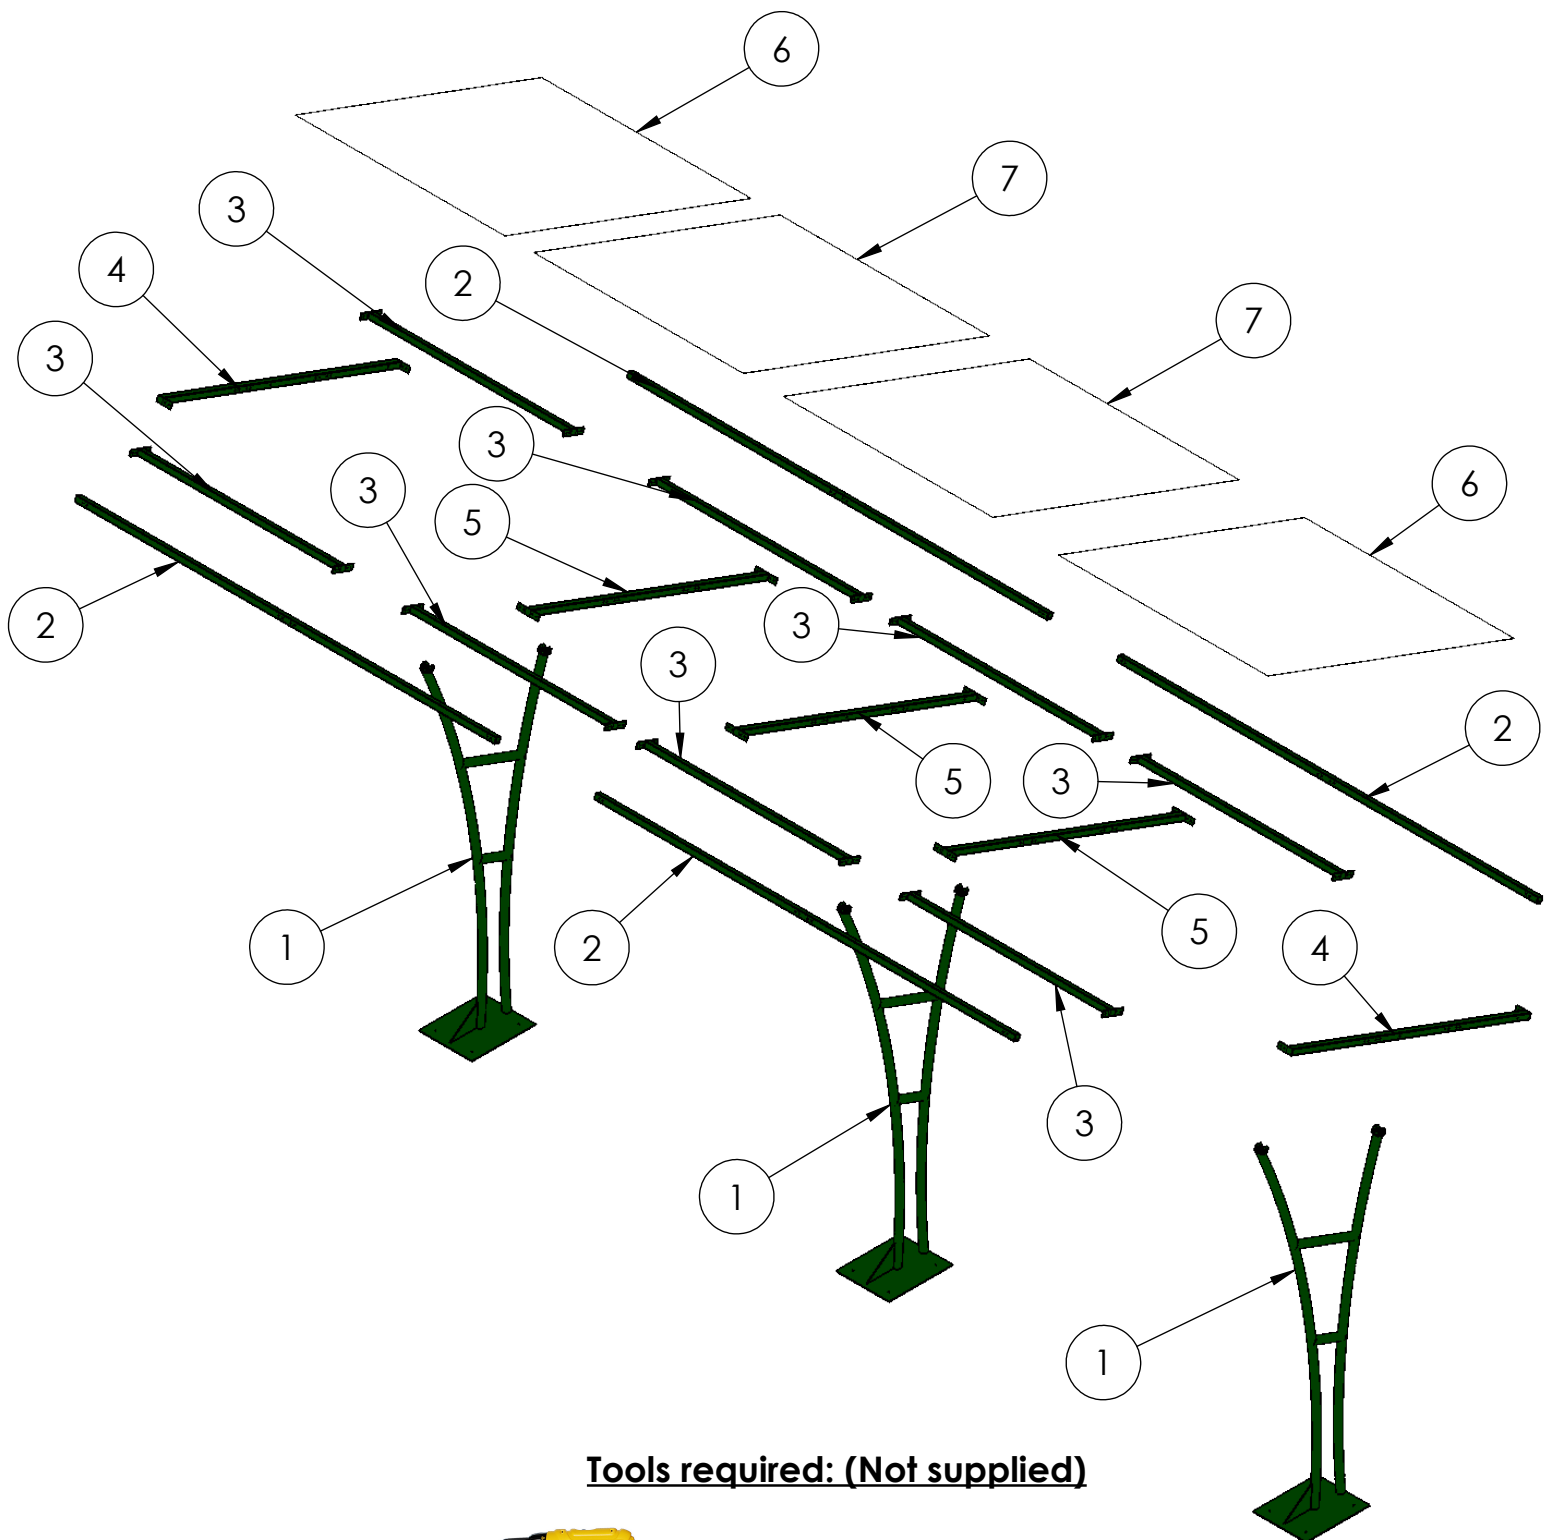

Tools required: (Not supplied)










Drill/Screwdriver



Socket set




PARTS LIST & FITTINGS

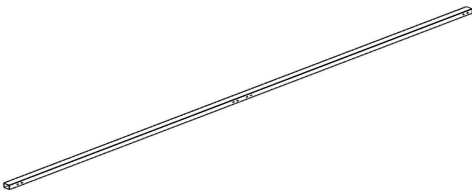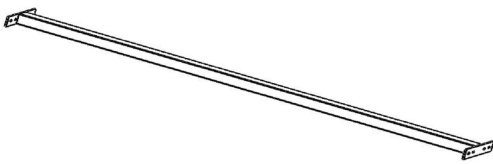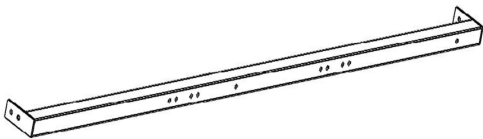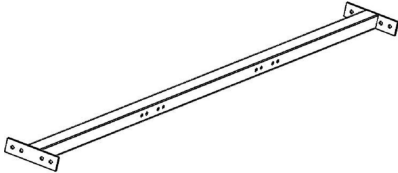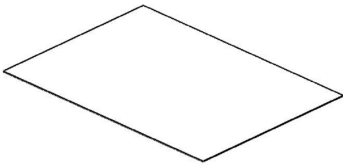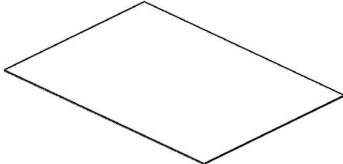ITEM NO.	PART NO.	DESCRIPTION	IMAGE	QTY.
1	PL1	Peveril Leg		3
2	FRB	Front / Rear Bar		4
3	CFB1	Central Frame Bar 1		8
4	EFB	End Frame Bar		2
5	CFB2	Central Frame Bar 2		3
6	RP	Roof Panel		2
7	CRP	Central Roof Panel		2


Fittings	M10 x 100 Anchor Bolt	M10 x 80 Hex head bolt	M10 Nuts	M10 Standard Washers	M12 Standard Washers	25mm Tech screws	M10 Plastic bolt caps
QTY.	12	78	78	156	12	180	168
Image							

Step 1 Attach Both EFB End Bars & CFB2 Central Tie Bar 2 to PL1 Pveril Legs.

2 people are recommended to fit this shelter.

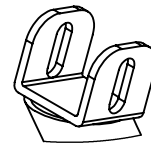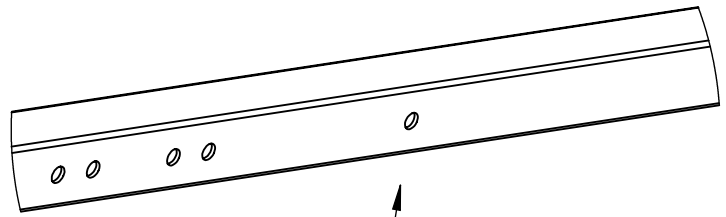
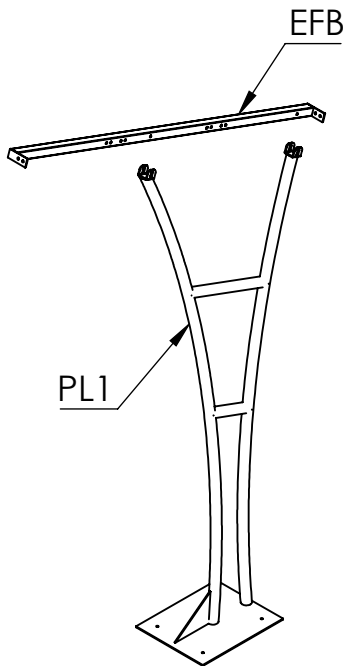


DETAIL A
SCALE 1 : 5

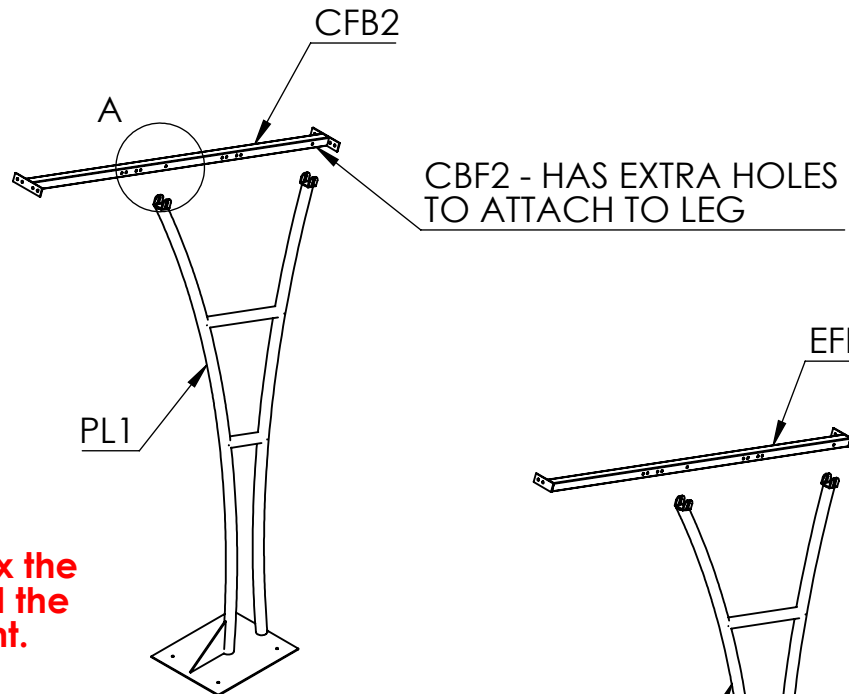


Note: Move legs to desired location (shelter must be sub surfaced 800mm minimum). Fix the central post in place and build the rest of the shelter from this point.


Recomended Base:

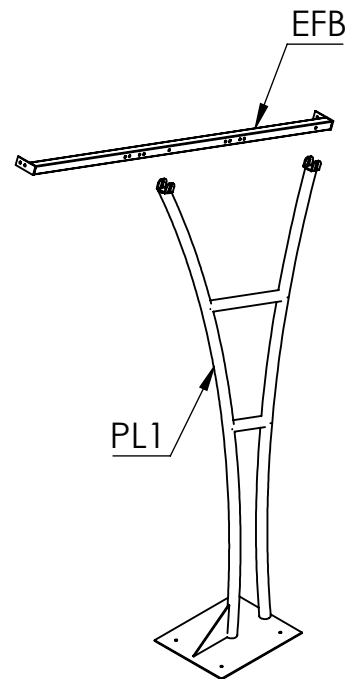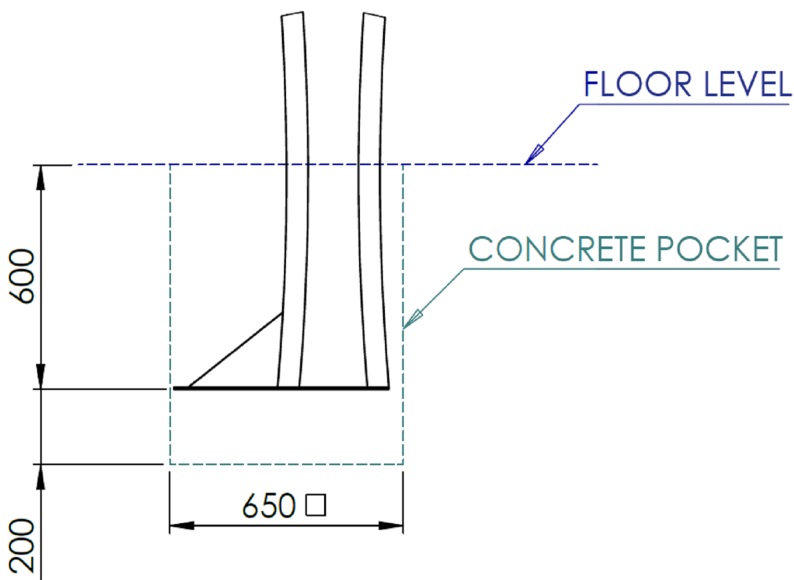

Step 2 Loosely fasten **FRB Front/Rear Bar** to **PL1Peveril legs**, this gives you the outside post positions.

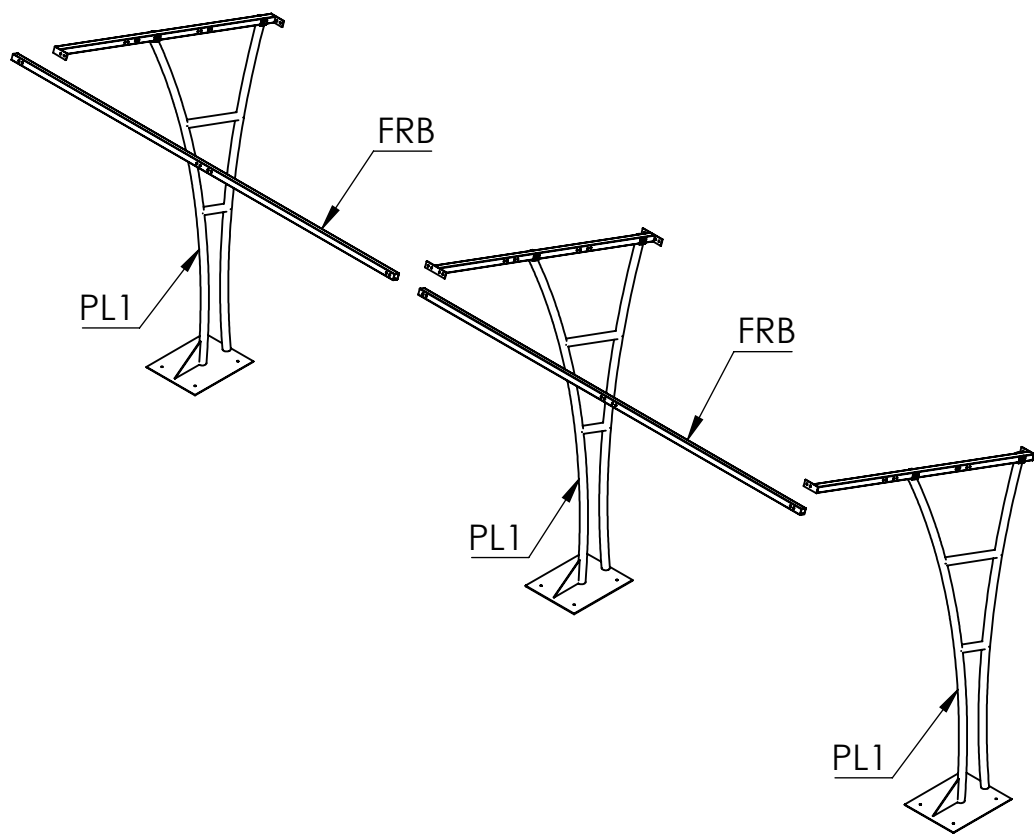


Step 3 Do the same for the rear of the shelter and secure the outside foot plates in position.

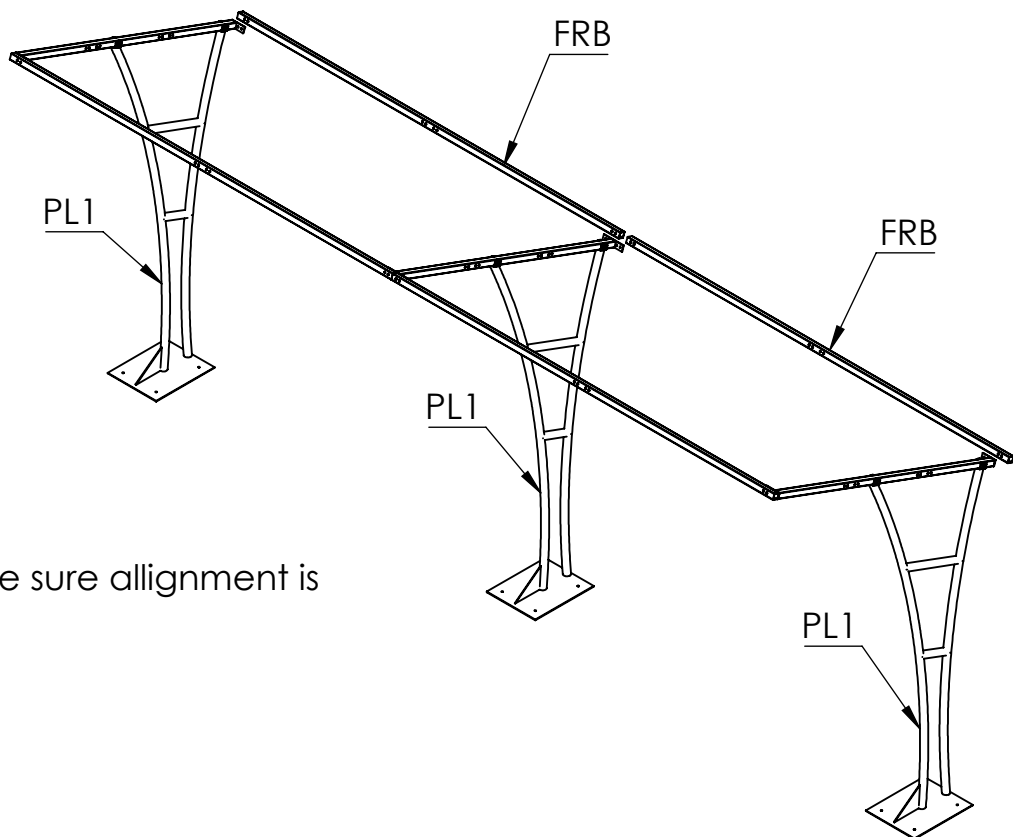


Note: Make sure allignment is correct

Step 4 Bolt the 2 remaining **CFB2 Central Frame Bar 2** to **EFB End Frame Bars**.

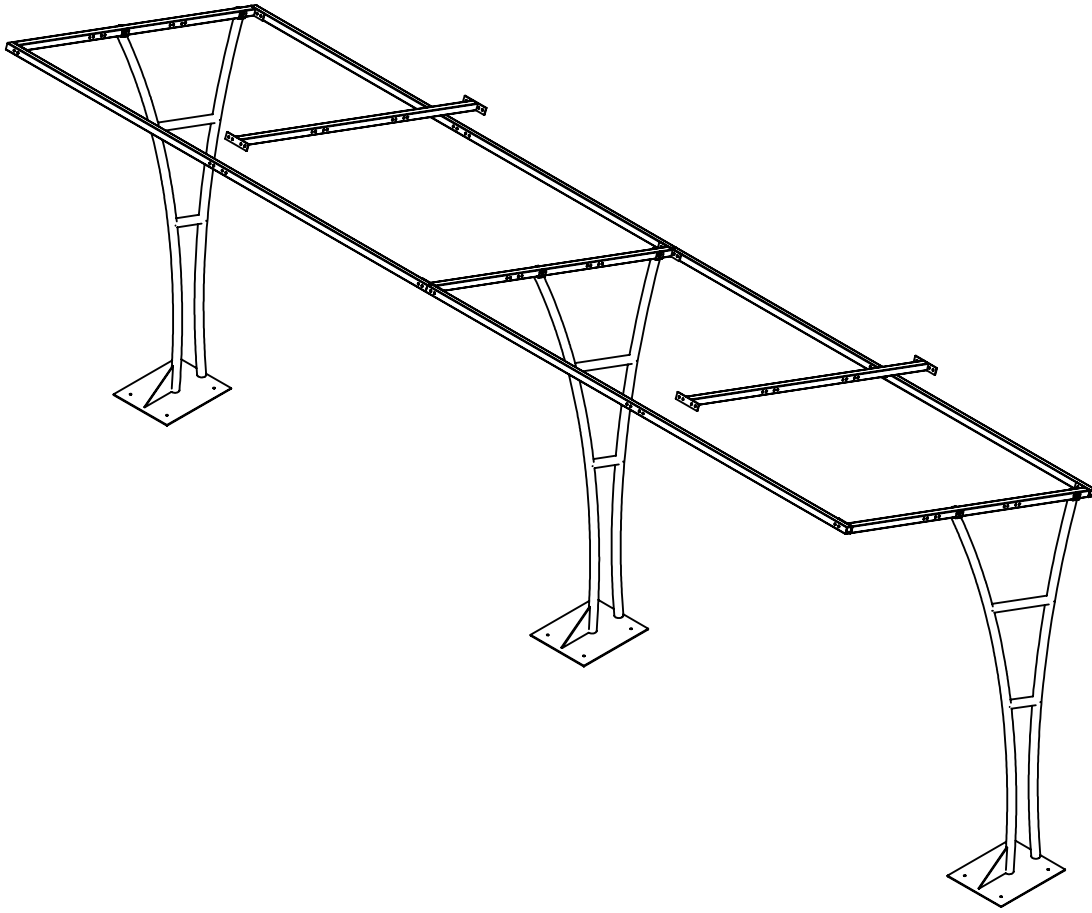


Step 5 Secure all **CFB1 Central Frame Bars** to **CBF2's Central Frame Bars 2** & **EFB End Frame Bars**

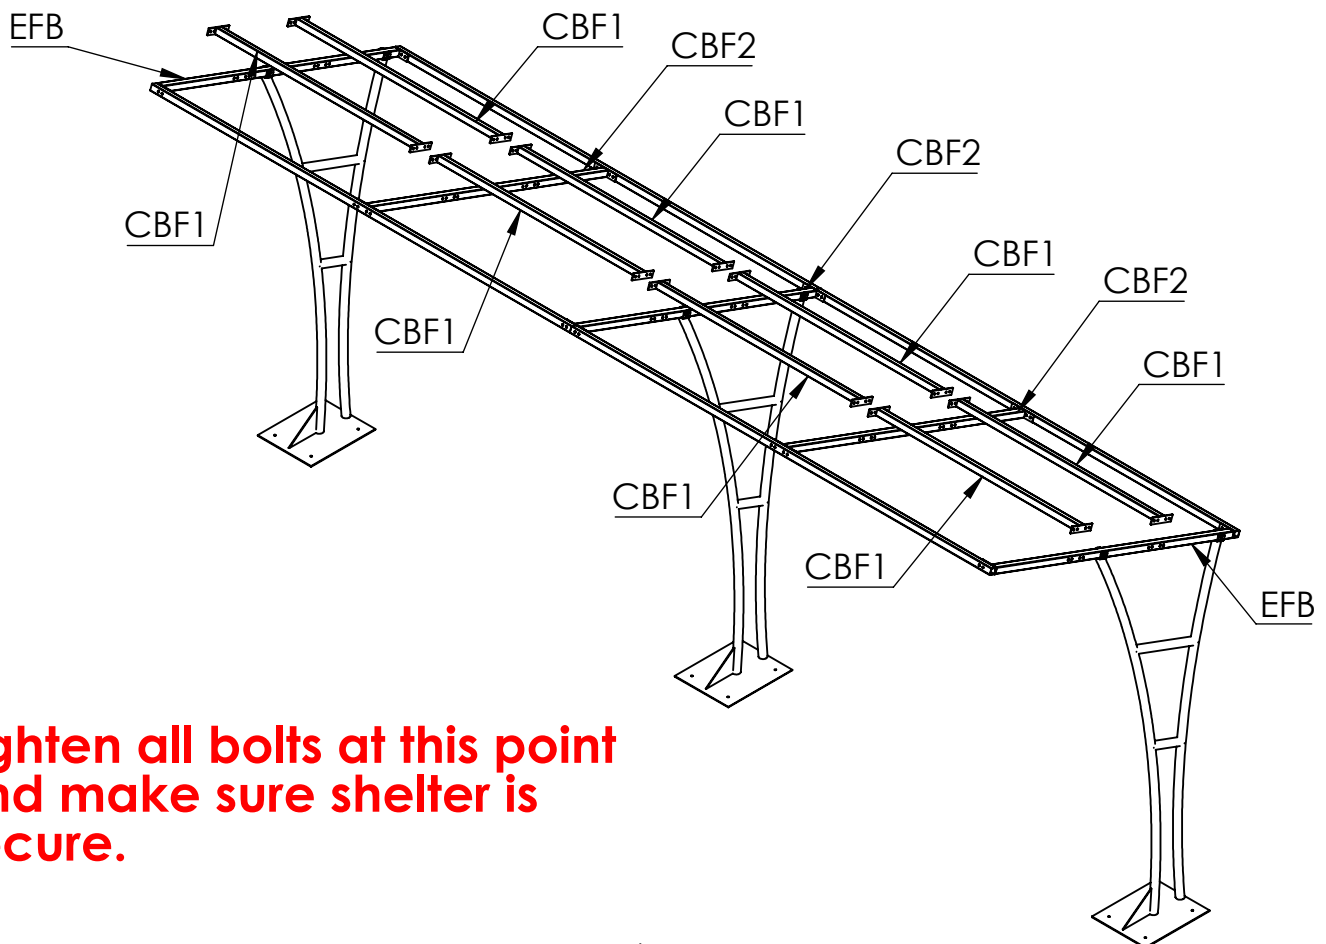

**Tighten all bolts at this point
and make sure shelter is
secure.**

Step 6

Screw the **RP** Roof Panel to the top of the frame with a 10mm gap to the edge of the frame on both sides and at the front/back. Space the central roof Panels (**CRP**) evenly between them. the gaps should all be as close as possible to 10mm.

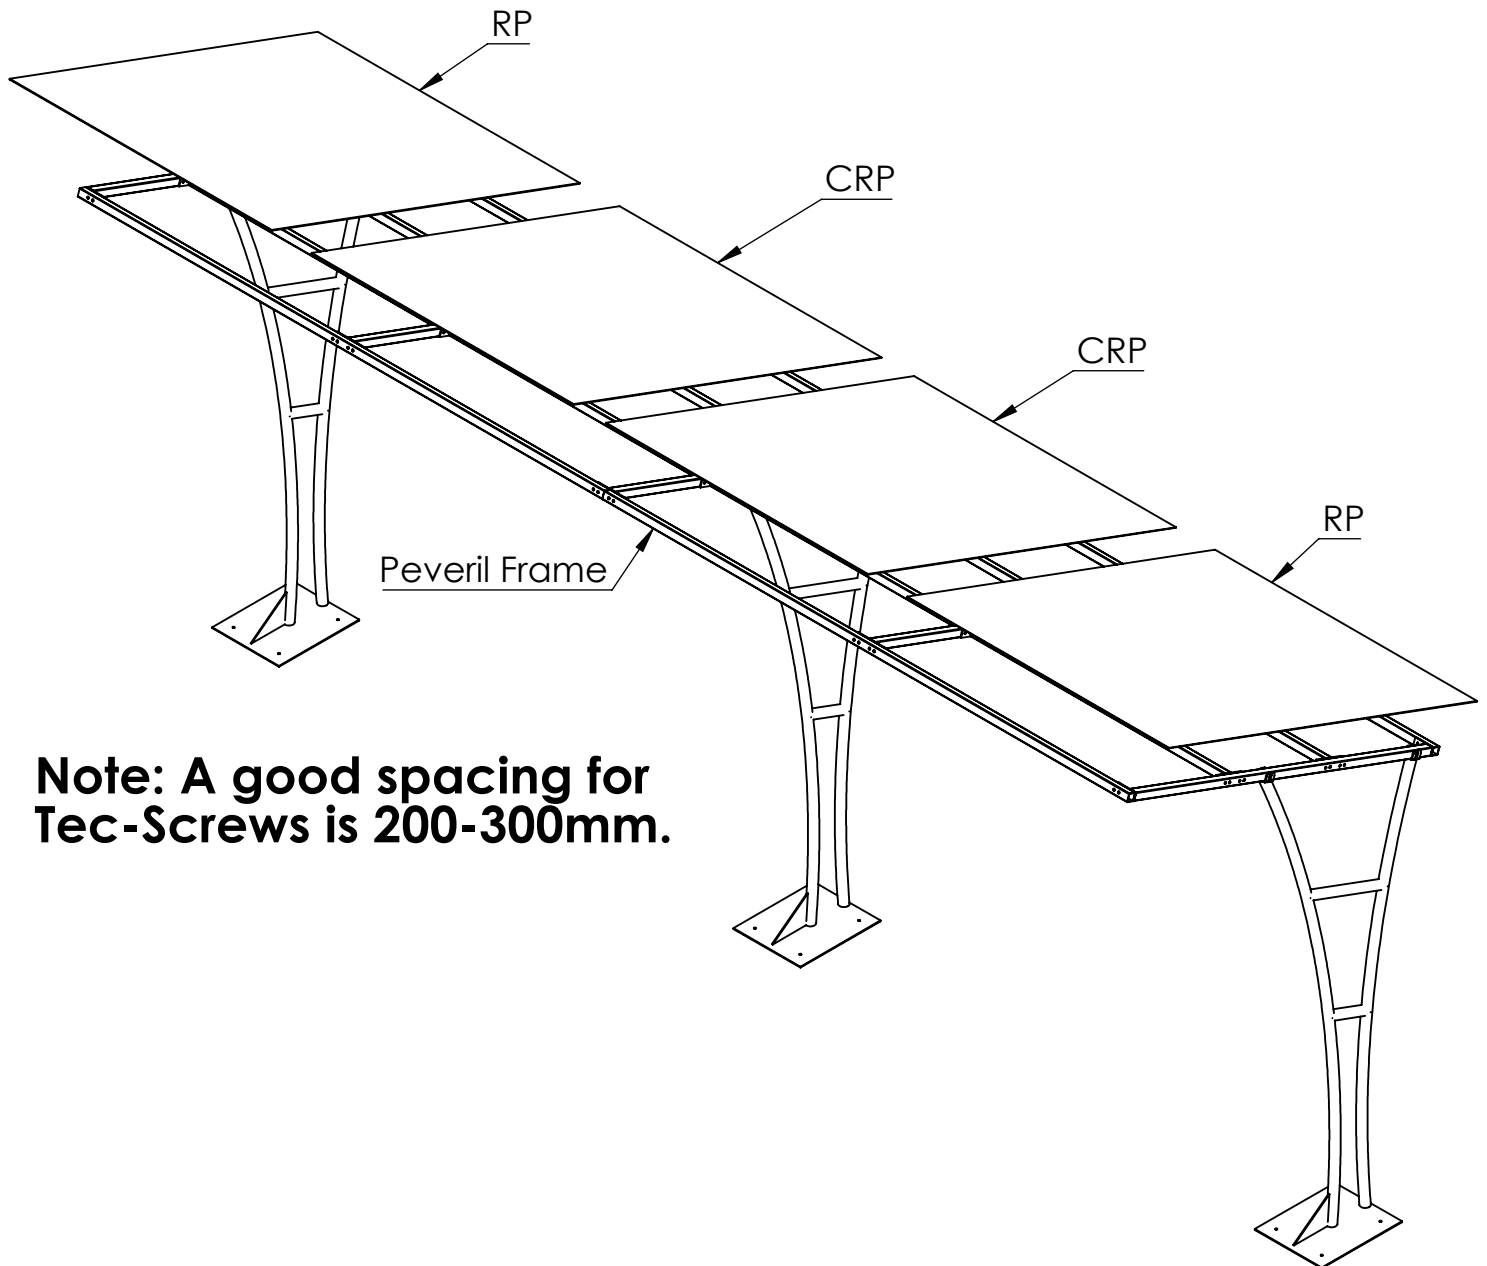

Note: A good spacing for Tec-Screws is 200-300mm.

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@nobutts.co.uk

Web : www.nobutts.co.uk

Tel : 0800 1777 052

NBB, Unit 5, 145 Sterte Road, Poole, Dorset BH15 2AF

All Parts and Fixings checked by:	
Print Name:	Signature: