


Assembly Instructions

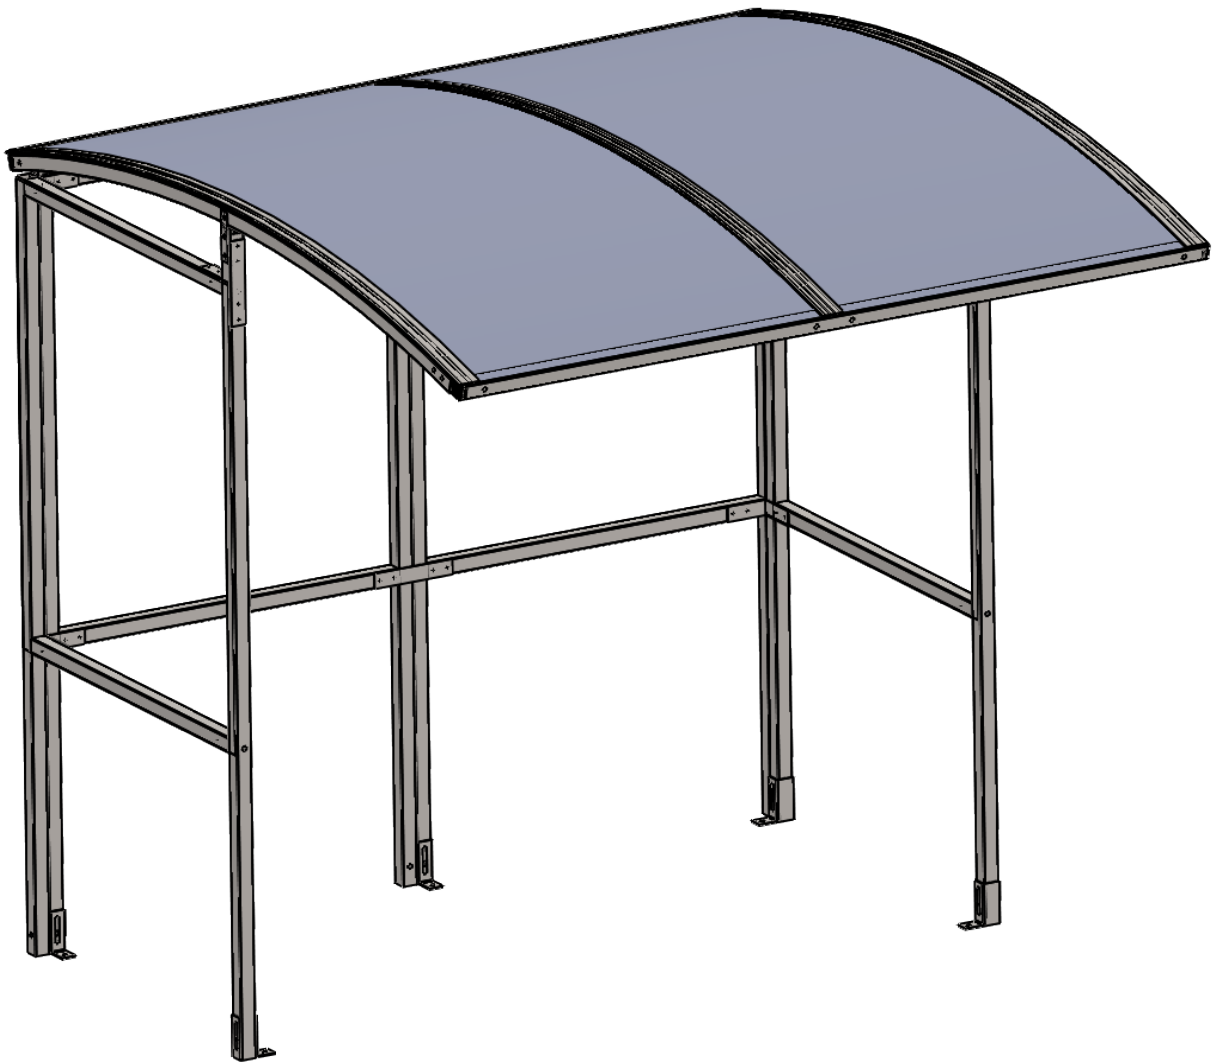

Email : Sales@shelters4less.com


Web : www.shelters4less.com

Tel : 0800 160 1002











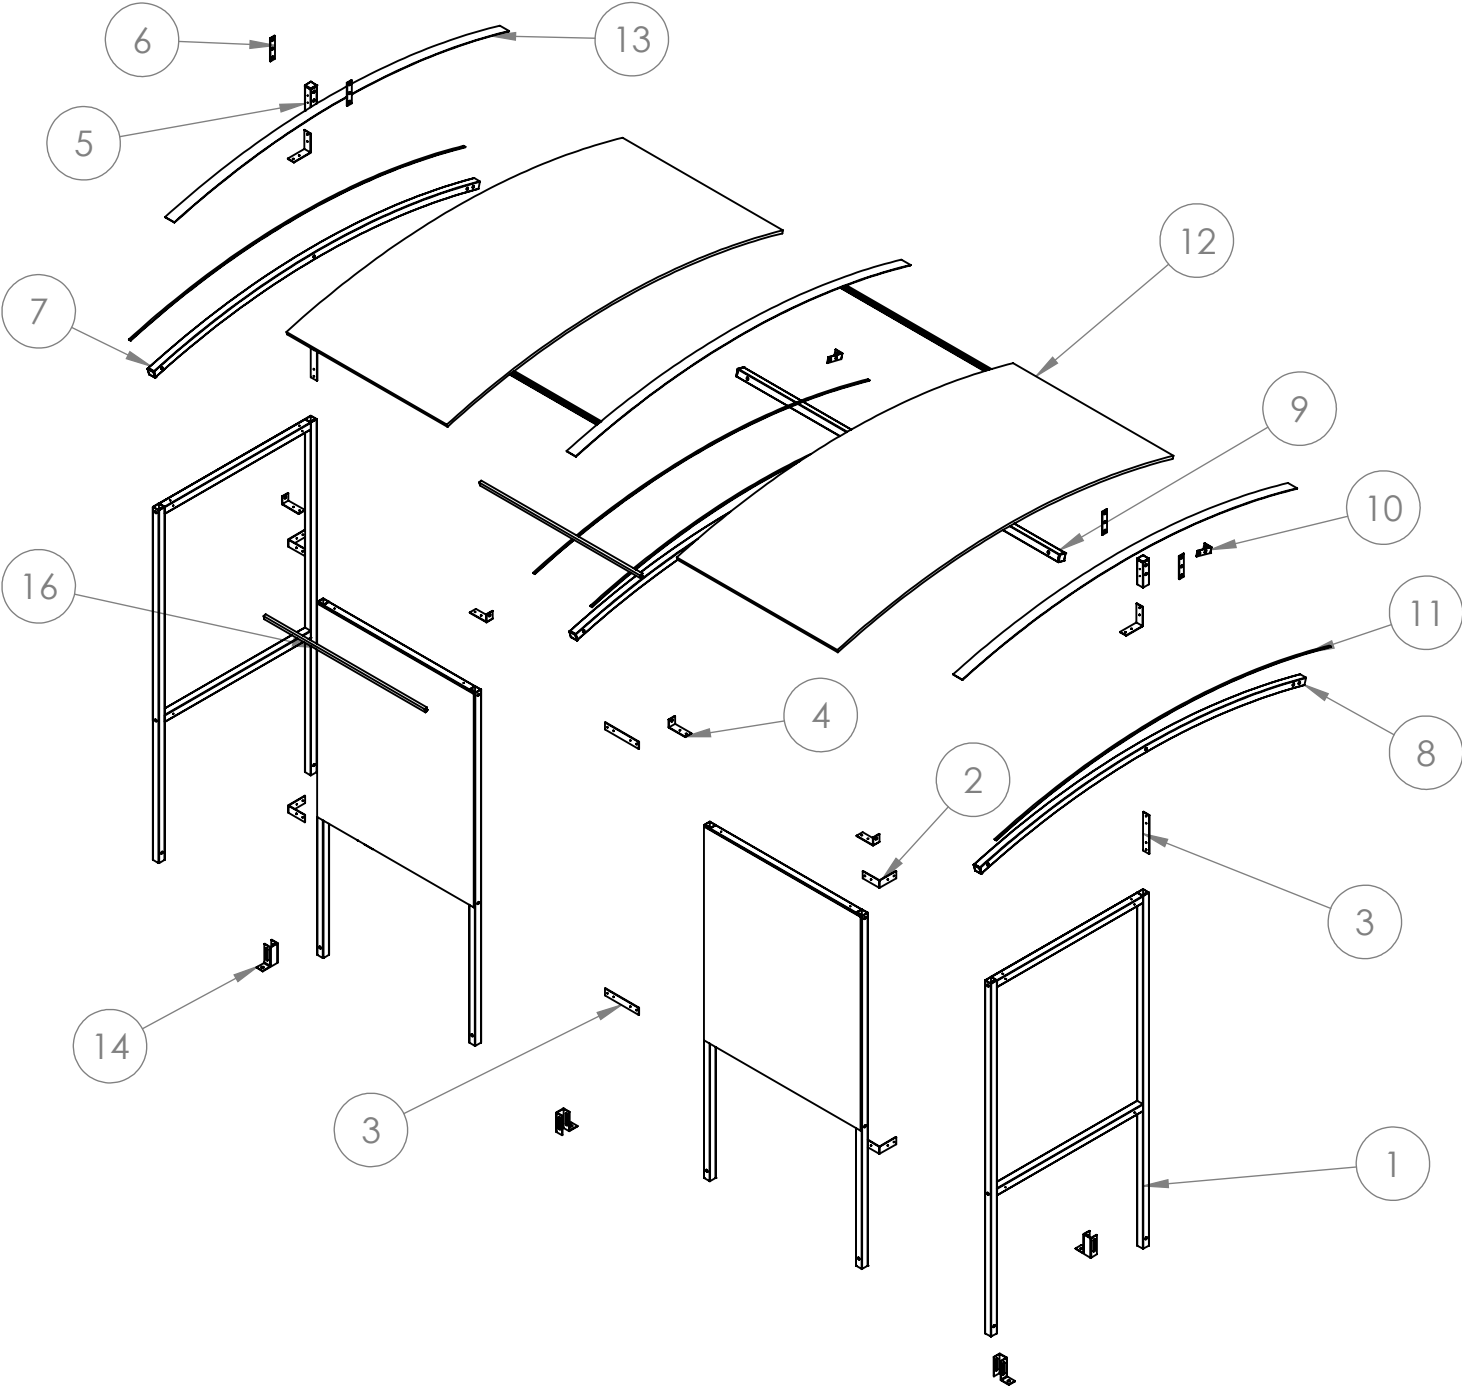



Shelter Type: SR1586




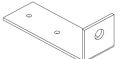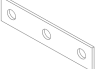


SR1586-01-180717-UK

EXPLODED VIEW




PARTS LIST AND FIXINGS


ITEM NO.	PART NO.	Description	DIMENSION	IMAGE	QTY.
1	S1	FRAME	2000 x 1035		4
2	CB1	BRACKET	110 x 110		6
3	JF1	BRACKET	220 x 40		4
4	Bracket	BRACKET	110 x 46		4
5	NBBS S1	STUB	145 x 40 x 40		2
6	JF2	BRACKET	130 x 30 x 3		4
7	R5	CURVED RAFTER	2159 x 40 x 40		1
8	R4	CURVED RAFTER	2159 x 40 x 40		2
9	ST8	ROOF TIE	2110 x 40 x 40		1
10	L1	BRACKET	95 x 45		4
11	SS	SEALING STRIP	Trim to Length		4
12	ACE2	ROOF PANEL	2210 x 1050		2
13	RC2	ROOF STRIP	cut to suit		3
14	FT1	FOOT BRACKET	109 x 100		5
15	EC40	PLASTIC END CAP	40 x 40		10
16	A1	ANGLE	2100		1

FIXINGS	Bolt set M10	Nut	Washer	Black Cap	T25	T50	AB1210
	M10 x 60mm				25mm Tech screw	50mm Tech screw	M10 X 100mm Concrete Bolt
Pack A	30	30	60	60	72	30	8
Required	24	24	48	48	52	30	5
Spare	6	6	12	12	20	0	3
Image							


Step 1 Assemble **S1** frames to make up the main structure using **CB1** brackets in the corners and **JF1** brackets for the straight joints.

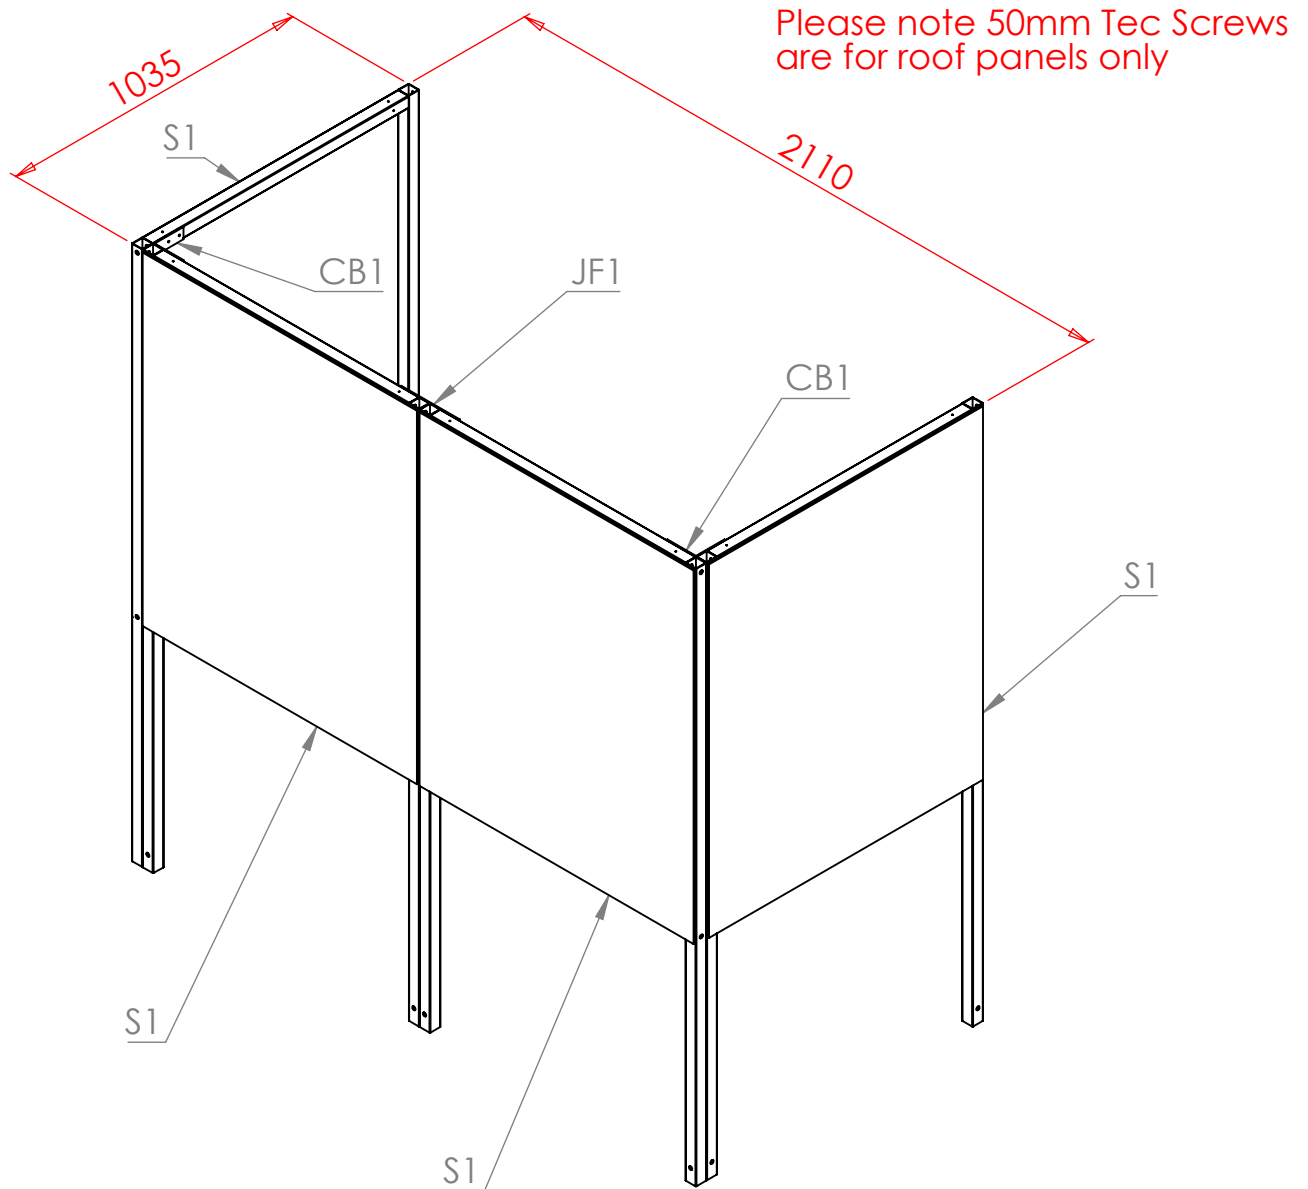


check shelter dimensions
to ensure correct alignment

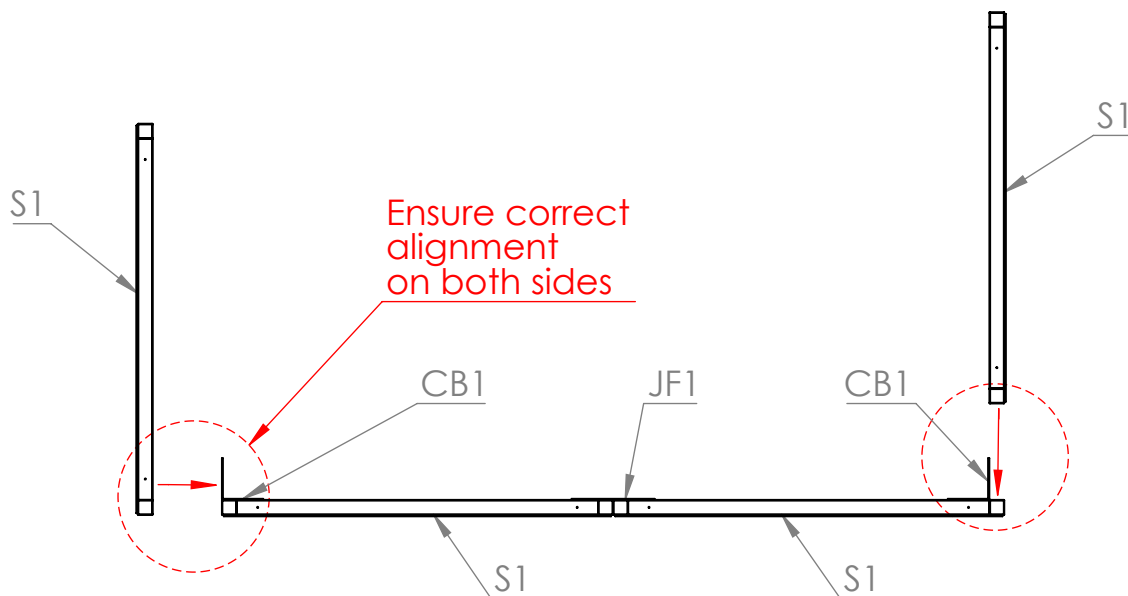


Step 2 Attach **JF2** brackets to **SB1** Stubs. Using **CB1** and **JF1** brackets secure **SB1** to frame. Now fix the **RB2** brackets to the rear of the frame, attach **R4 & R5** rafters. Use **L1** brackets to attach **ST8** tie bar. Move the shelter in to its final position, make sure its square and attach **FT1** foot brackets. Use the anchor bolts to secure it to the ground.

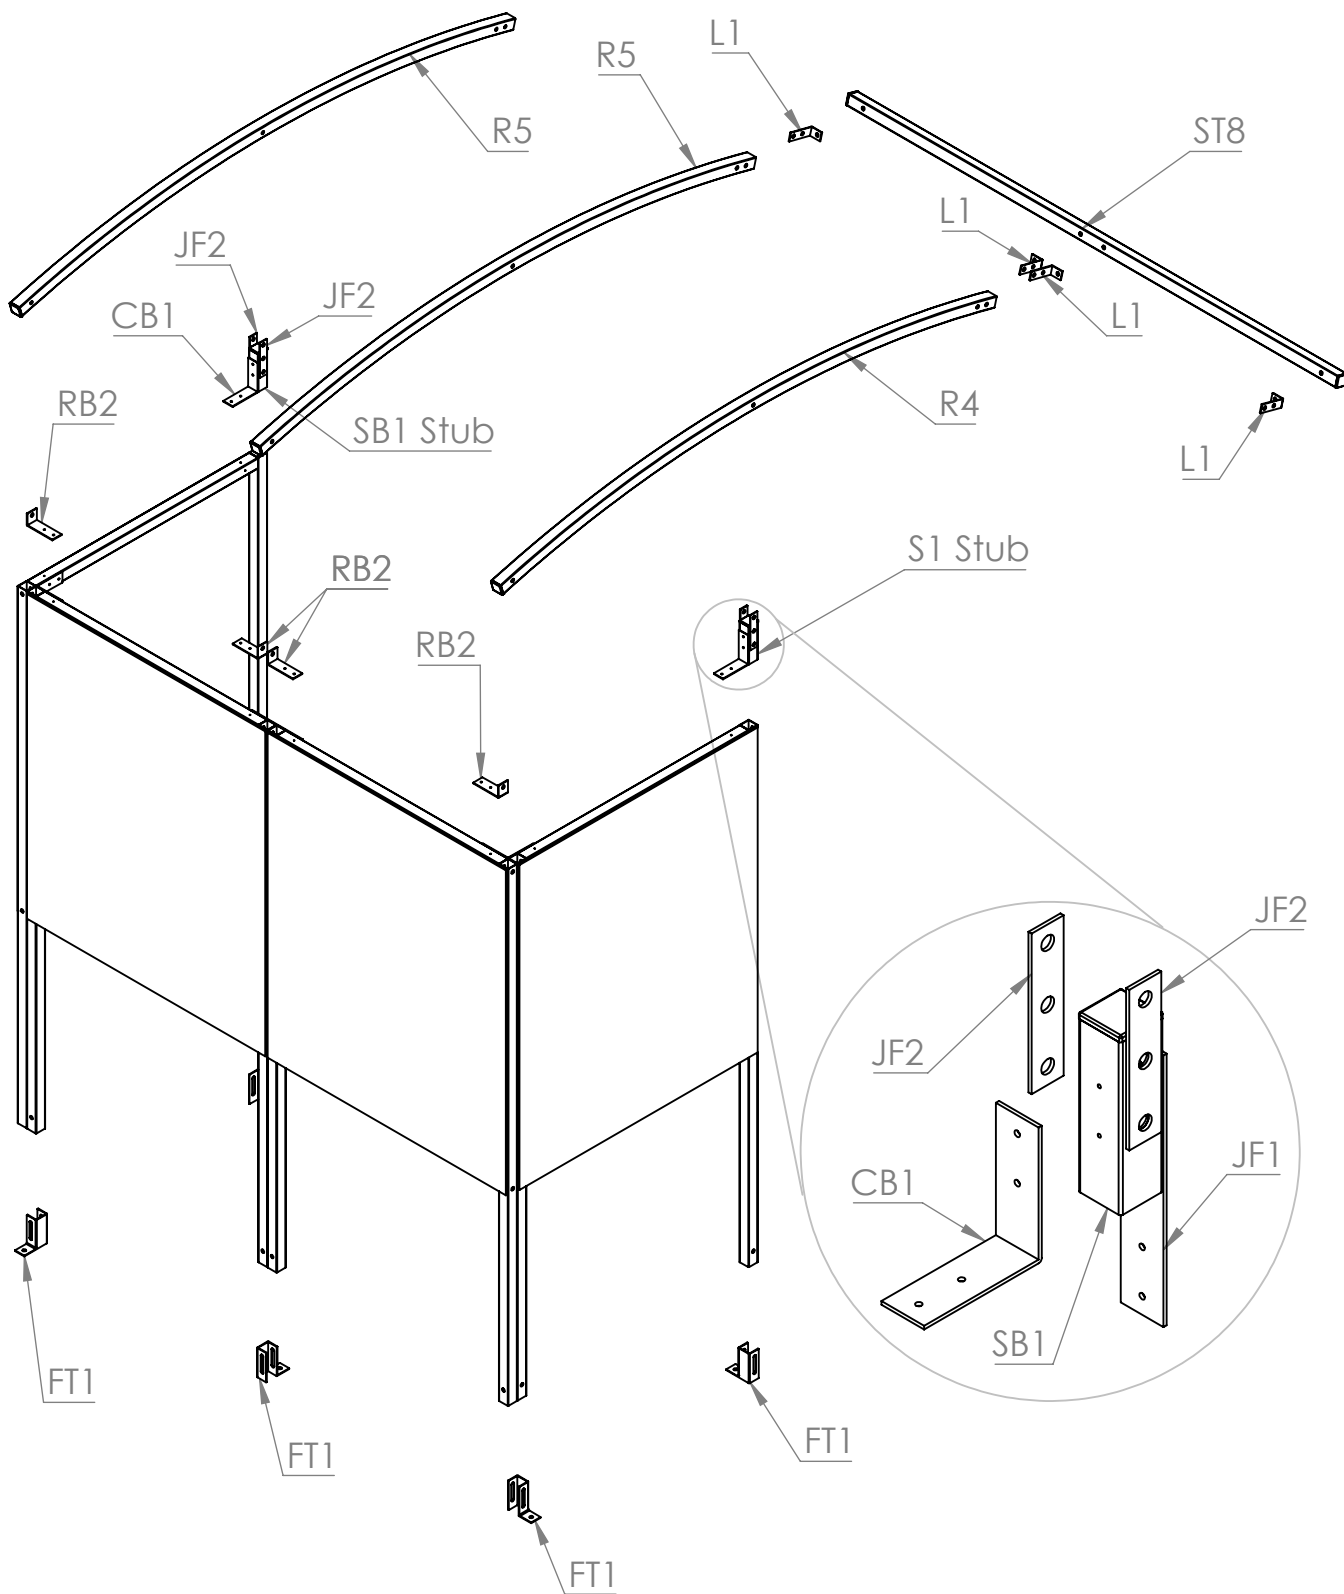

Step 3 Apply sealing strips to rafters. Align the two **ACE2** roof panels with the outer edges of the shelter, leaving a gap in between the panels.

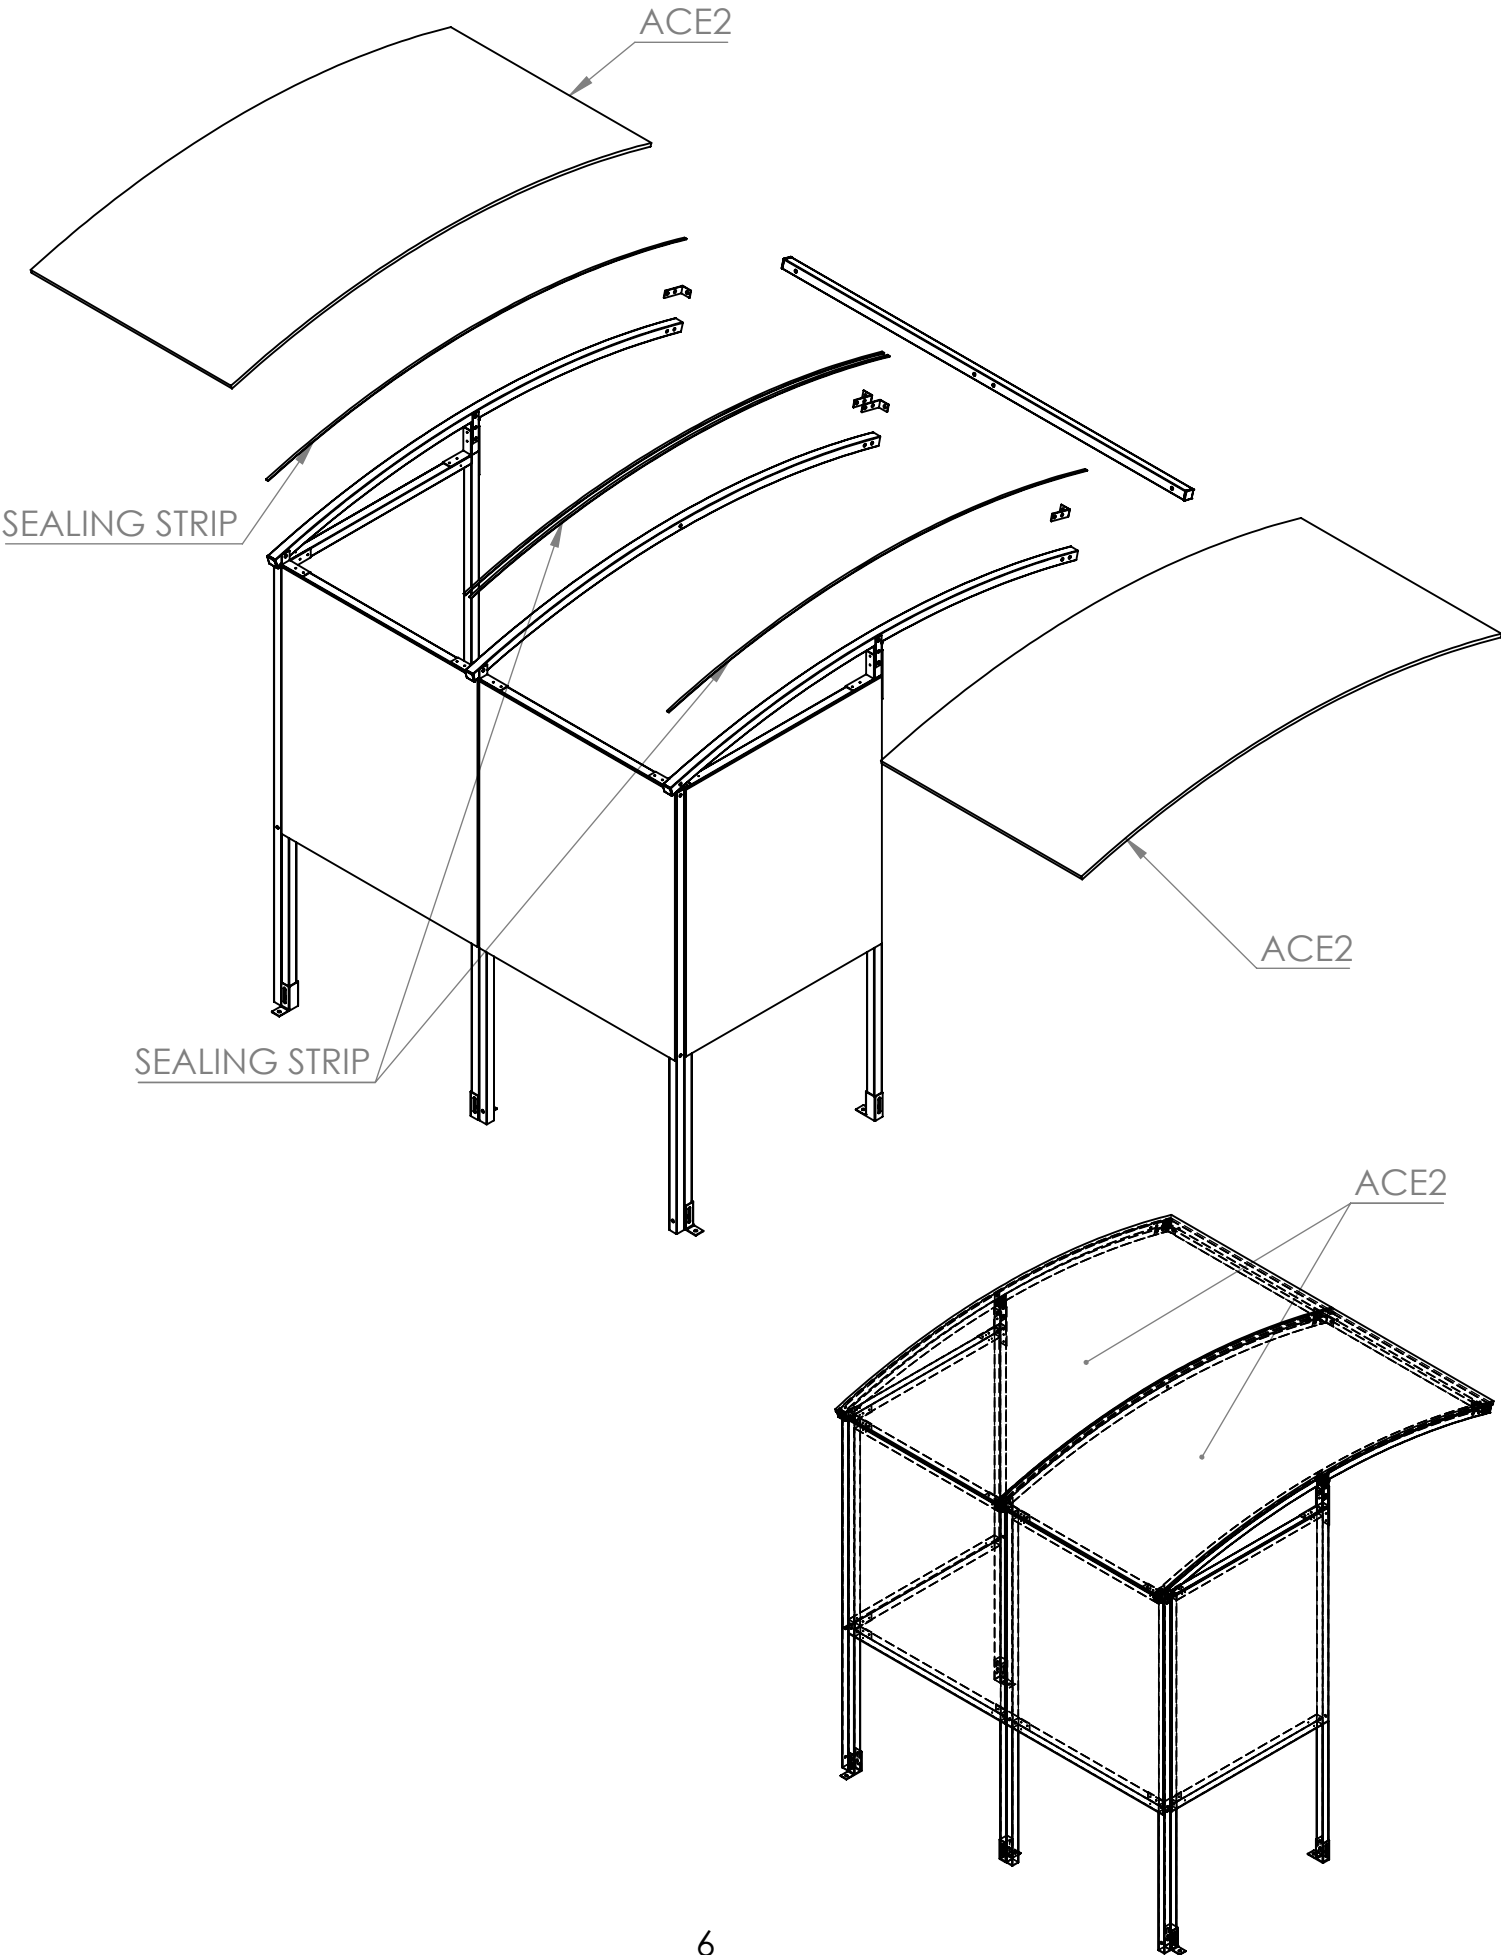


Step 4 Apply sealing strips to the top of the panel and use **RC2** strips to cover the gap in the centre and the edges. Finish of the shelter by attaching the A1 angle trim.

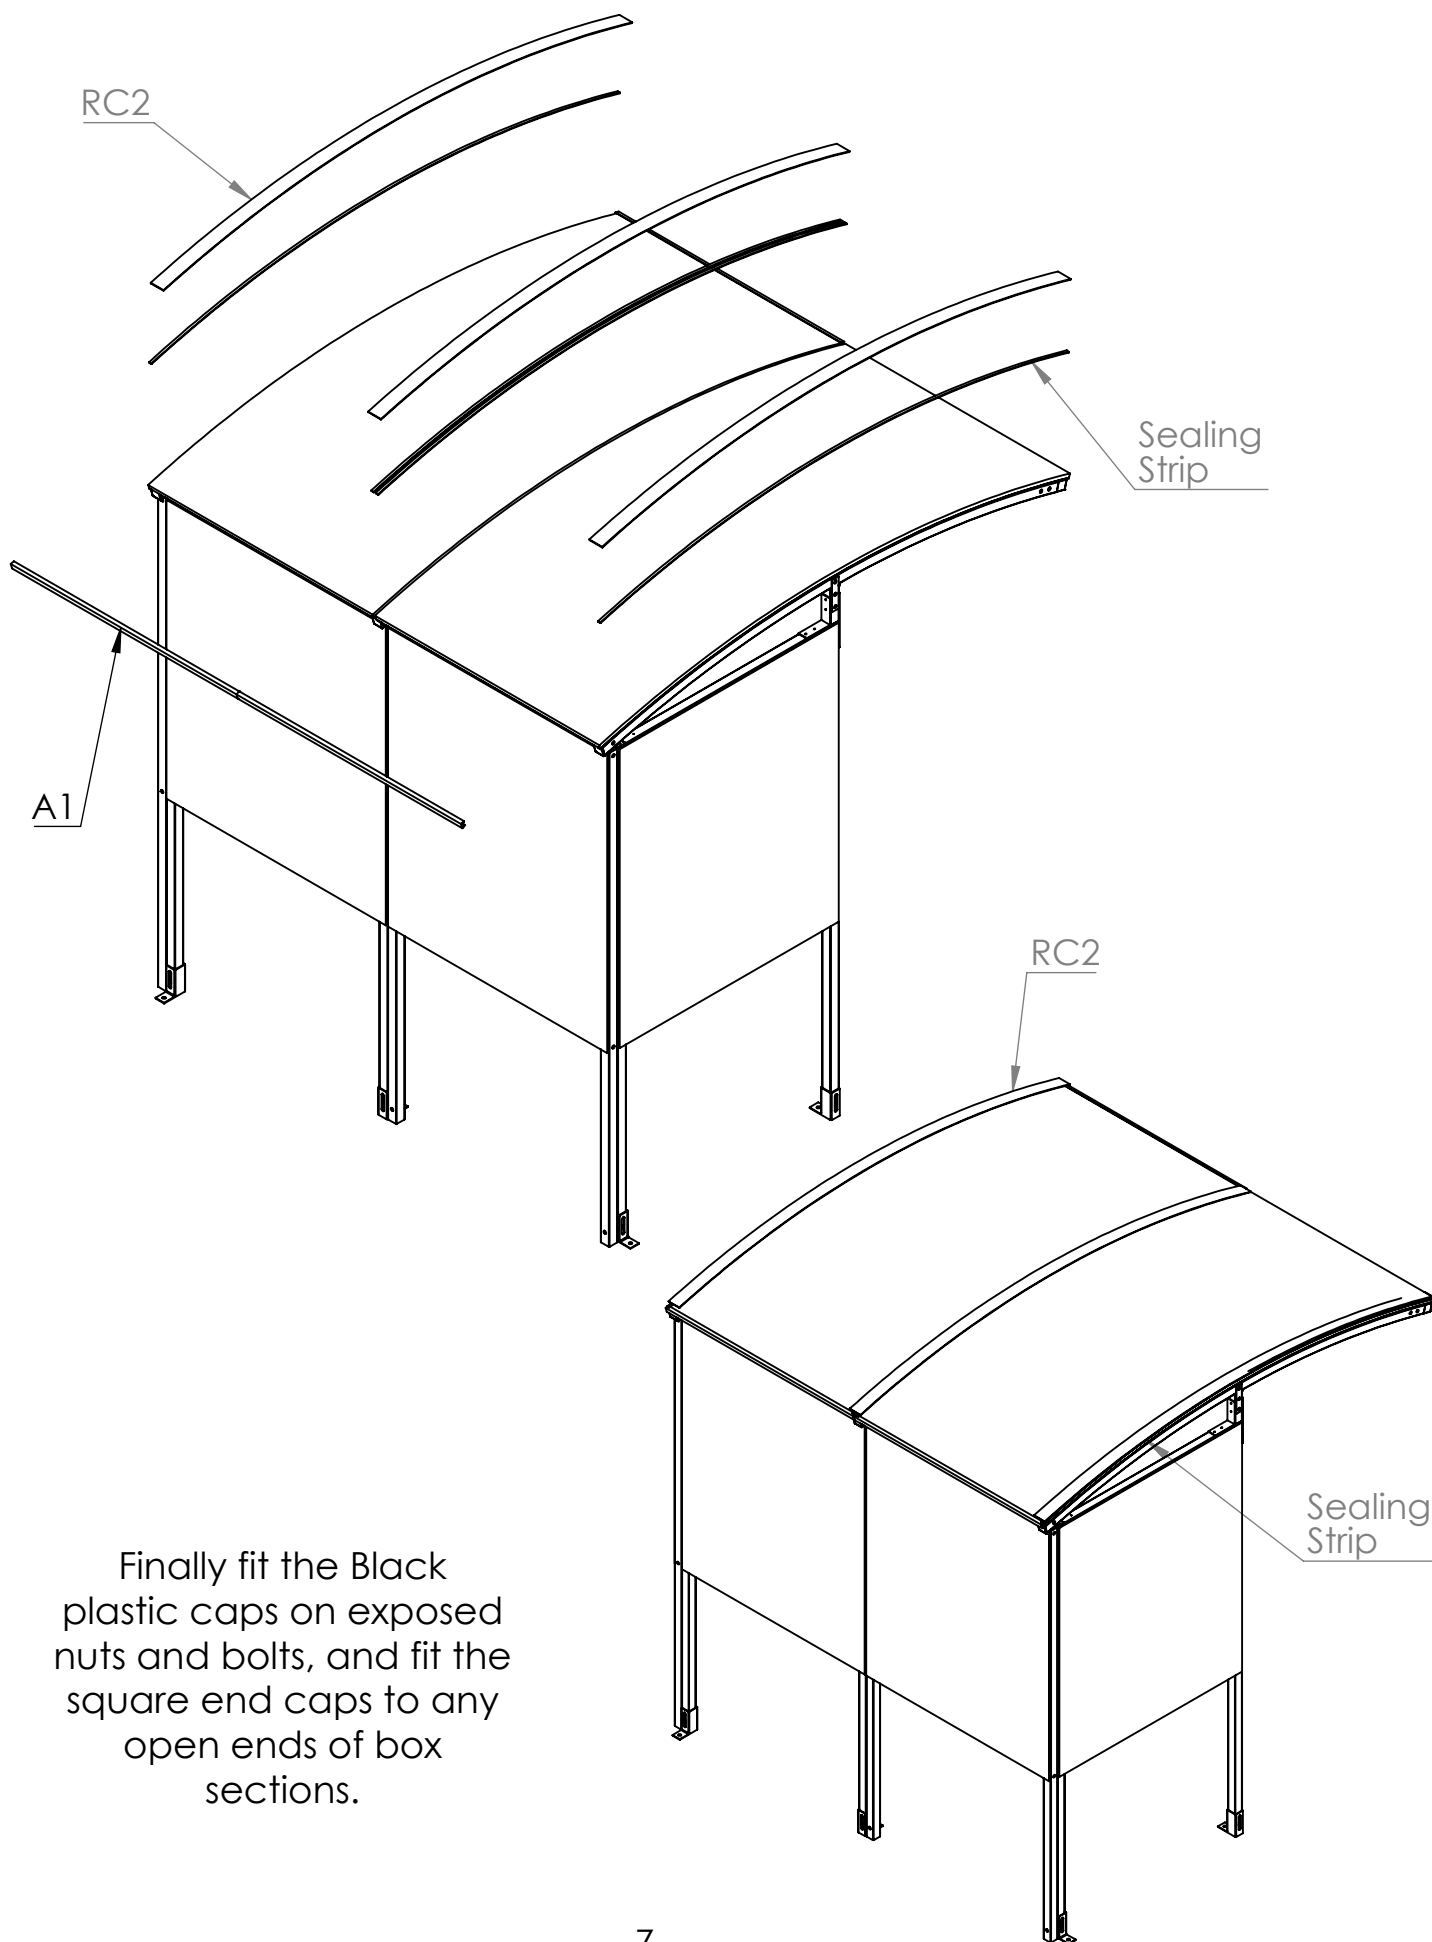

Plan View

Suggested size for concrete base: 200mm oversized on all four sides

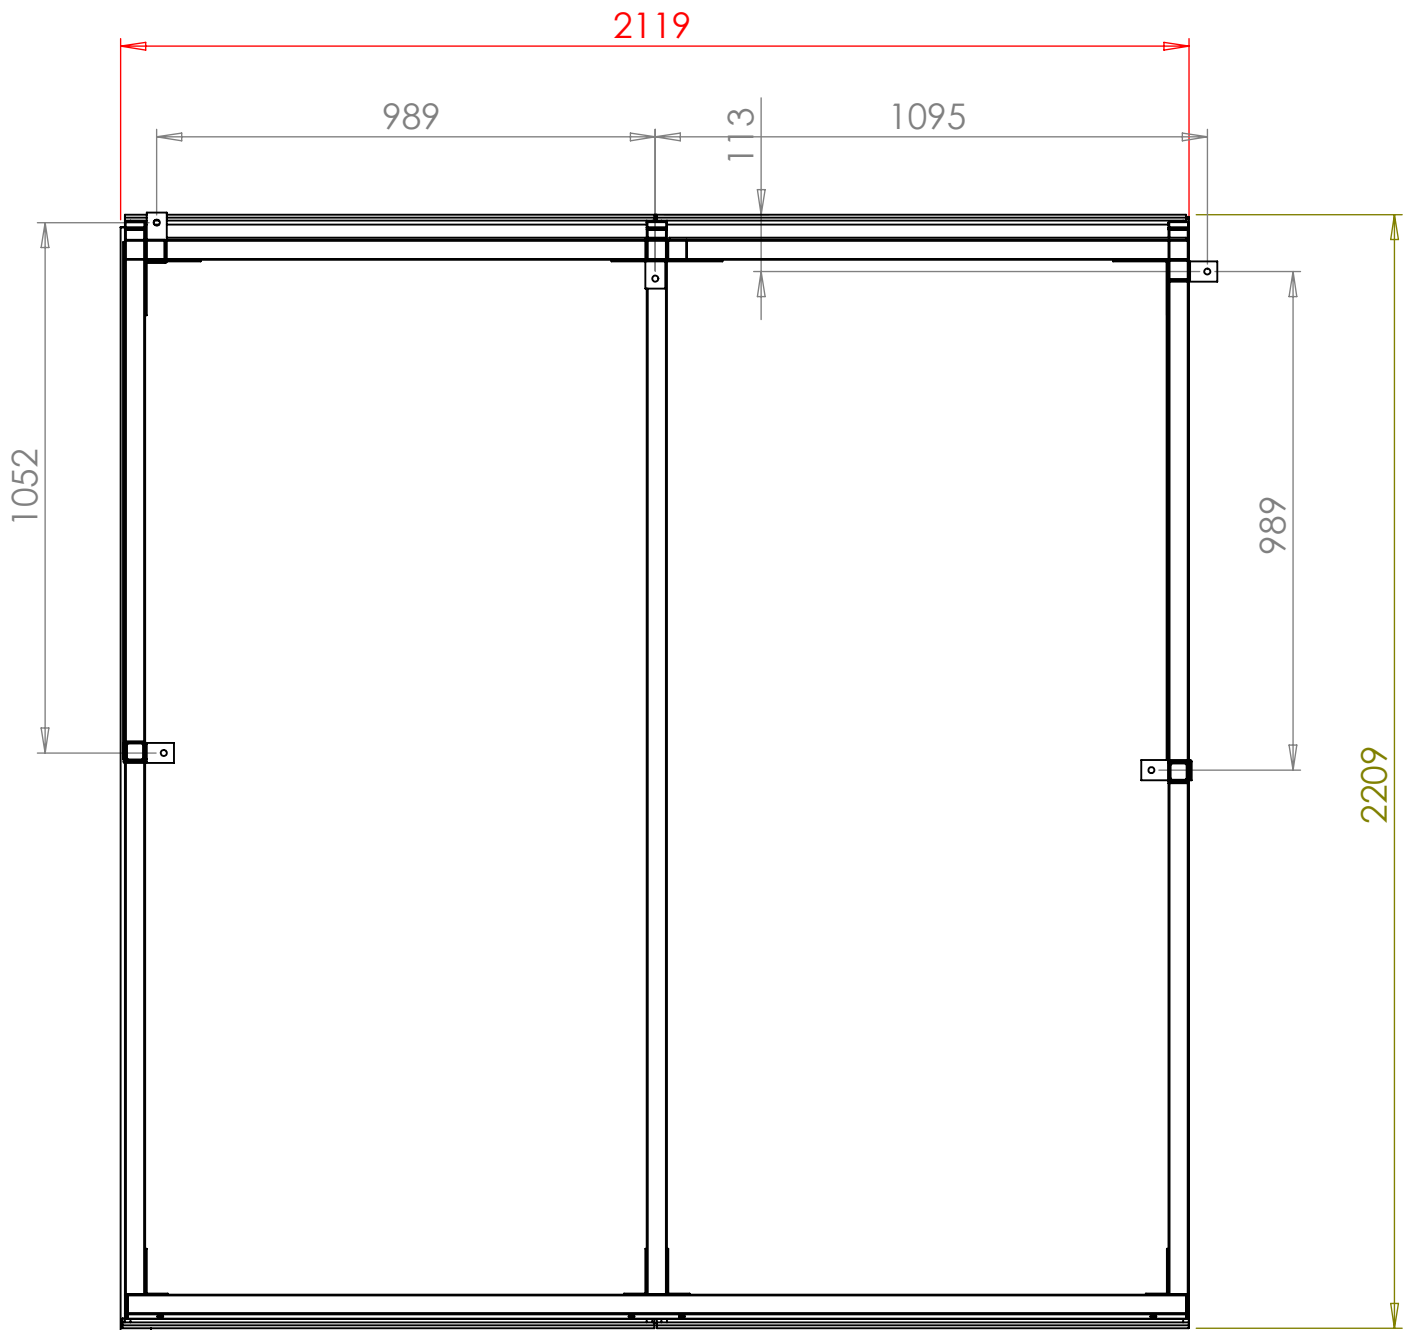

Notes:

Notes:

Notes:

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@shelters4less.co.uk

Web : www.shelters4less.co.uk

Tel : 0800 160 1002

Unit 3, 2 Lansdowne Crescent, Bournemouth, BH1 1SA

All Parts and Fixings checked by:	
Print Name:	Signature: