


# Assembly Instructions

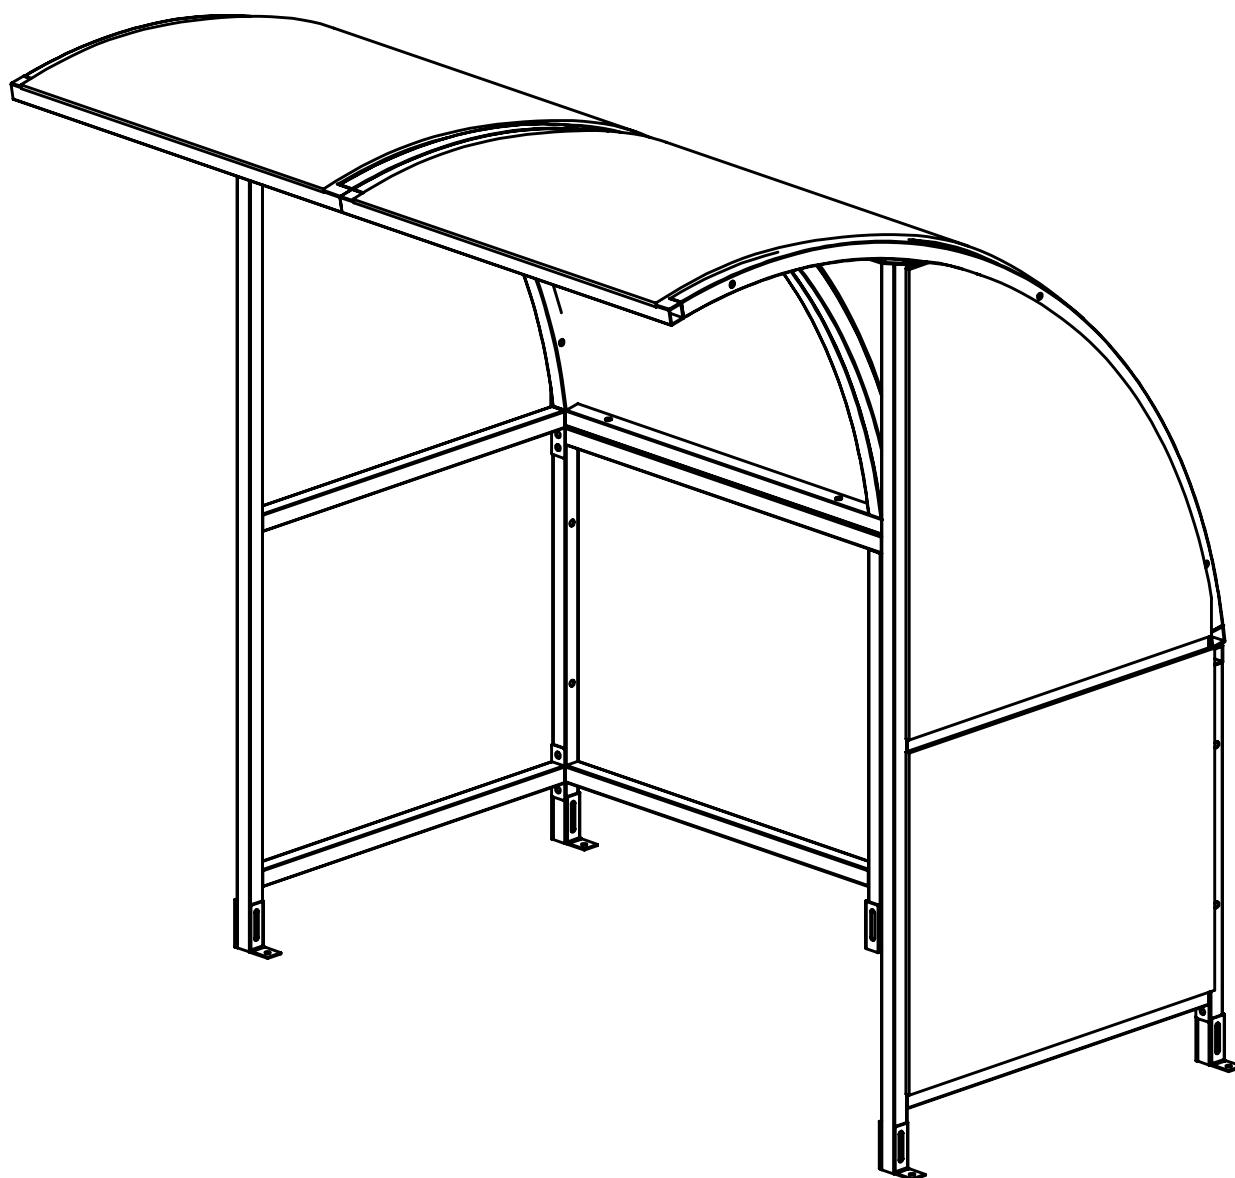


Email : [sales@shelters4less.co.uk](mailto:sales@shelters4less.co.uk)

Web : [www.shelters4less.co.uk](http://www.shelters4less.co.uk)

Tel : 0800 160 1002

**Shelter type: Derby**

**SR0059-01-160117**

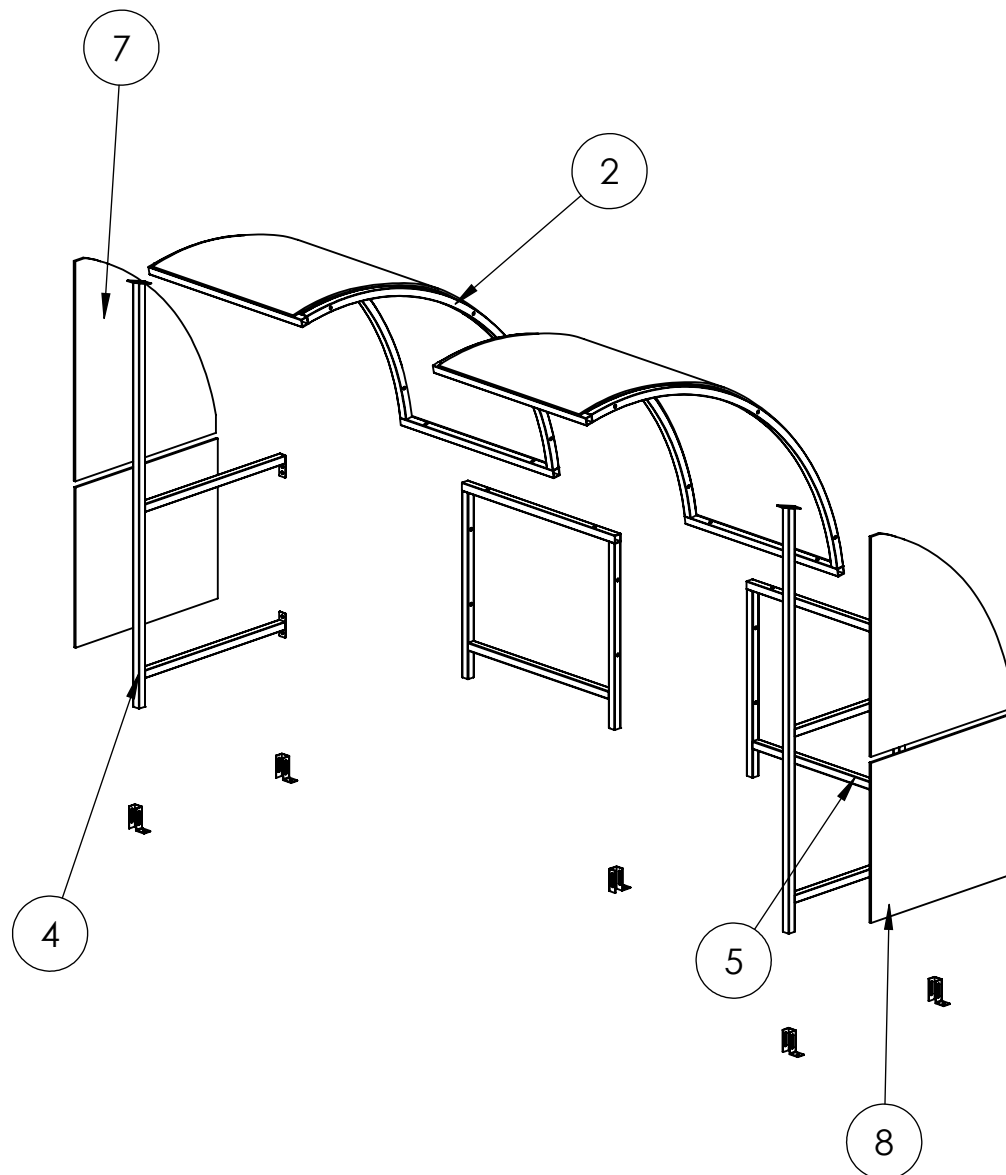

**Tools required: (Not supplied)**








Drill/Screwdriver














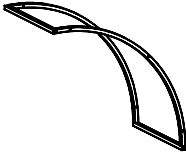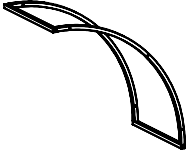

Socket set

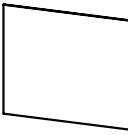
## PARTS LIST & FITTINGS

ITEM NO.	PART NO.	DESCRIPTION	IMAGE	exploded / QTY.
1	CHD1.1	Right Roof Frame Holes drilled on right side to attach to Side Frame		1
2	CHD1.2	Left Roof Frame Holes drilled on left side to attach to Side Frame		1
3	CHD2	Side Frame		2
4	CHD3	Back Square Frame		2
5	FT1	Feet		5

## EXTRA PARTS SUPPLIED FOR END PANEL OPTION

6	CHD end sheet	Polycarbonate sheeting triangle		2
7	CHD end sheet	Polycarbonate sheeting Square		2


Fittings	M8 x 20 bolts	M10 x 60 bolts	M10 x 100 bolts	M10 Nylock nuts	M8 Washer	M10 Washer	M12 x 100 Anchor bolts	M12 washers	M10 Black caps	M8 Black caps	40 x 40 black caps
QTY.	12	5	6	11	12	22	5	5	22	12	4
Image											

25mm Tech Screws	50	only supplied with End Panel Option	
------------------	----	-------------------------------------	---

## Step 1


Take the left **Side Frame** and attach it to the **Back Square Frame** lining it up in positions shown below using the **M10x70 Bolts** supplied.

2 people  
recommended  
to fit this shelter.

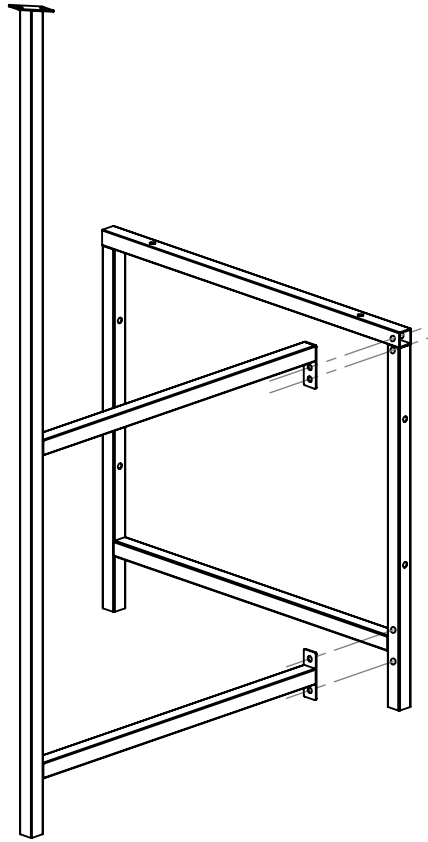

## Step 2


Take the other **Back Square Frame** and attach them side to side lining up the holes in the positions shown below. Use the M10 x 100 bolt

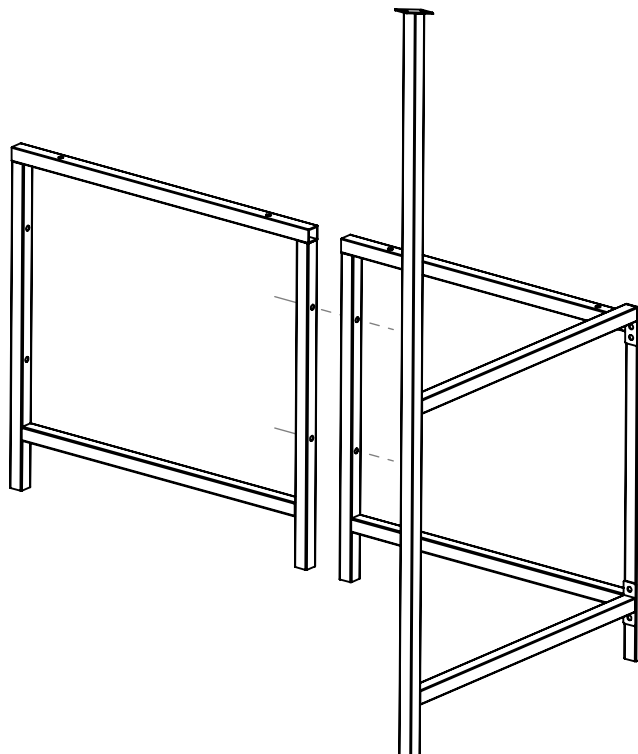




## Step 3

Take the **Right Side Frame** and attach it to the Assembly lining it up in positions shown below using the **M10x70 Bolts** supplied.

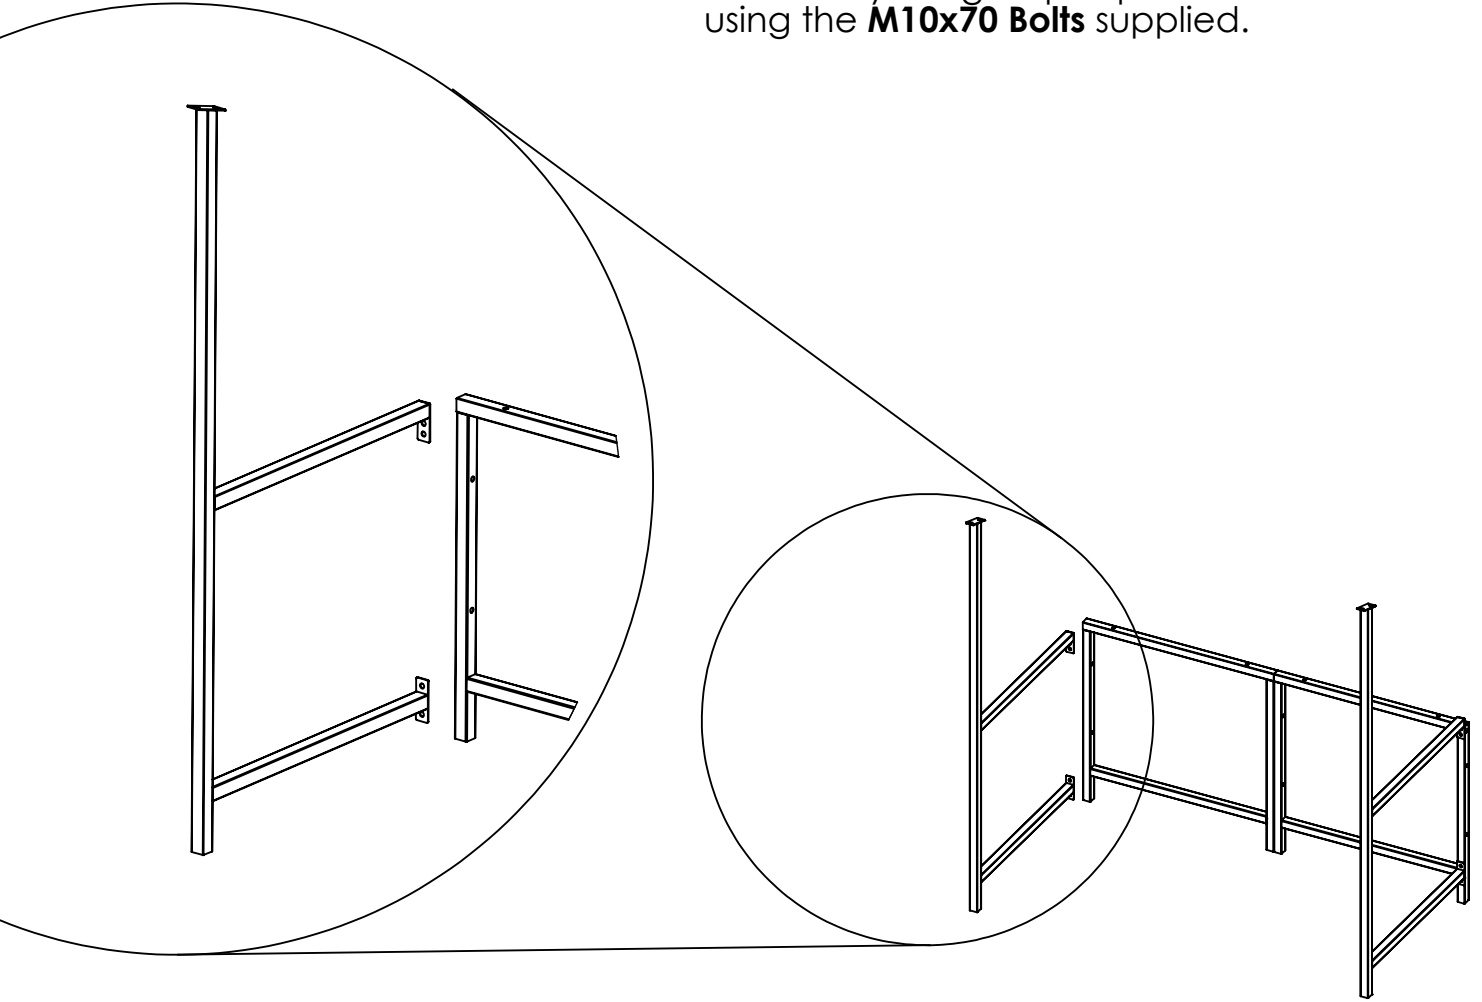

## Step 4


Take the two outside **Roof frames** and loosely attach them to the **Back Square Frame** then line up the holes to attach it to the upper vertical **Side Frames**

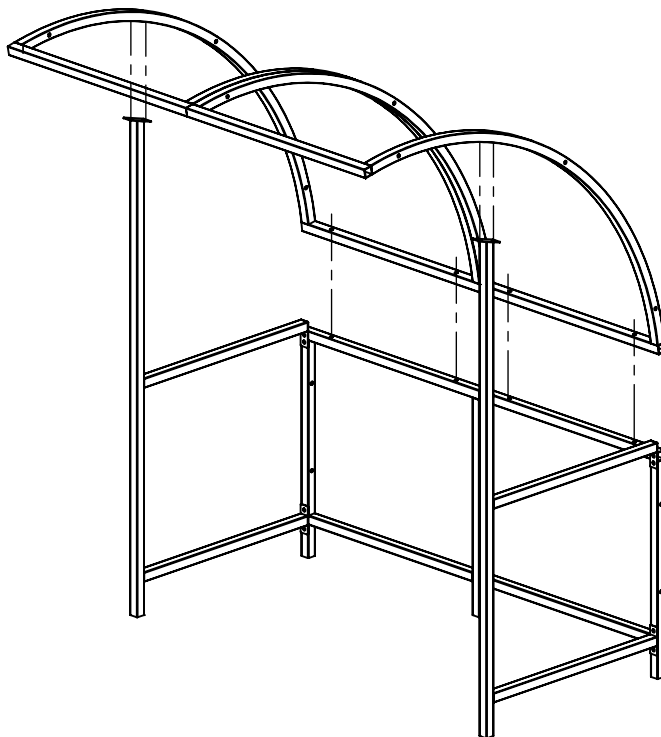

## Step 5

FT1 feet added at this point then it can be fixed into position.

**Note:** Add **Plastic End Caps** at this point, all caps should be used.

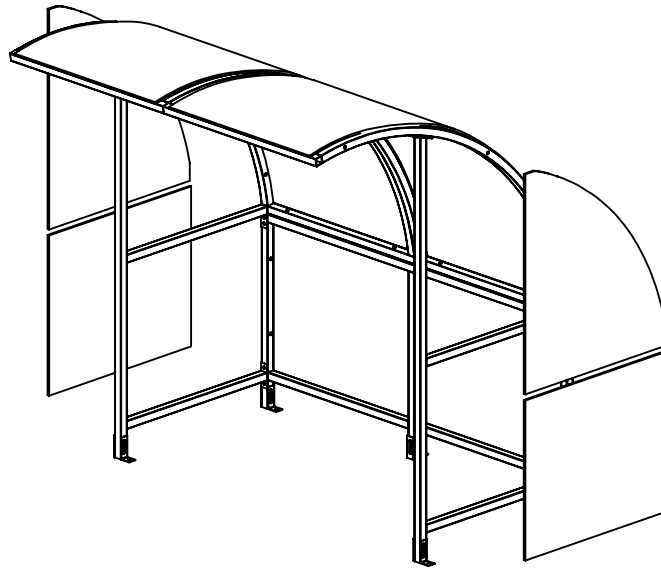

Polycarbonate sheeting parts will vary depending on which model bought.



**Enjoy your new Derby shelter**

**NOTES:**

# THANK YOU FOR PURCHASING THIS PRODUCT

## **MAINTENANCE:**

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

## **CONTACT DETAILS:**

Email : [sales@shelters4less.co.uk](mailto:sales@shelters4less.co.uk)

Web : [www.shelters4less.co.uk](http://www.shelters4less.co.uk)

Tel : 0800 160 1002

Shelters4Less, Unit 3, 2 Lansdowne Crescent, Bournemouth, BH1 1SA

<b>All Parts and Fixings checked by:</b>	
Print Name:	Signature: