



Assembly Instructions

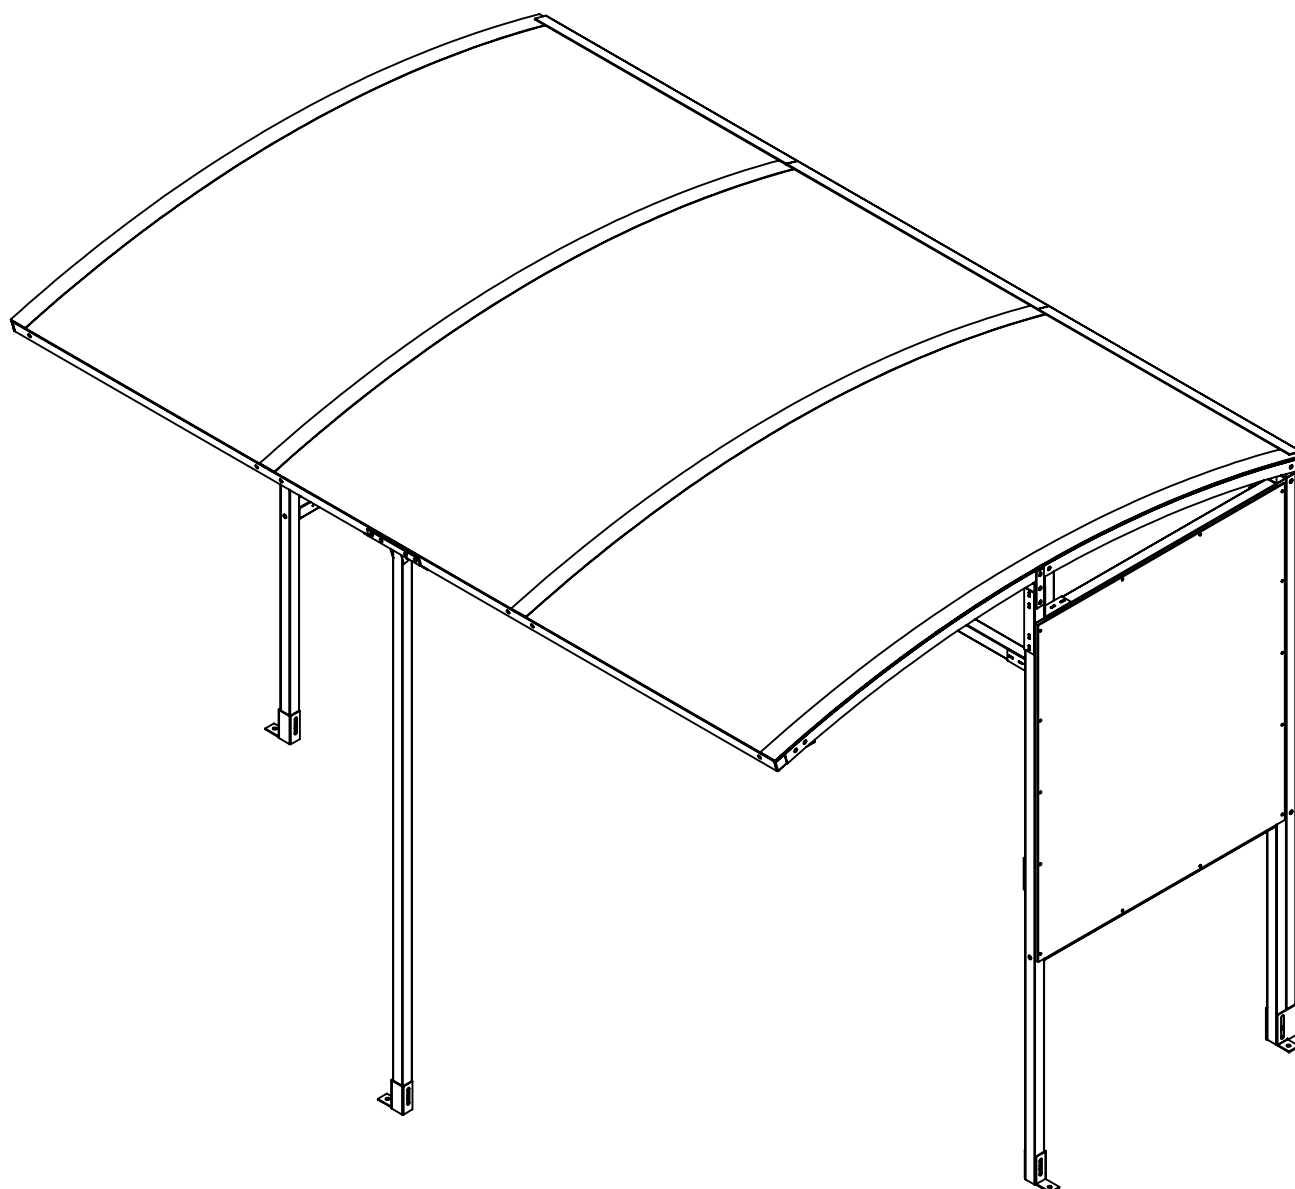

EXPLODED VIEW

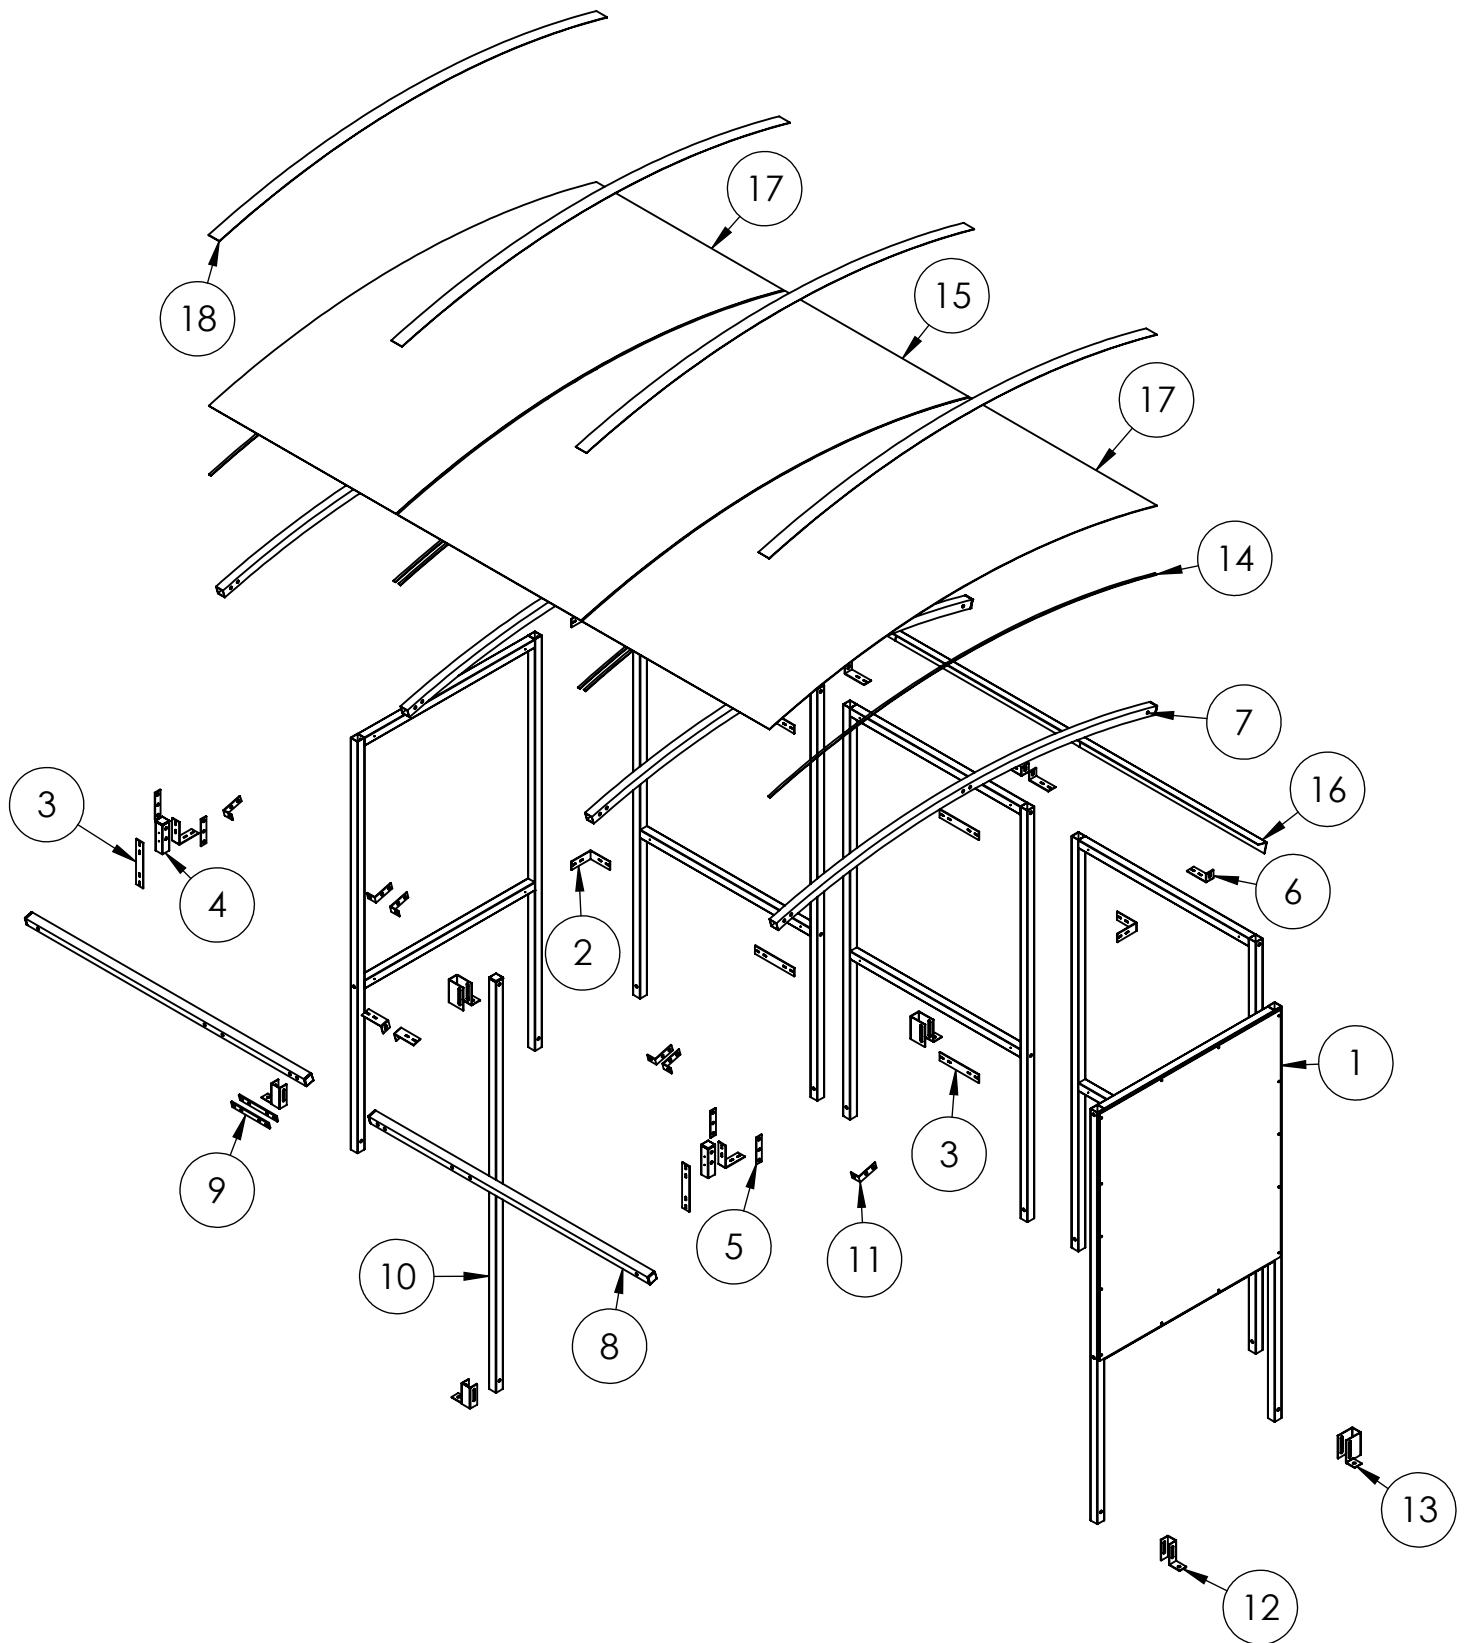

Tools required:



Drill/Screwdriver



Mallet



Hack saw

Tools included:



























Spanner





Torx bit

PARTS LIST


| ITEM NO. | PART NO. | DESCRIPTION | DIMENSION (MM) | DIMENSION (INCHES) | IMAGE | QTY. |
|----------|----------|-----------------|----------------|---------------------|---|---------|
| 1 | S1 | FRAME | 2000 x 1035 | 78.74 x 40.55 |  | 5 |
| 2 | CB1 | CORNER BRACKET | 110 x 110 | 4.33 x 4.33 |  | 6 |
| 3 | JF1 | PLATE/BRACKET | 130 x 30 x 3 | 8.66 x 1.57 |  | 6 |
| 4 | S1 STUB | STUB | 140 x 40 x 40 | 5.51 x 1.57 x 1.57 |  | 2 |
| 5 | JF2 | PLATE/BRACKET | 130 x 30 | 5.12 x 1.18 |  | 4 |
| 6 | RB1 | BRACKET | 110x46x40 | 4.33 x 1.18 |  | 8 |
| 8 | R4 | RAFTER | 2159 x 40 x 40 | 85.04 x 1.57 x 1.57 |  | 4 |
| 9 | ST9 | ROOF TIE | 1562x40x40 | 61.50 x 1.57 x 1.57 |  | 2 |
| 10 | JF3 | PLATE/ BRACKET | 210 x 40 | 8.66 x 1.57 |  | 2 |
| 11 | P4 | POST | 1995 x 40 x 40 | 78.54 x 1.57 x 1.57 |  | 1 |
| 12 | L1 | BRACKET | 95 x 45 x40 | 3.74 x 1.77 |  | 6 |
| 13 | FT1 | FOOT BRACKET | 109 x 100 x 40 | 4.29 x 3.93 x 1.57 |  | 3 |
| 14 | FT3 | FOOT BRACKET | 109 x 100x 80 | 4.29 x 3.93 x 3.27 |  | 4 |
| 15 | SS | SEALING STRIP | TRIM TO FIT | TRIM TO FIT |  | 3 ROLLS |
| 16 | ACE2 | ROOF PANEL | 2210 x 1050 | 87 x 41.34 |  | 2 |
| 17 | ACC2 | ROOF PANEL | 2210 x 1030 | 87 x 40.55 |  | 1 |
| 18 | RC2 | ROOF STRIP | 2180 | 85.83 |  | 4 |
| 19 | A2 | ROOF EDGE ANGLE | 1035 x 50 x 50 | 40.55 x 1.97 x 1.97 |  | 3 |
| 20 | EC40 | PLASTIC END CAP | 40 x 40 | 1.57 X 1.57 |  | 14 |

| Fittings | Bolt set M10 | Nut | Washer | Black Cap | T25 | AB1210 |
|----------|---|---|---|---|--|---|
| | M10 X 60mm | | | | 25mm Tech screw | M10 x 100mm Concrete Bolt |
| Pack C+D | 40 | 40 | 80 | 80 | 202 | 13 |
| Required | 39 | 39 | 78 | 78 | 104 | 7 |
| Image |  |  |  |  |  |  |


Step 1 Assemble **S1** frames to make up the main structure using **CB1** brackets in the corners and **JF1** brackets on the straight joints. Attach the **S1 stub** as shown using **JF1**, **CF1** and **JF3** brackets.

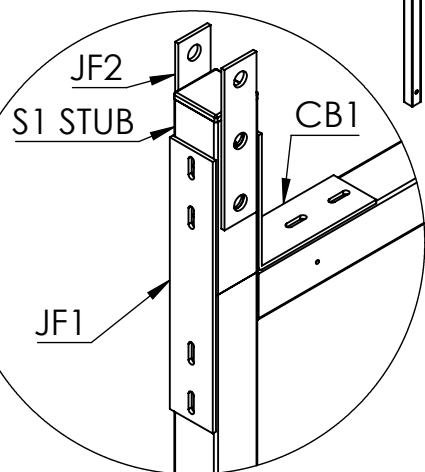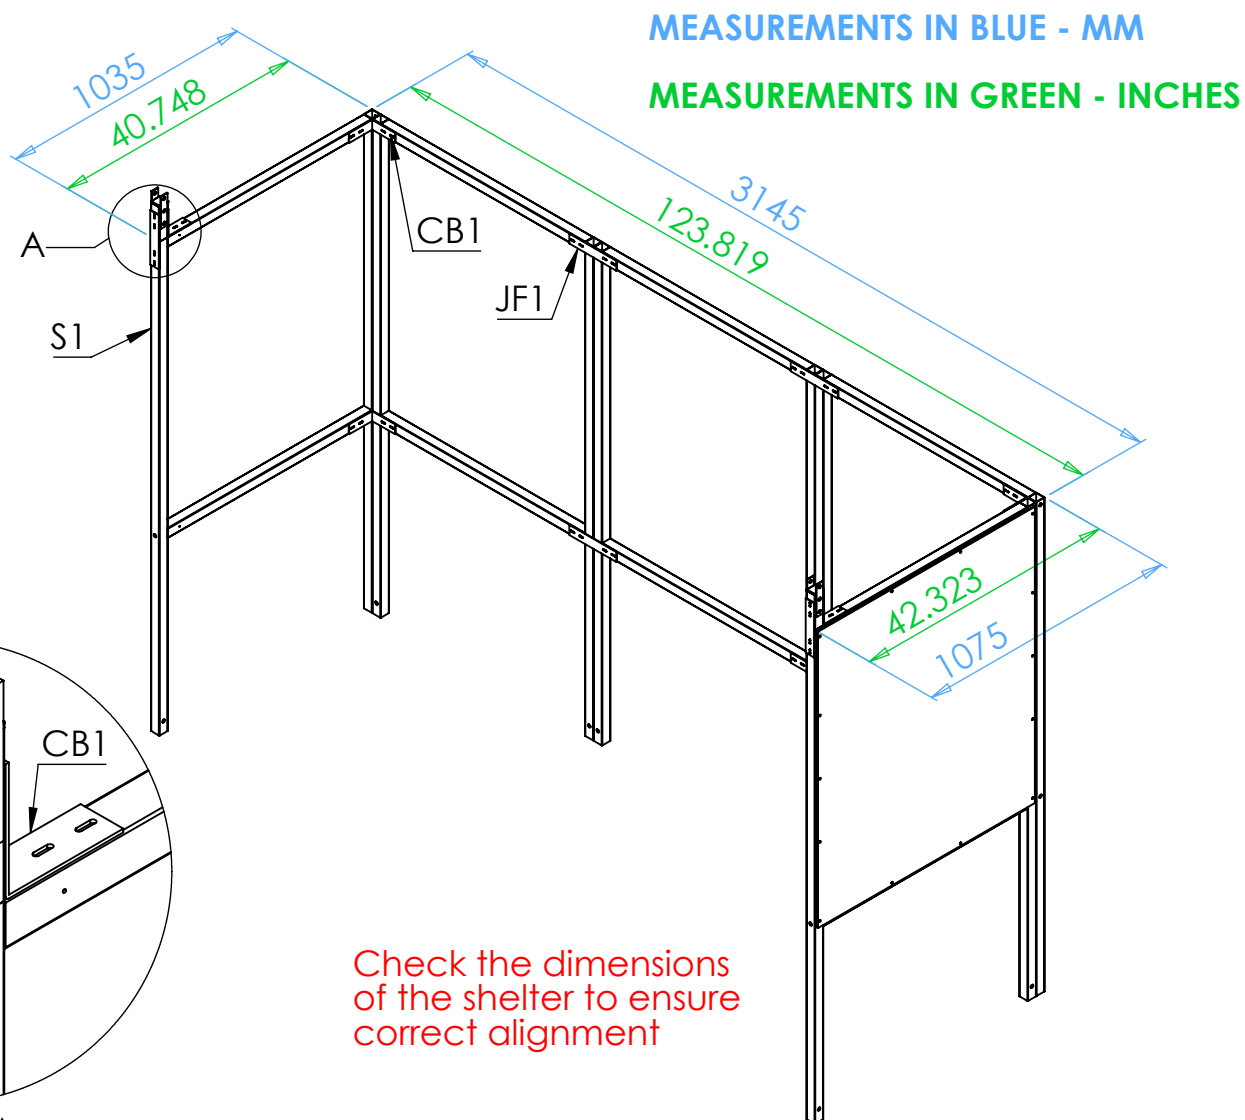


DETAIL A
SCALE 1 : 5

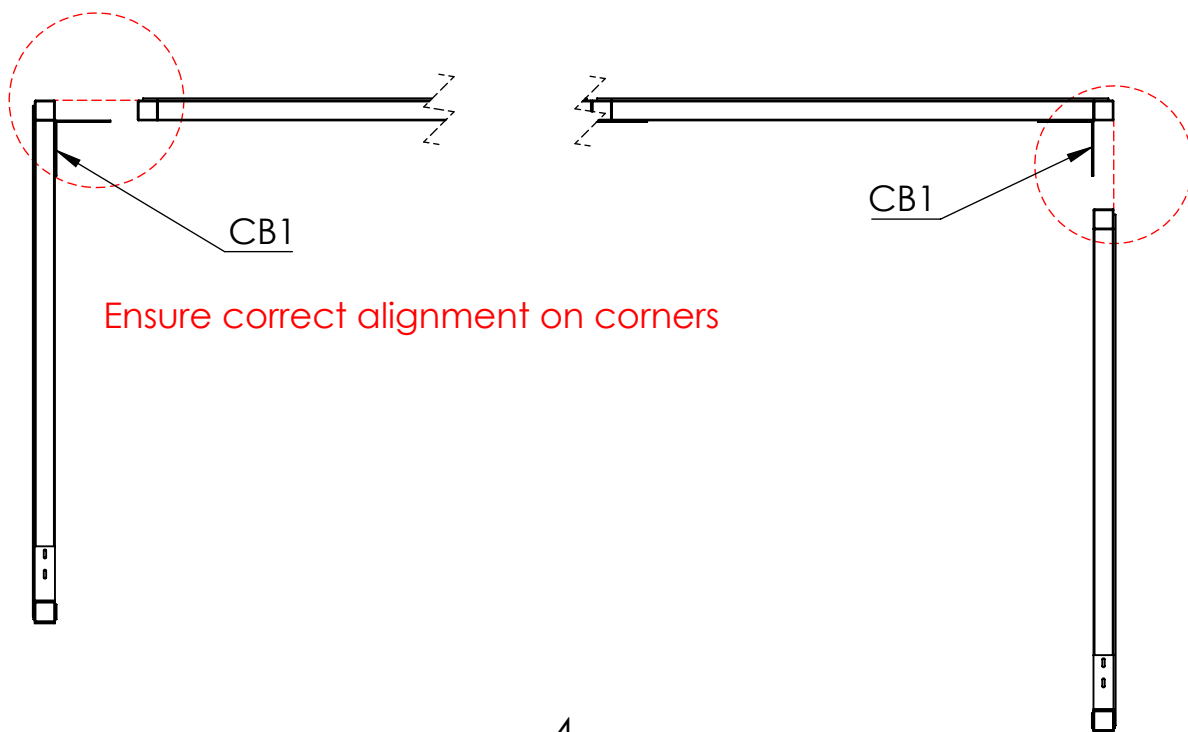


Step 2 Attach first **R4** rafters using **RB1** brackets on the back of the shelter and **S1** stubs in the middle.

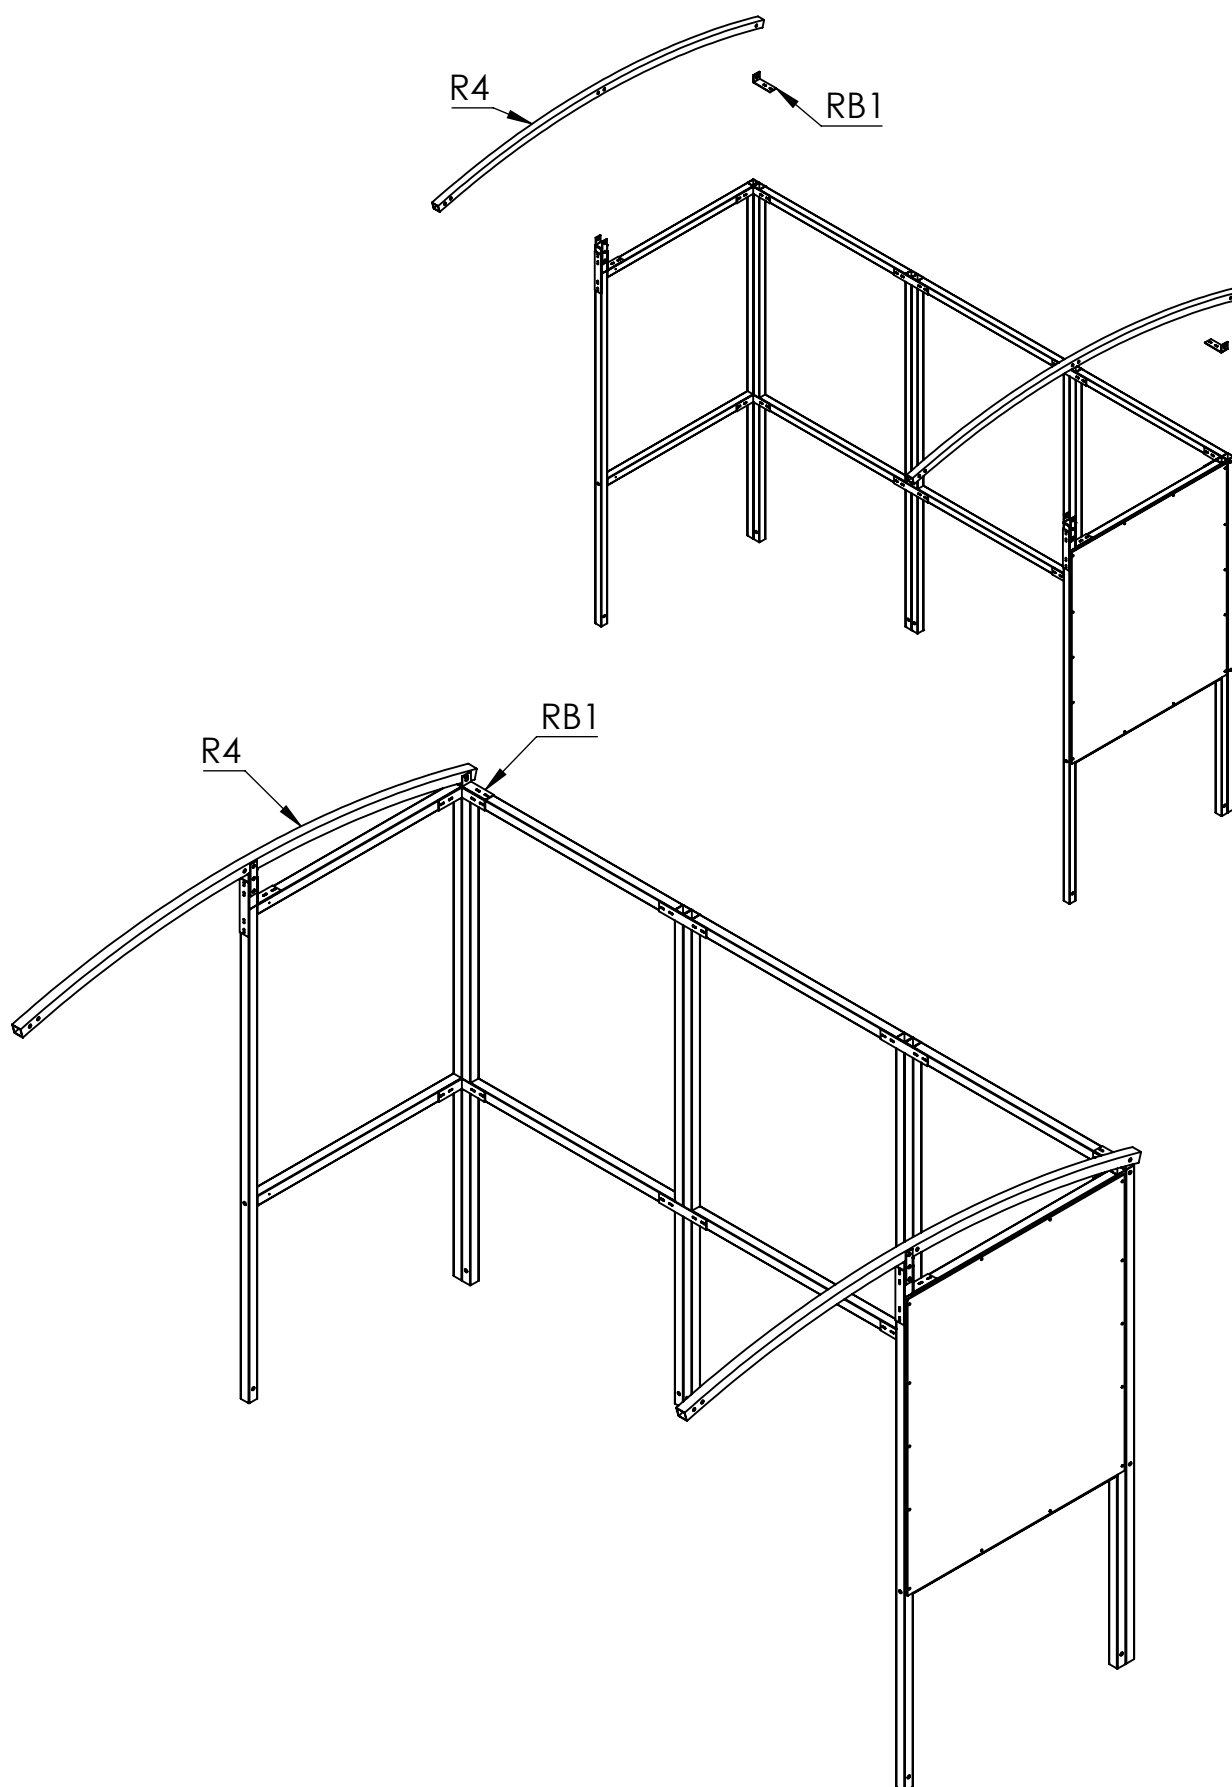


Step 3 Assemble the **T-frame** using two **ST9** tie bars and a **P4** post. Join the two **ST9** bars together first using **JF3** brackets, then attach the **P4** post using two **RB2** brackets.

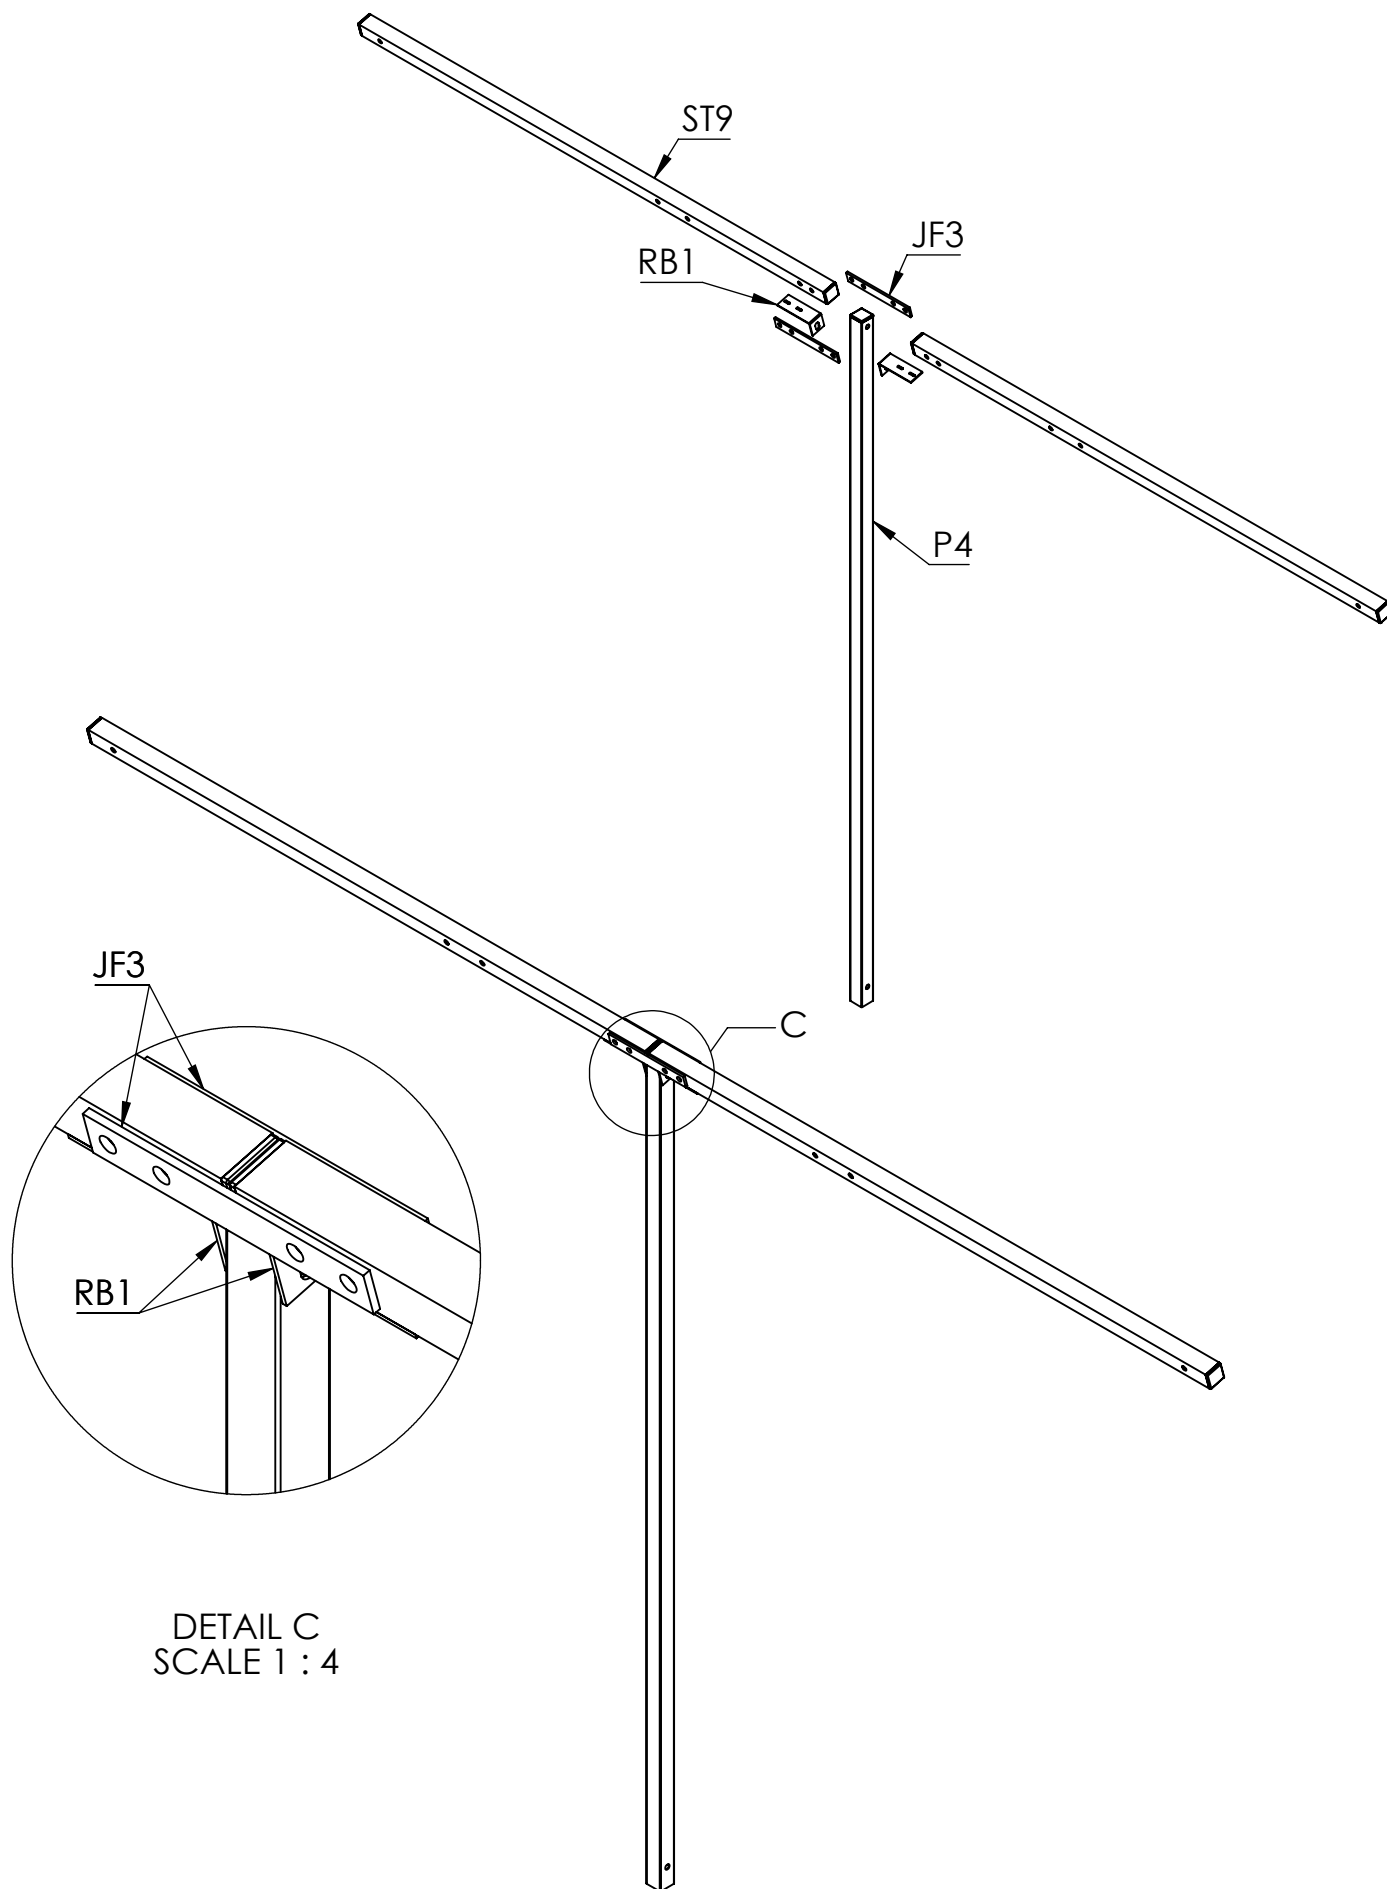


Step 4 Use **L1** brackets to attach the T-bar to the front of the shelter and install the remaining **R4** rafters using **RB1** brackets on the rear and **L1** brackets at the front. Attach the **FT1** and **FT3** brackets and move the shelter in to its final position before using anchor bolts to secure it to the ground.

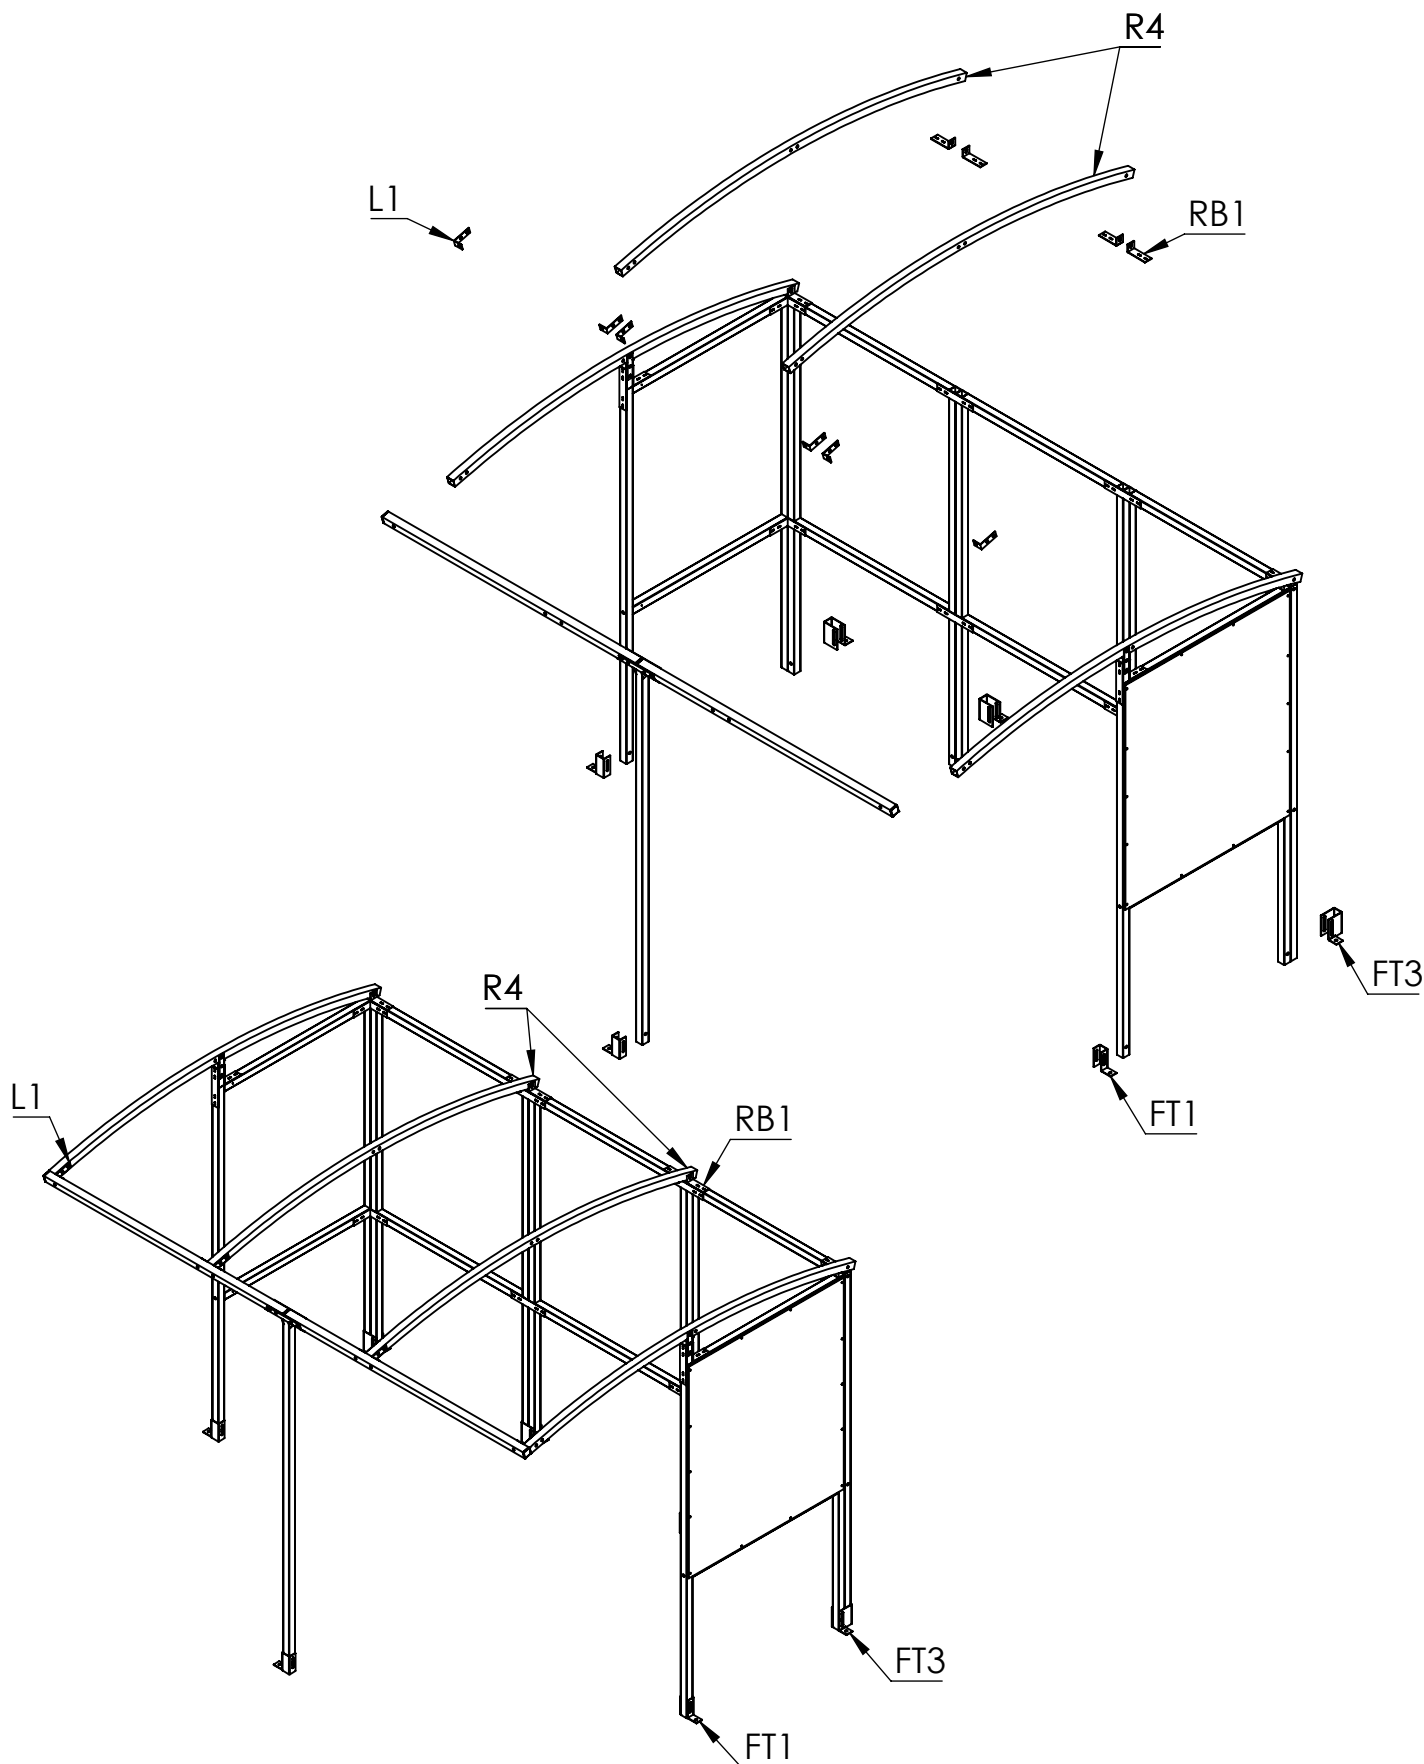

Step 5 Stick sealing strips (**SS**) to the rafters and align the **ACE2** panels to the outside of the shelter and centralise the **ACC2** panel in the centre. Apply more sealing strips to the top of the roof panels, above the previous strips.

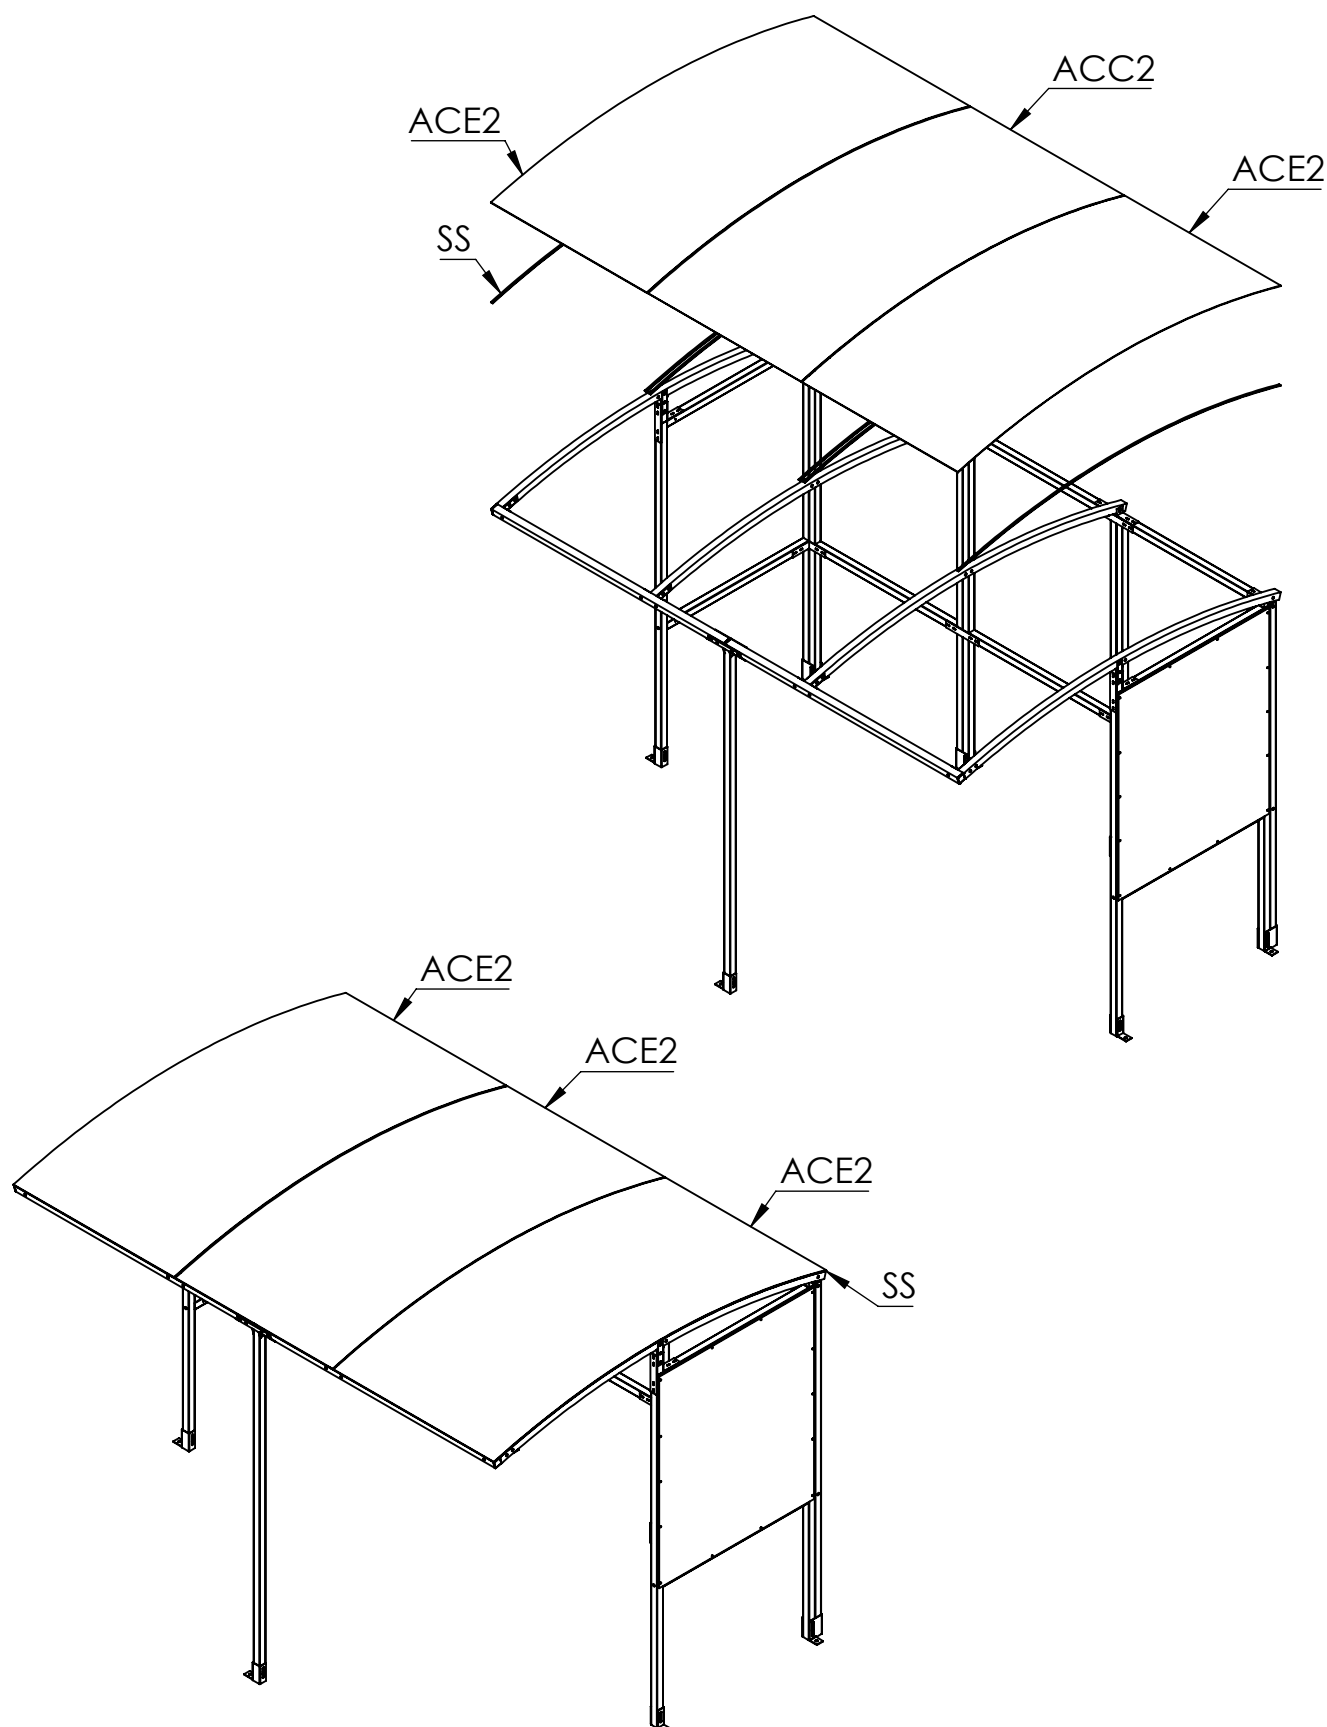


Step 6 Screw down the **RC2** strips directly into the rafter with the **25mm TEC screws** to secure the roof panels. Then fit the Black plastic caps on exposed nuts and bolts. Fit the square end caps (**EC40**) to any open ends of box sections. Screw the **A2 Roof Angles** onto the back edge of the roof as shown below.

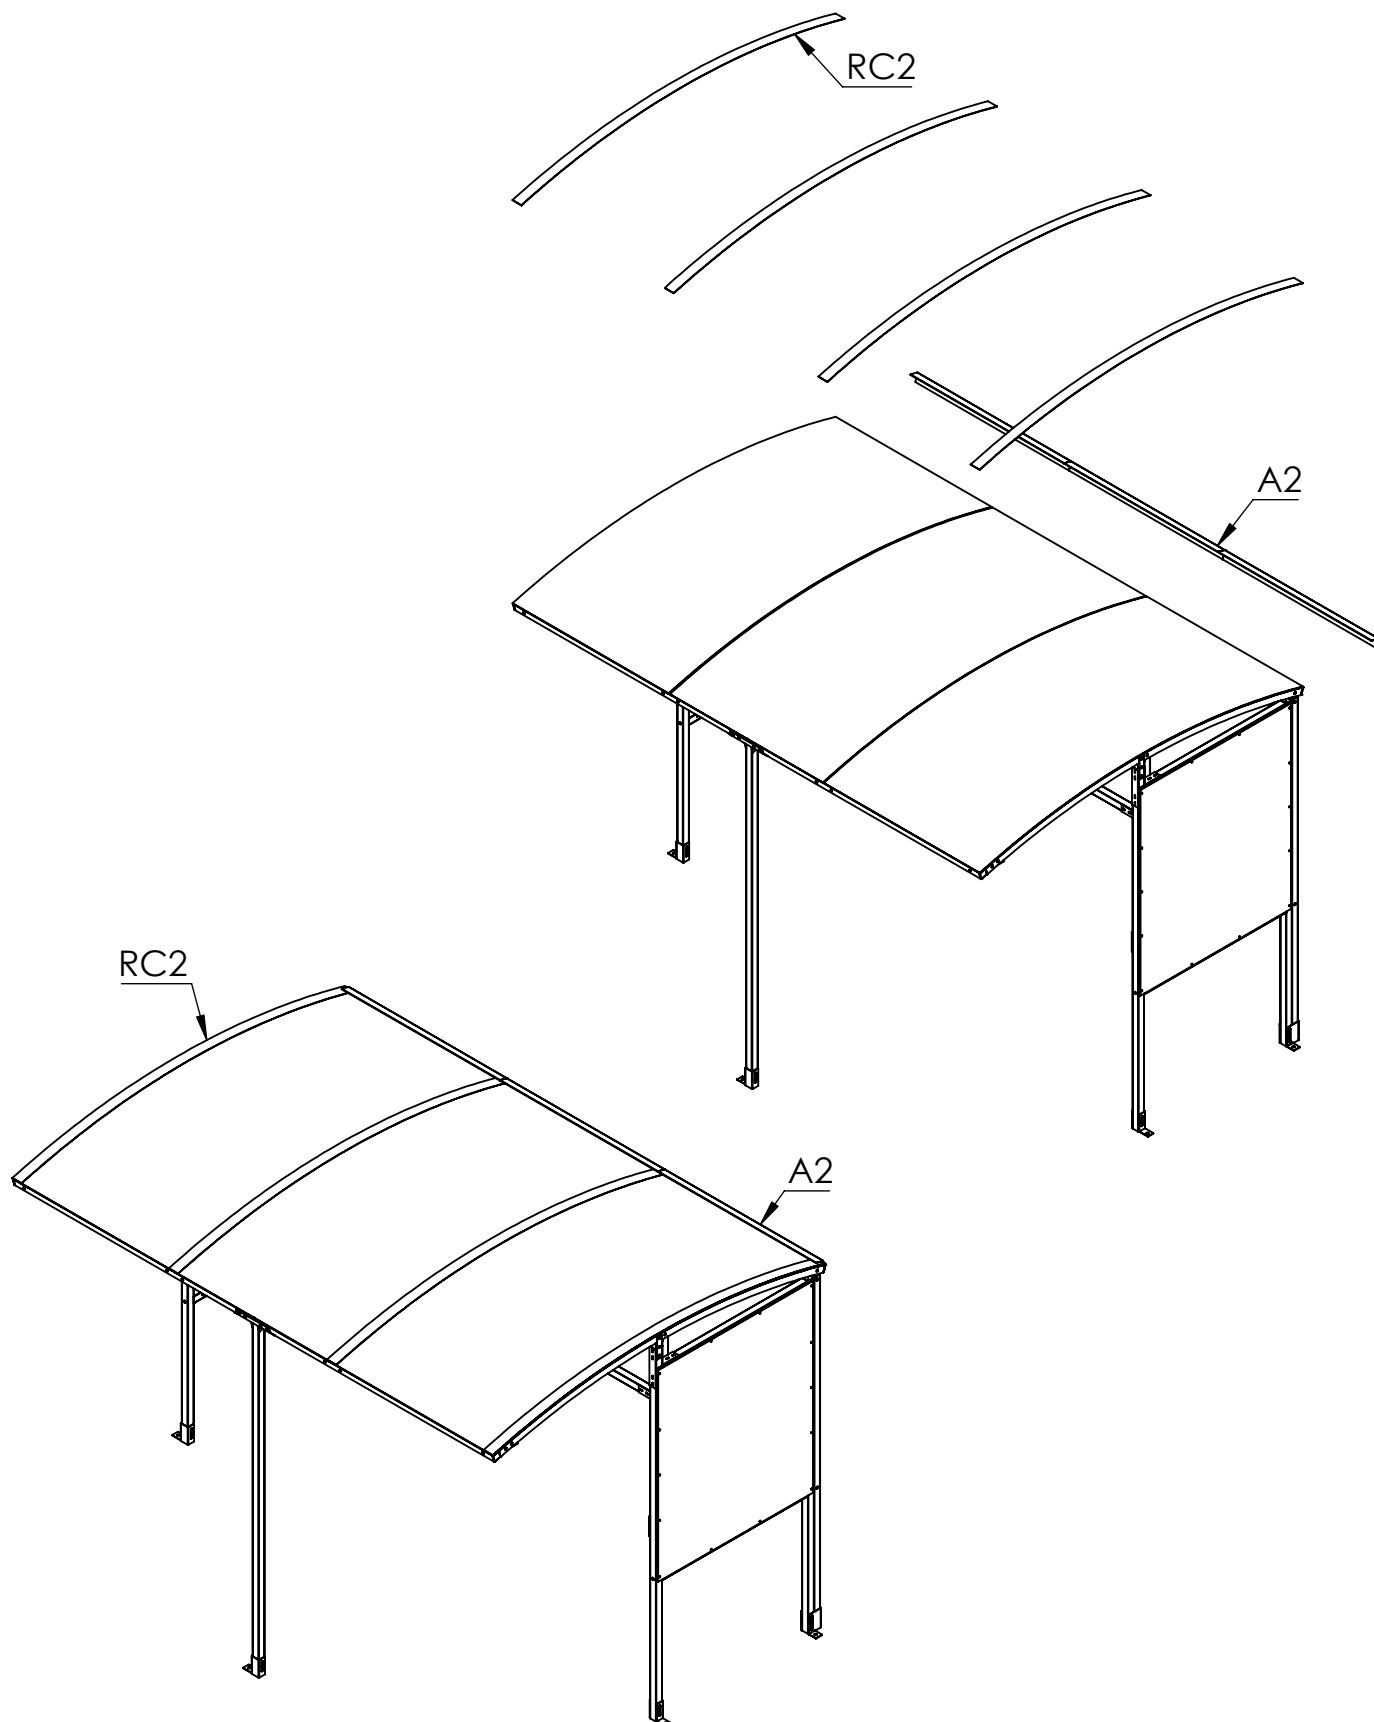

Notes:

PLAN VIEW
OVERALL DIMENSIONS AND GROUND FIXING POSITIONS

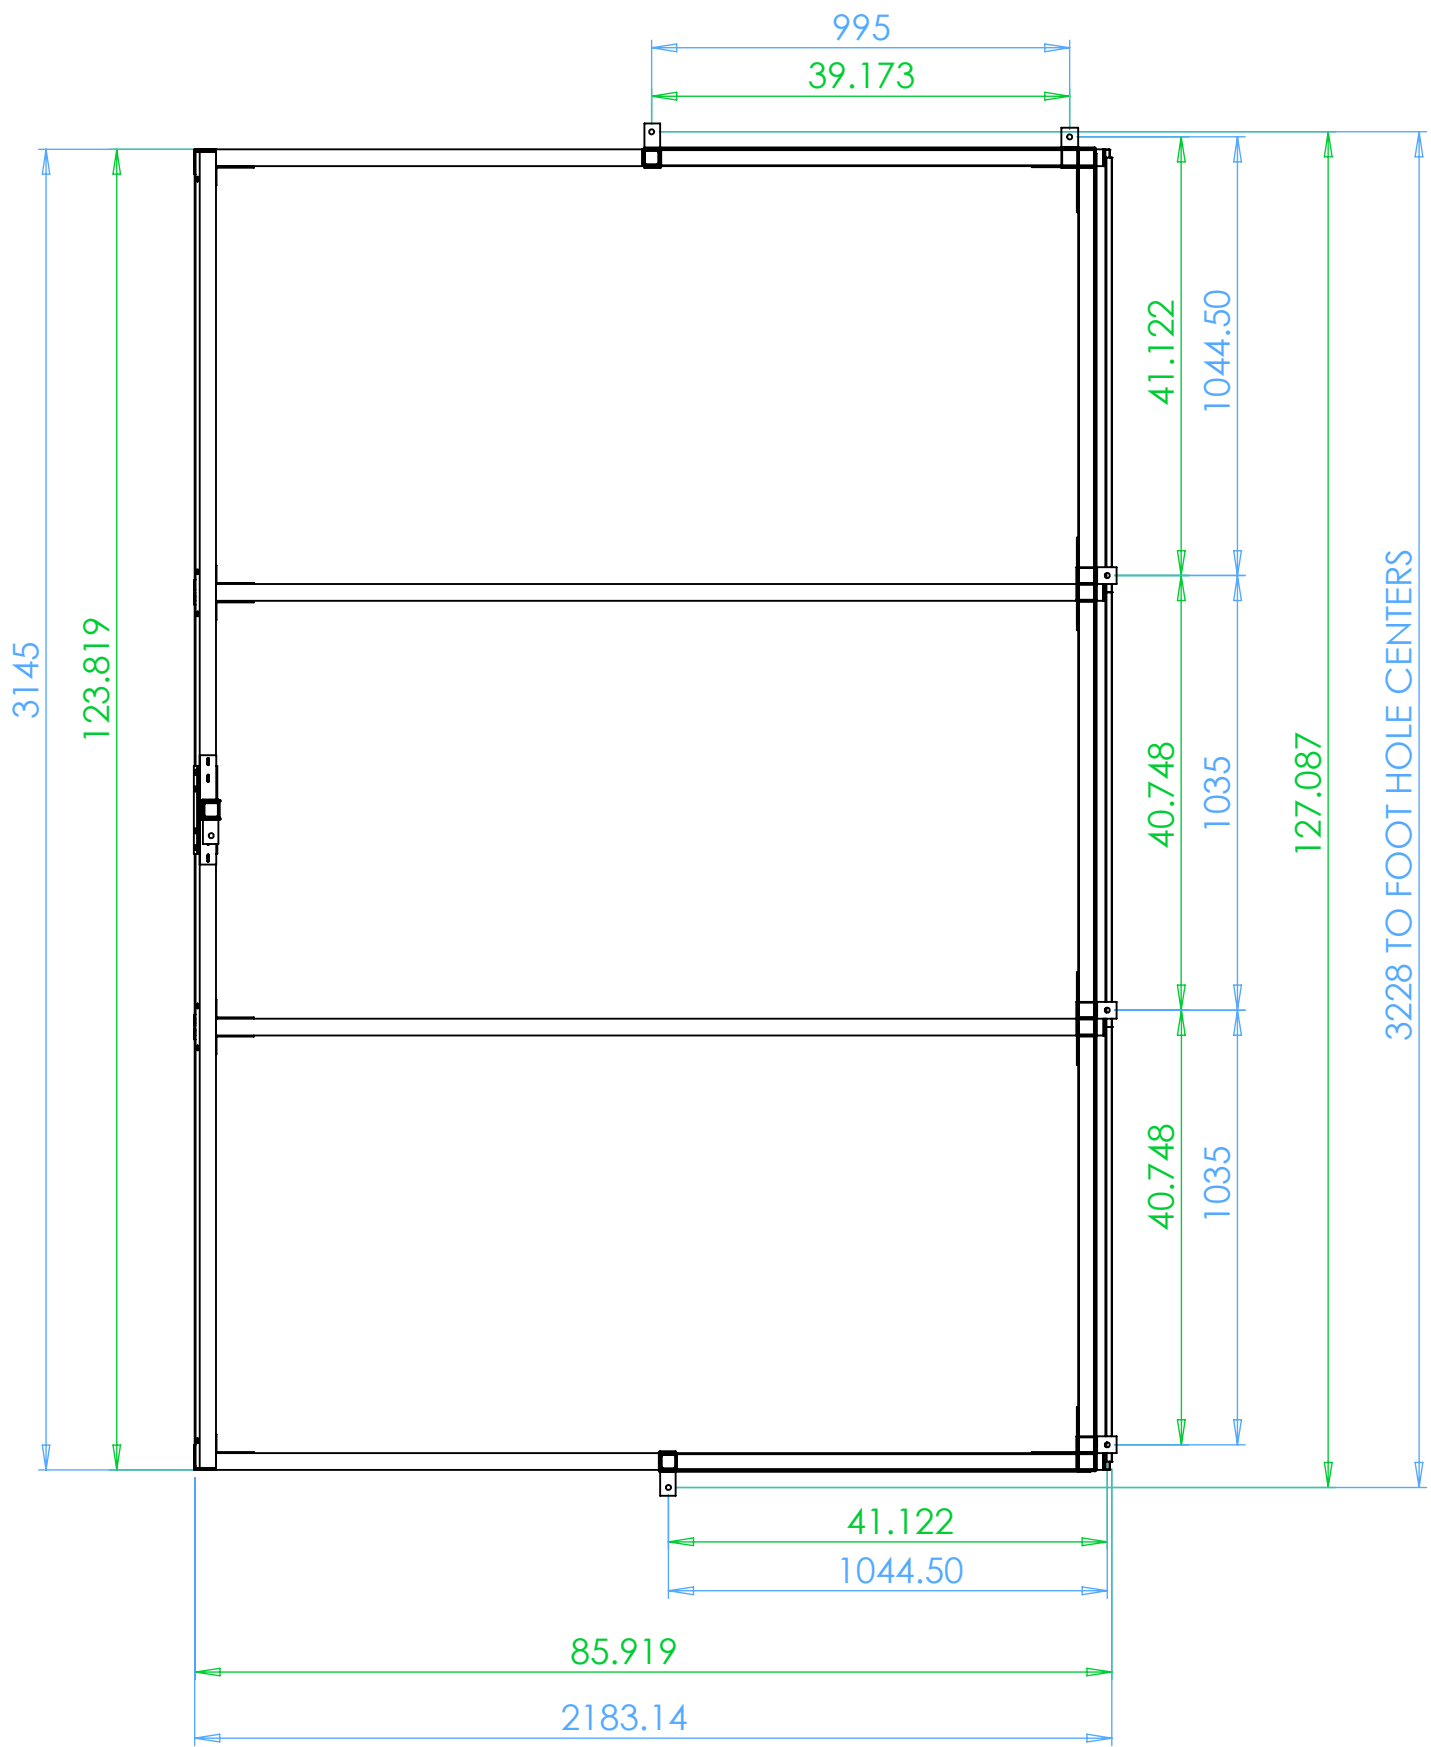

Suggested size for concrete base:
200mm oversized on all sides

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your product gives you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@shelters4less.co.uk

Web : www.shelters4less.co.uk

Tel : 0800 160 1002

Shelters4Less, Unit 3, Sharp Road, Poole, BH12 4BG

| All Parts and Fixings checked by: | |
|--|------------|
| Print Name: | Signature: |
| | |