


# Assembly Instructions

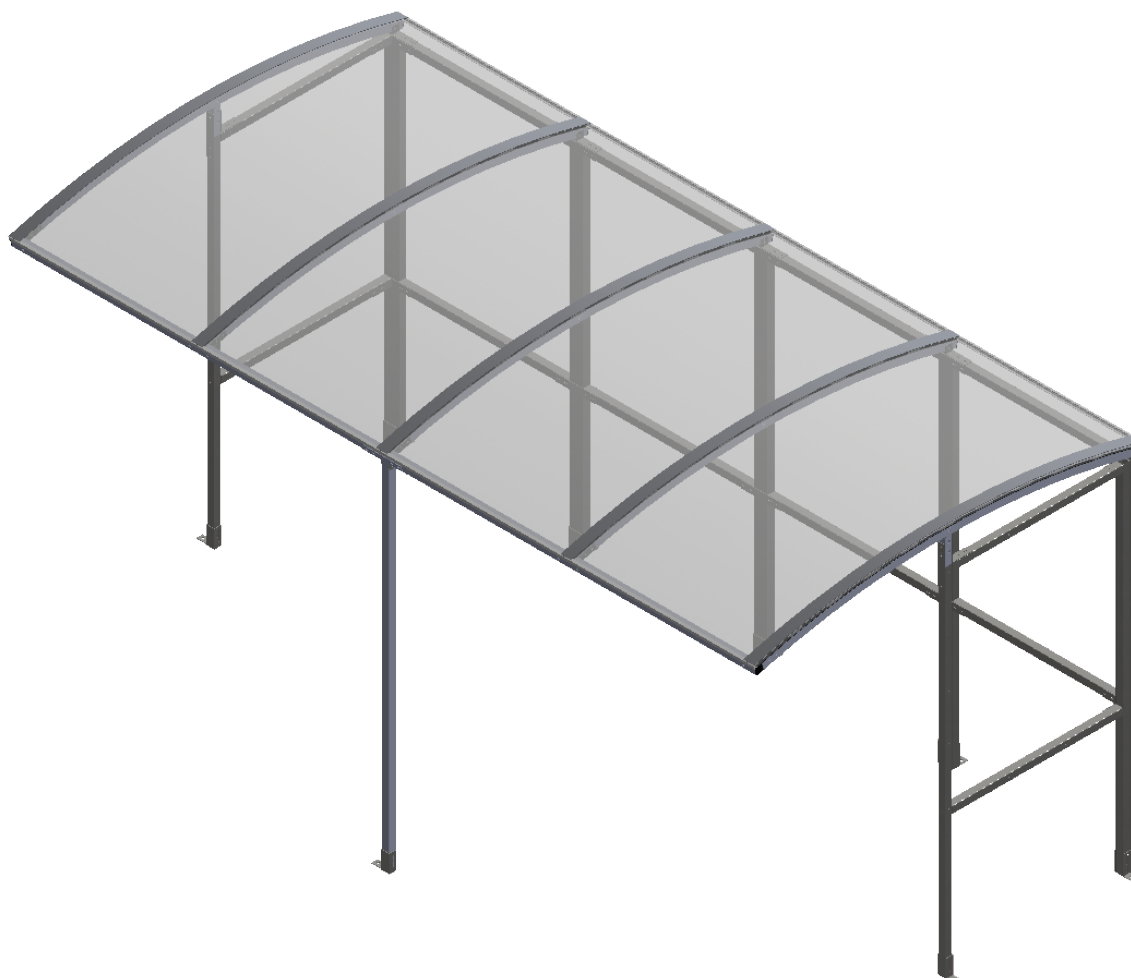



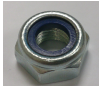





Email : [Sales@shelters4less.co.uk](mailto:Sales@shelters4less.co.uk)  
Web : [www.shelters4less.co.uk](http://www.shelters4less.co.uk)  
Tel : 0800 160 1002

**Shelter type: SR1606**

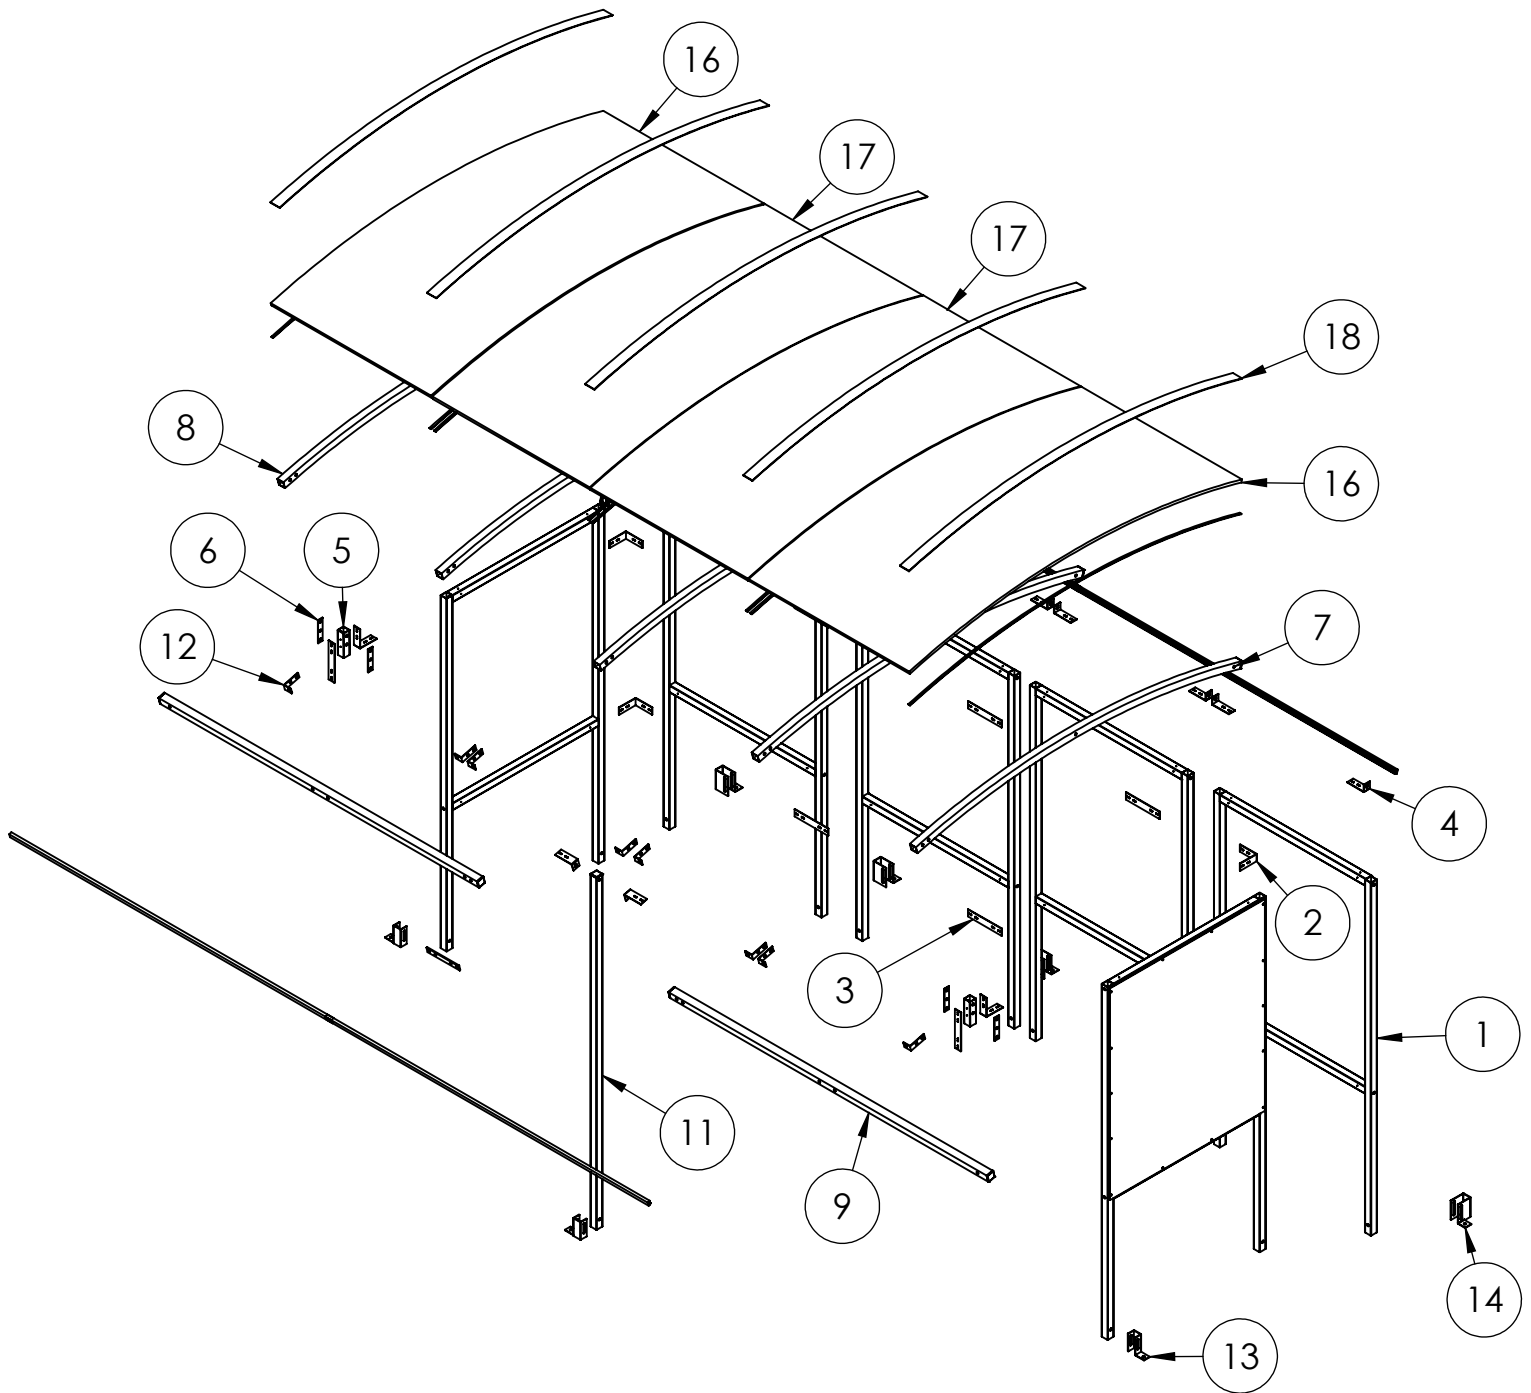


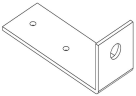


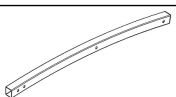
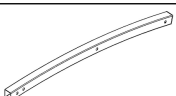
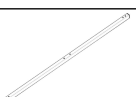
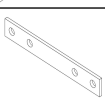
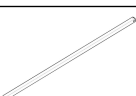
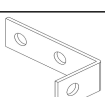



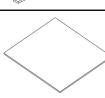
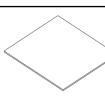
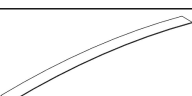
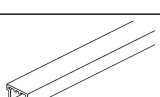
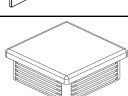
**SR1606-01-270116-UK**

# EXPLODED VIEW





Fittings	Bolt set M10	Nut	Washer	Black Cap	T25	T50	AB1210
	M10 x 60 mm				25mm Tech screw	50mm Tech screw	M10 x 100mm Concrete Bolt
Pack A+B	40	40	80	80	136	66	13
Required	40	40	80	80	76	55	8
Spare	0	0	0	0	60	11	5
Image							


# PARTS LIST

ITEM NO.	PART NO.	DESCRIPTION	DIMENSION	IMAGE	QTY.
1	S1	FRAME	2000 x 1035		6
2	CB1	BRACKET	110 x 110 x 40		6
3	JF1	BRACKET	220 x 40		8
4	RB1	BRACKET	110 x 50 x 40		10
5	S1 STUB	STUB	140 x 40 x 40		2
6	JF2	BRACKET	130 x 30		4
7	R4	RAFTER	2160 x 40 x 40		4
8	R5	RAFTER	2160 x 40 x 40		1
9	ST4	ROOF TIE	2080 x 40 x 40		2
10	JF3	BRACKET	210 x 40 x 40		1
11	P4	POST	1995 x 40 x 40		1
12	L1	L BRACKET	95 x 45		8
13	FT1	FOOT BRACKET	109 x 100 x 40		3
14	FT3	FOOT BRACKET	109 x 100 x 80		5
15	SS	SEALING STRIP	TRIM TO 2205		4
16	PCE1	ROOF PANEL	2205 x 1050		2
17	PCC2	ROOF PANEL	2205 x 1030		2
18	RC1	ROOF STRIP	2205 x 60		5
19	2MD	ROOF TRIM	TRIM TO FIT		5
20	EC40	ENDCAP	40 x 40		8




**Step 1** Assemble **S1** frames to make up the main structure using **CB1** brackets for the corners and **JF1** brackets for the straight joints.

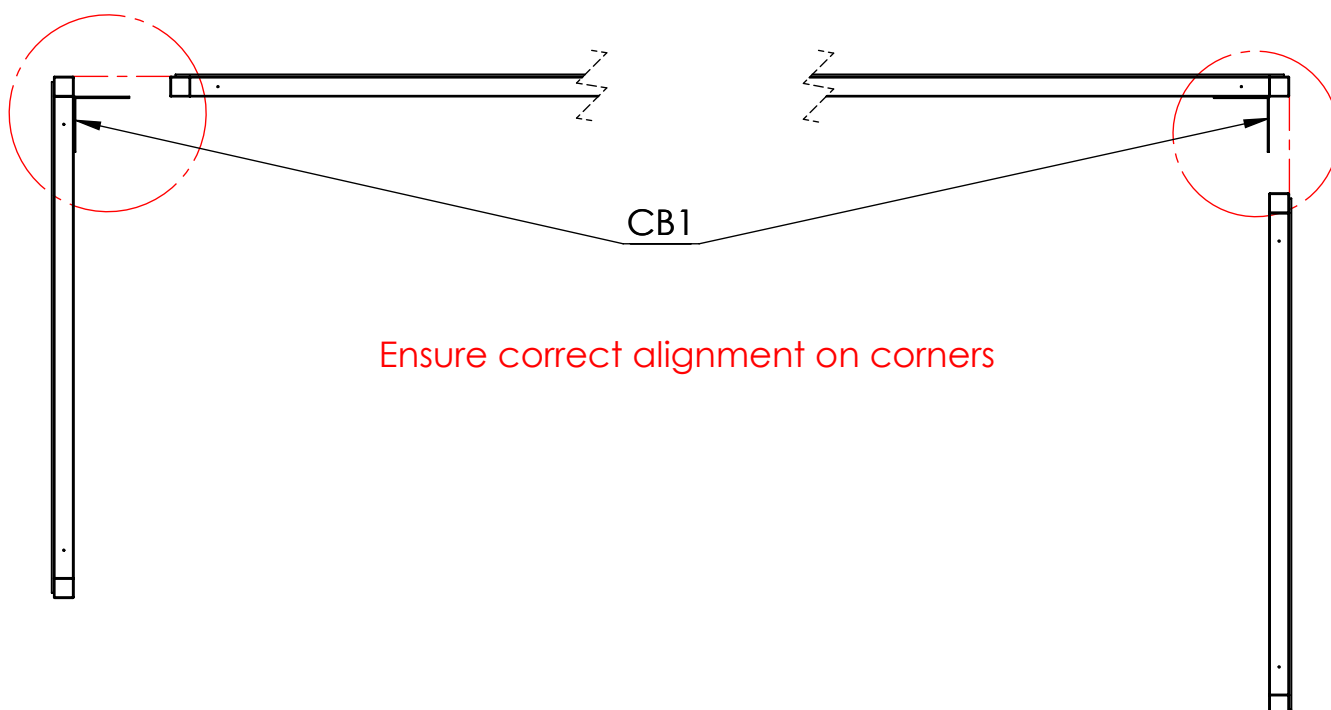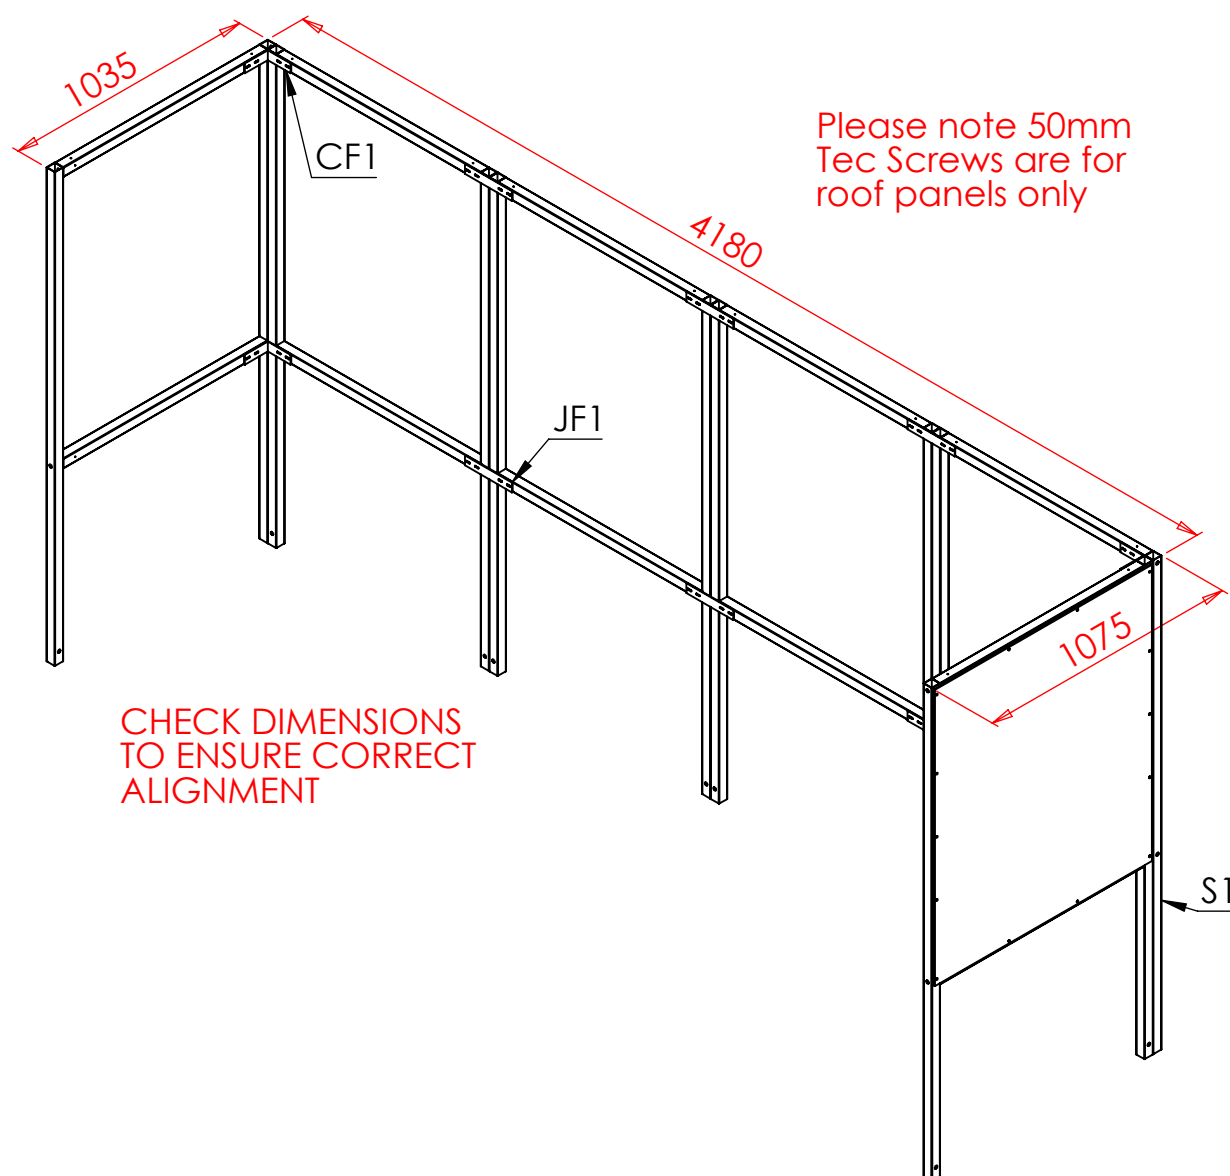

**Step 2** Attach the **S1 stubs** to the front of the frame using **CB1**, **JF1** and **JF3** brackets, then bolt the **R4** and **R5** rafters into place using the **RB1** brackets and the stubs

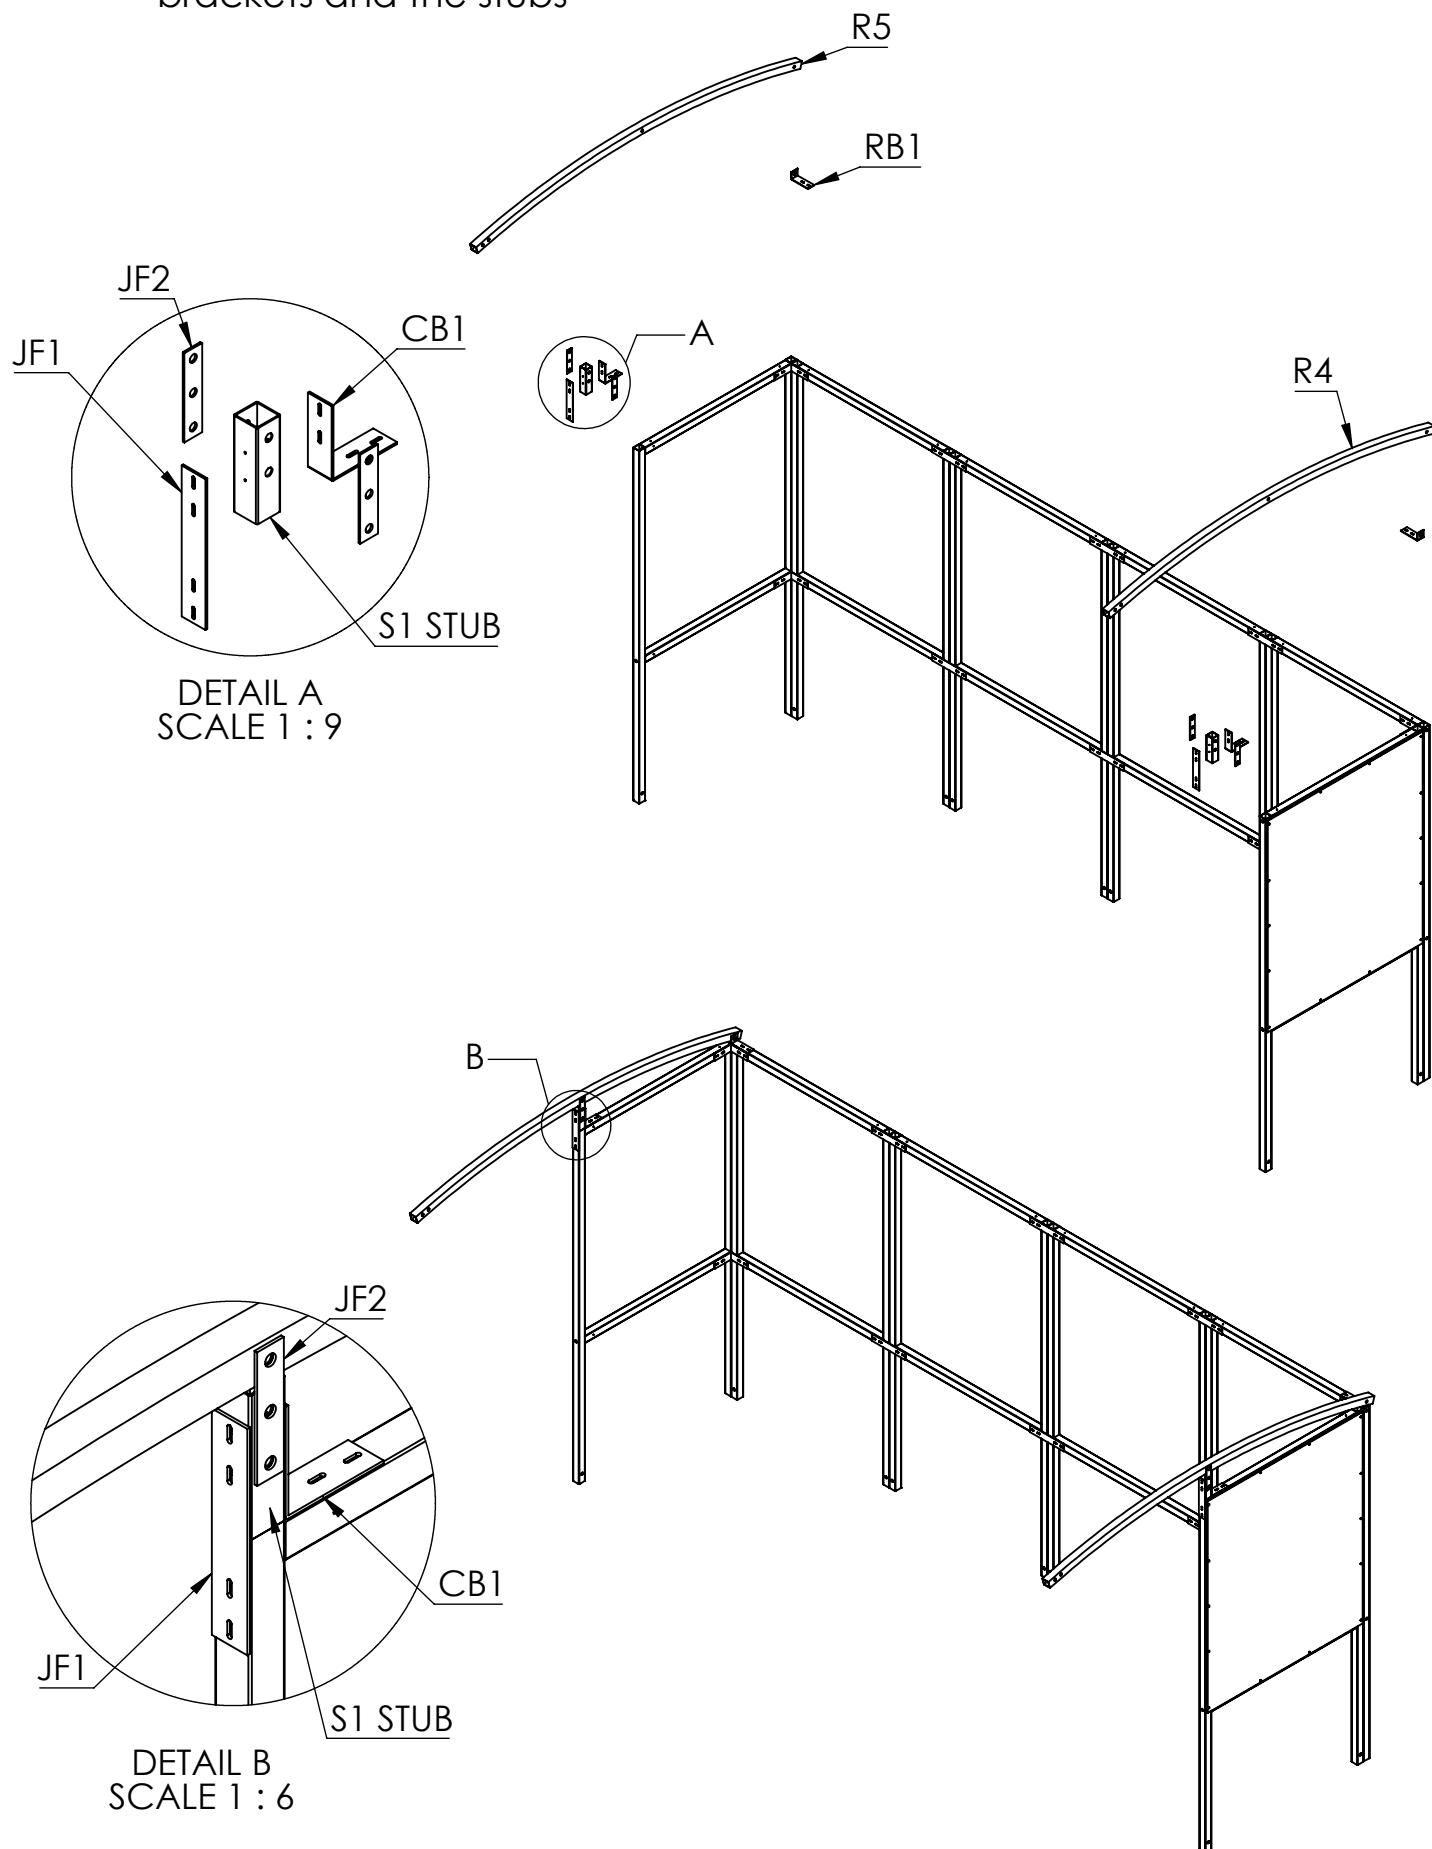

**Step 3** Assemble the T-section by joining the two **ST4** tie bars using a **JF3** bracket then join the **P4** post using two **RB1** brackets and attach a **L1** bracket to each end.

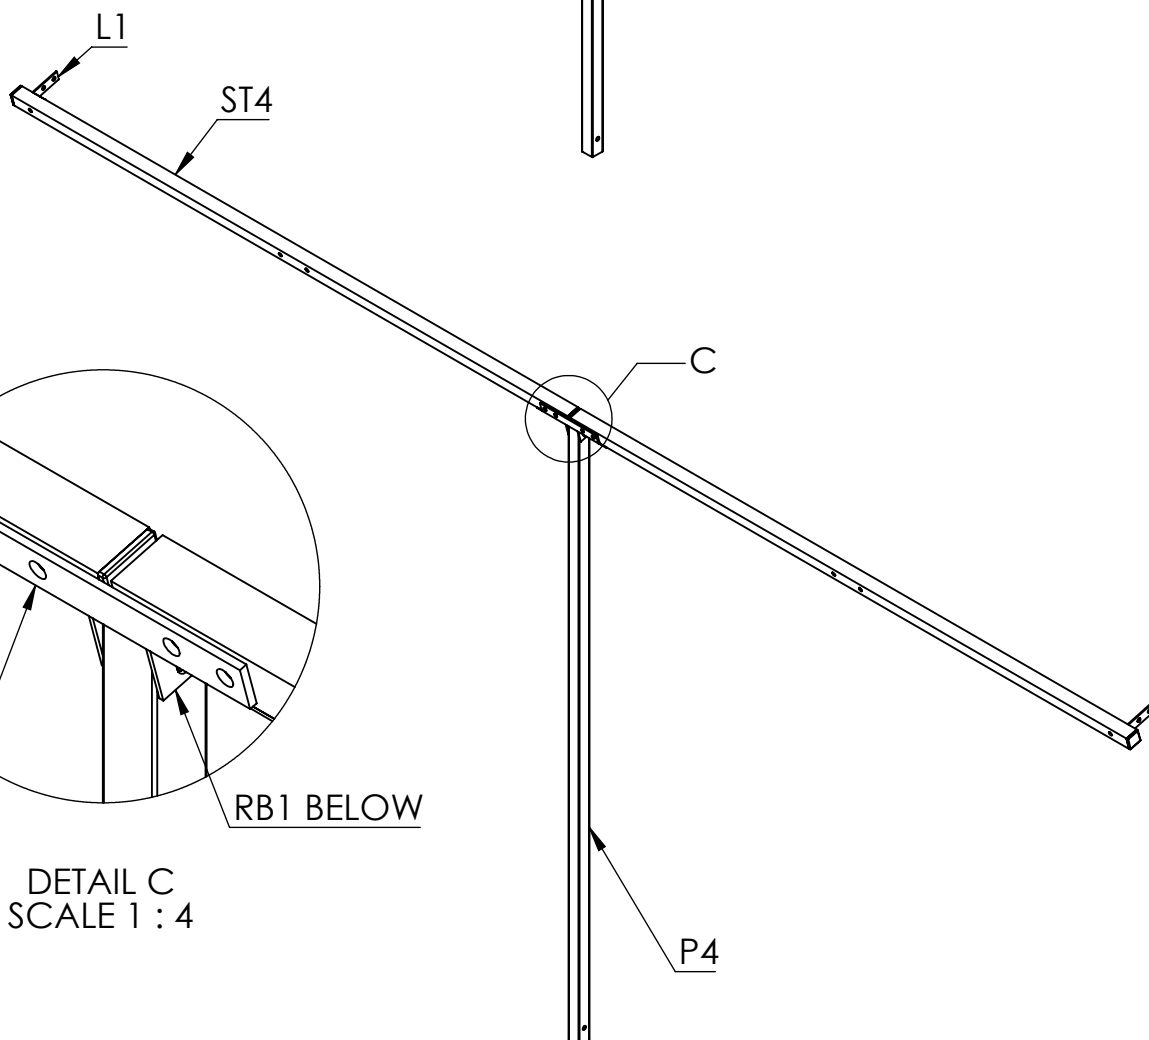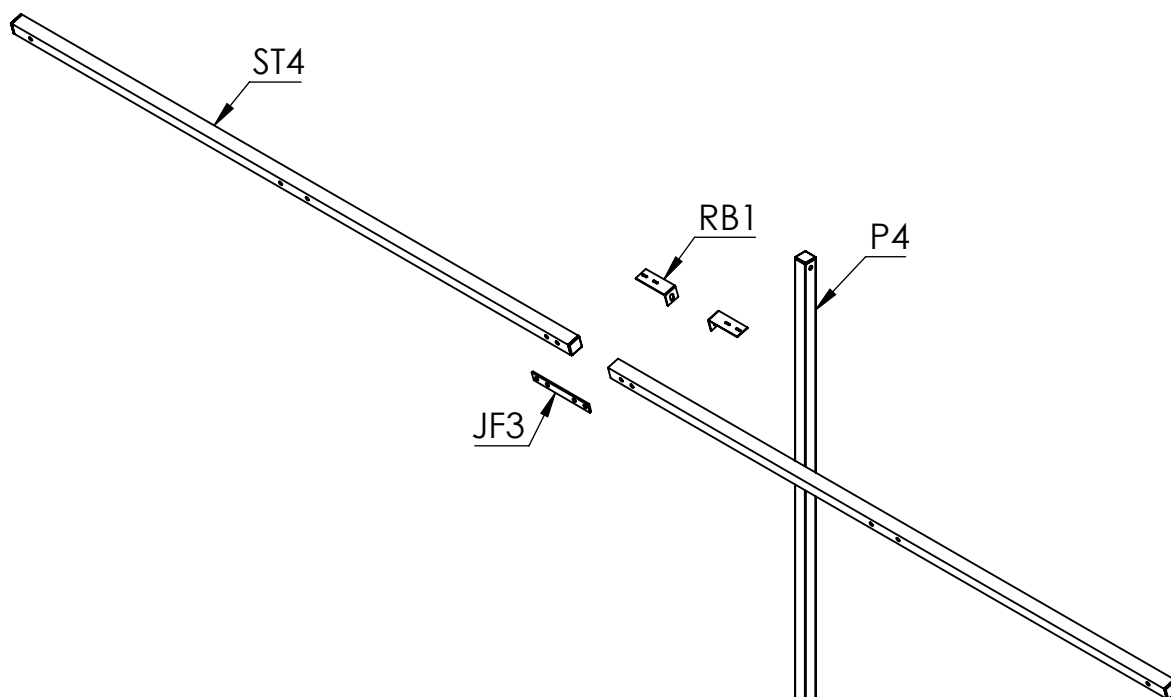


JF3 ON FRONT


RB1 BELOW

DETAIL C  
SCALE 1 : 4

**Step 4** Attach the T-section to the shelter, then fix the **R4** rafters in place using more **RB1** brackets on the rear and **L1** brackets on the front. Bolt the **FT1** and **F3** brackets to the shelter and move it to its final position before using anchor bolts to secure it to the ground.

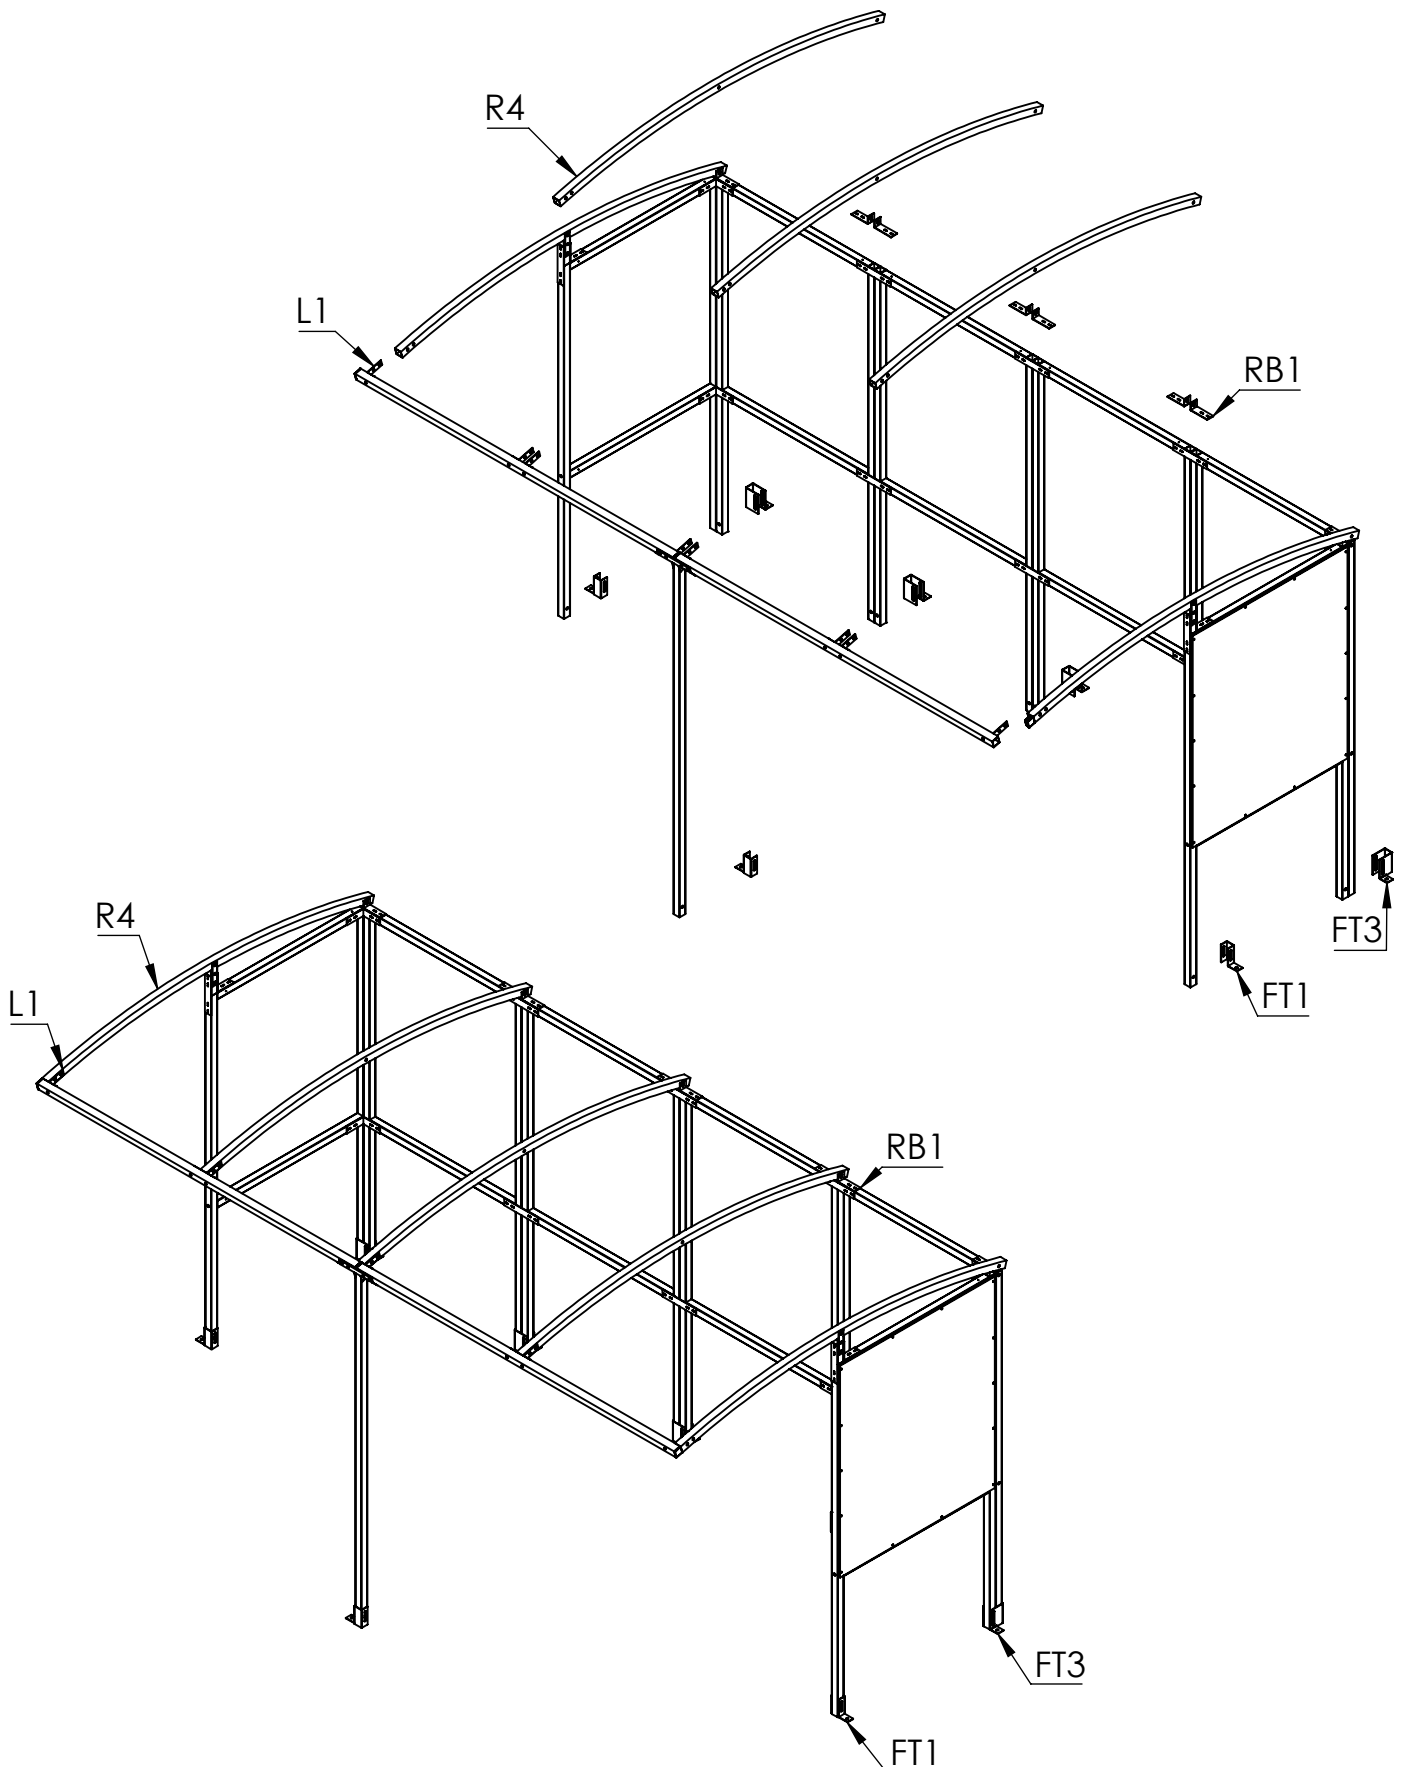


**Step 5** Stick the sealing strips (**SS**) to the rafters and line up the **PCE2** panels with the outside of the shelter then equally space the **PCC2** panels in the gap. Apply more sealing strips on the top of the roof panels directly above the strips on the rafters.

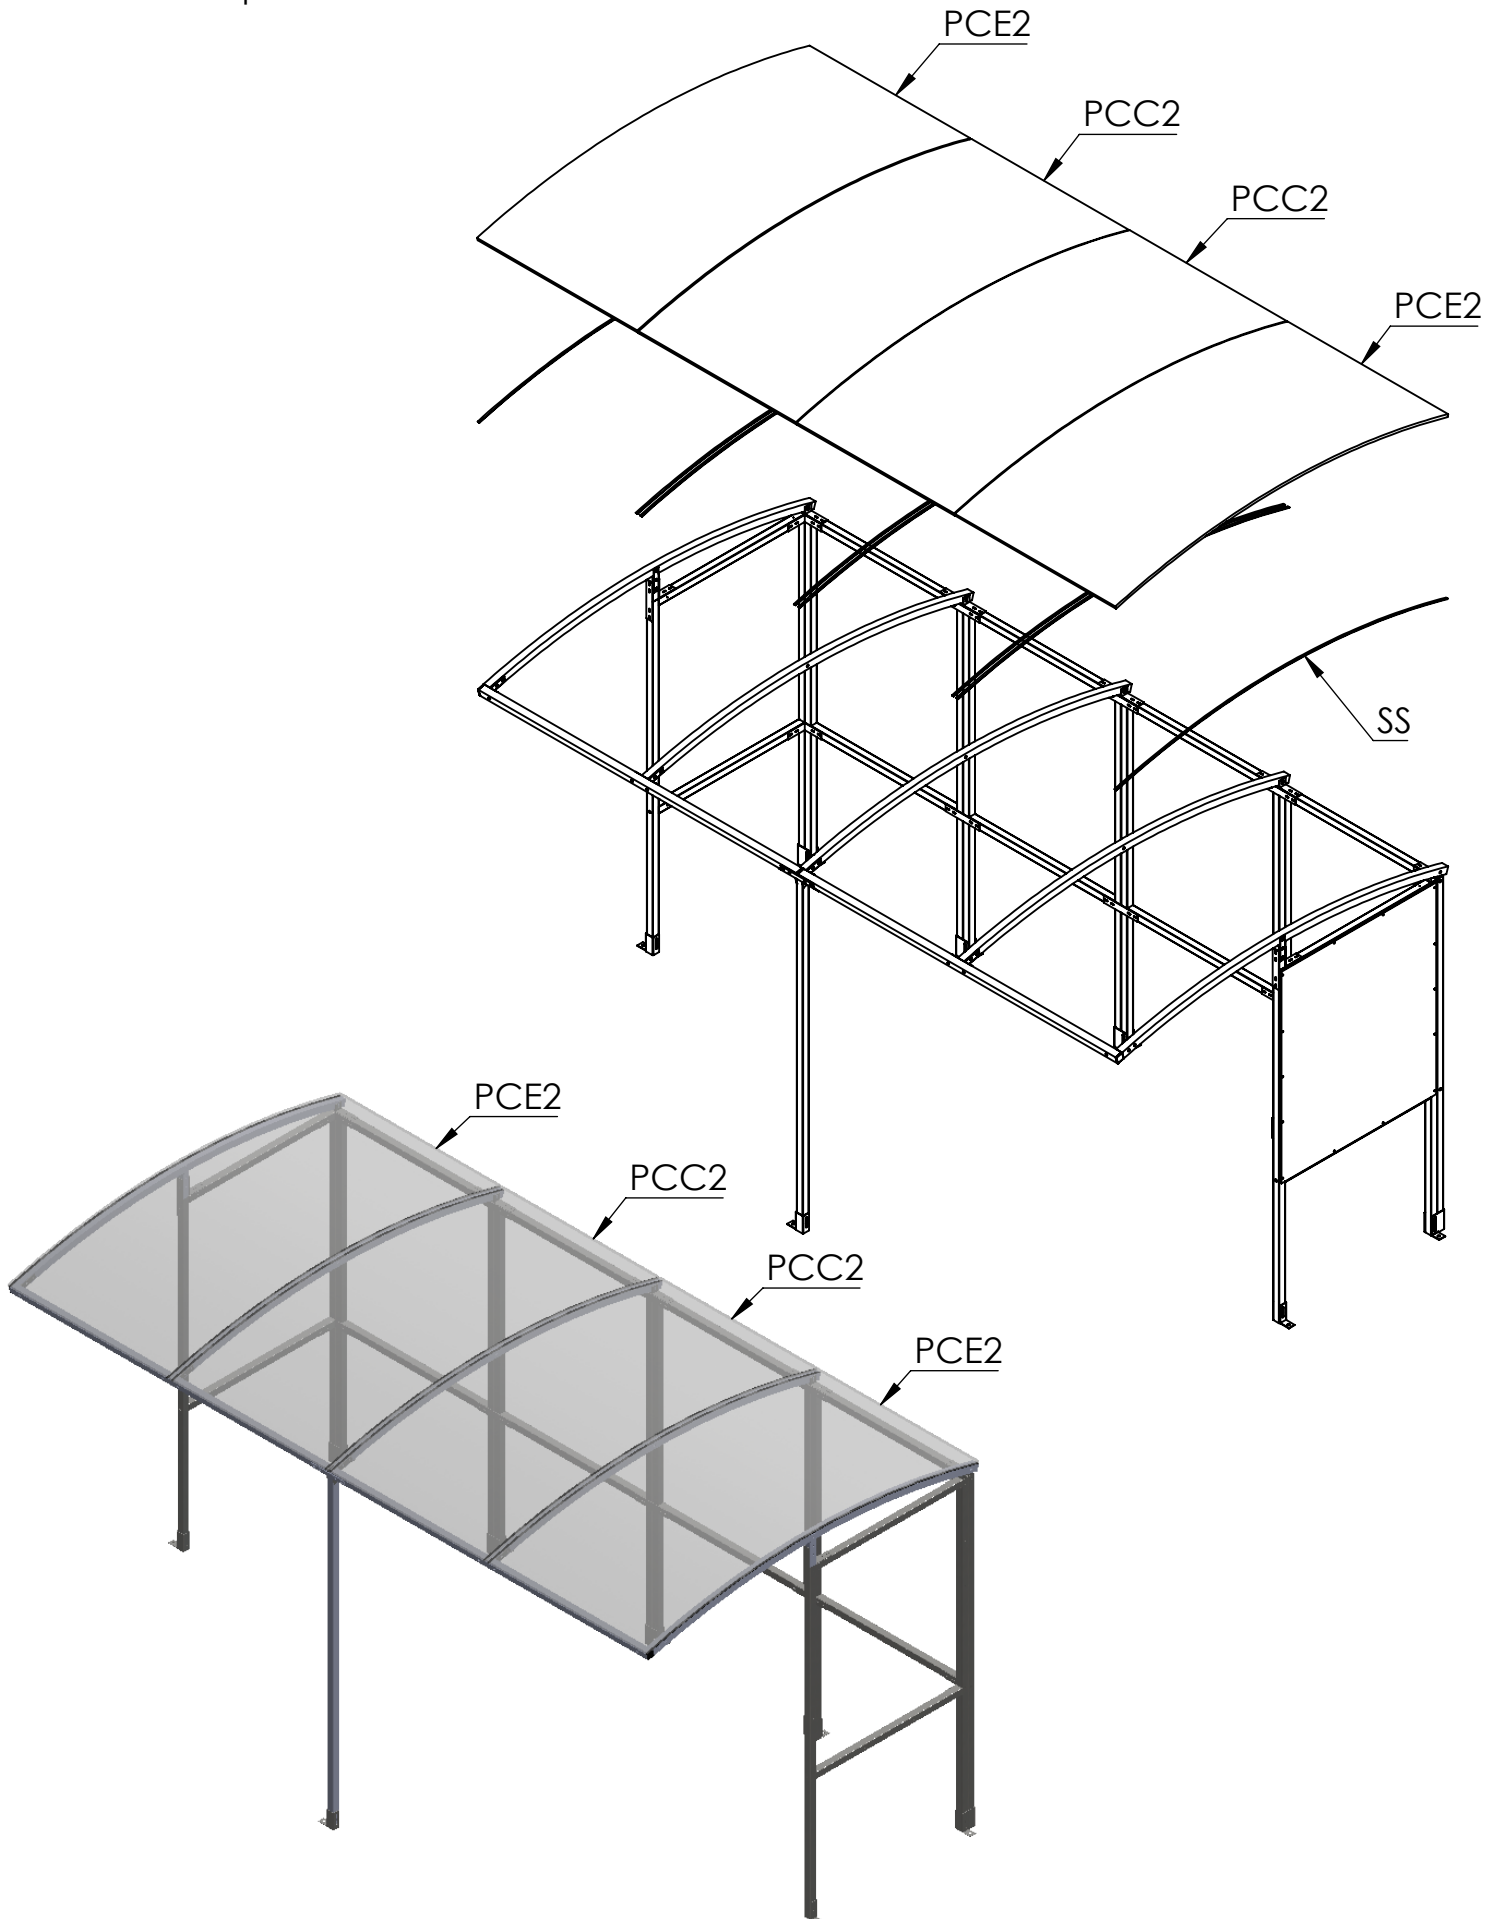




**Step 6** Screw down the **RC2** strips into the rafter with the **50mm tech screws** to secure the roof panels and push the **2MD** end caps on the bottom of the panels.

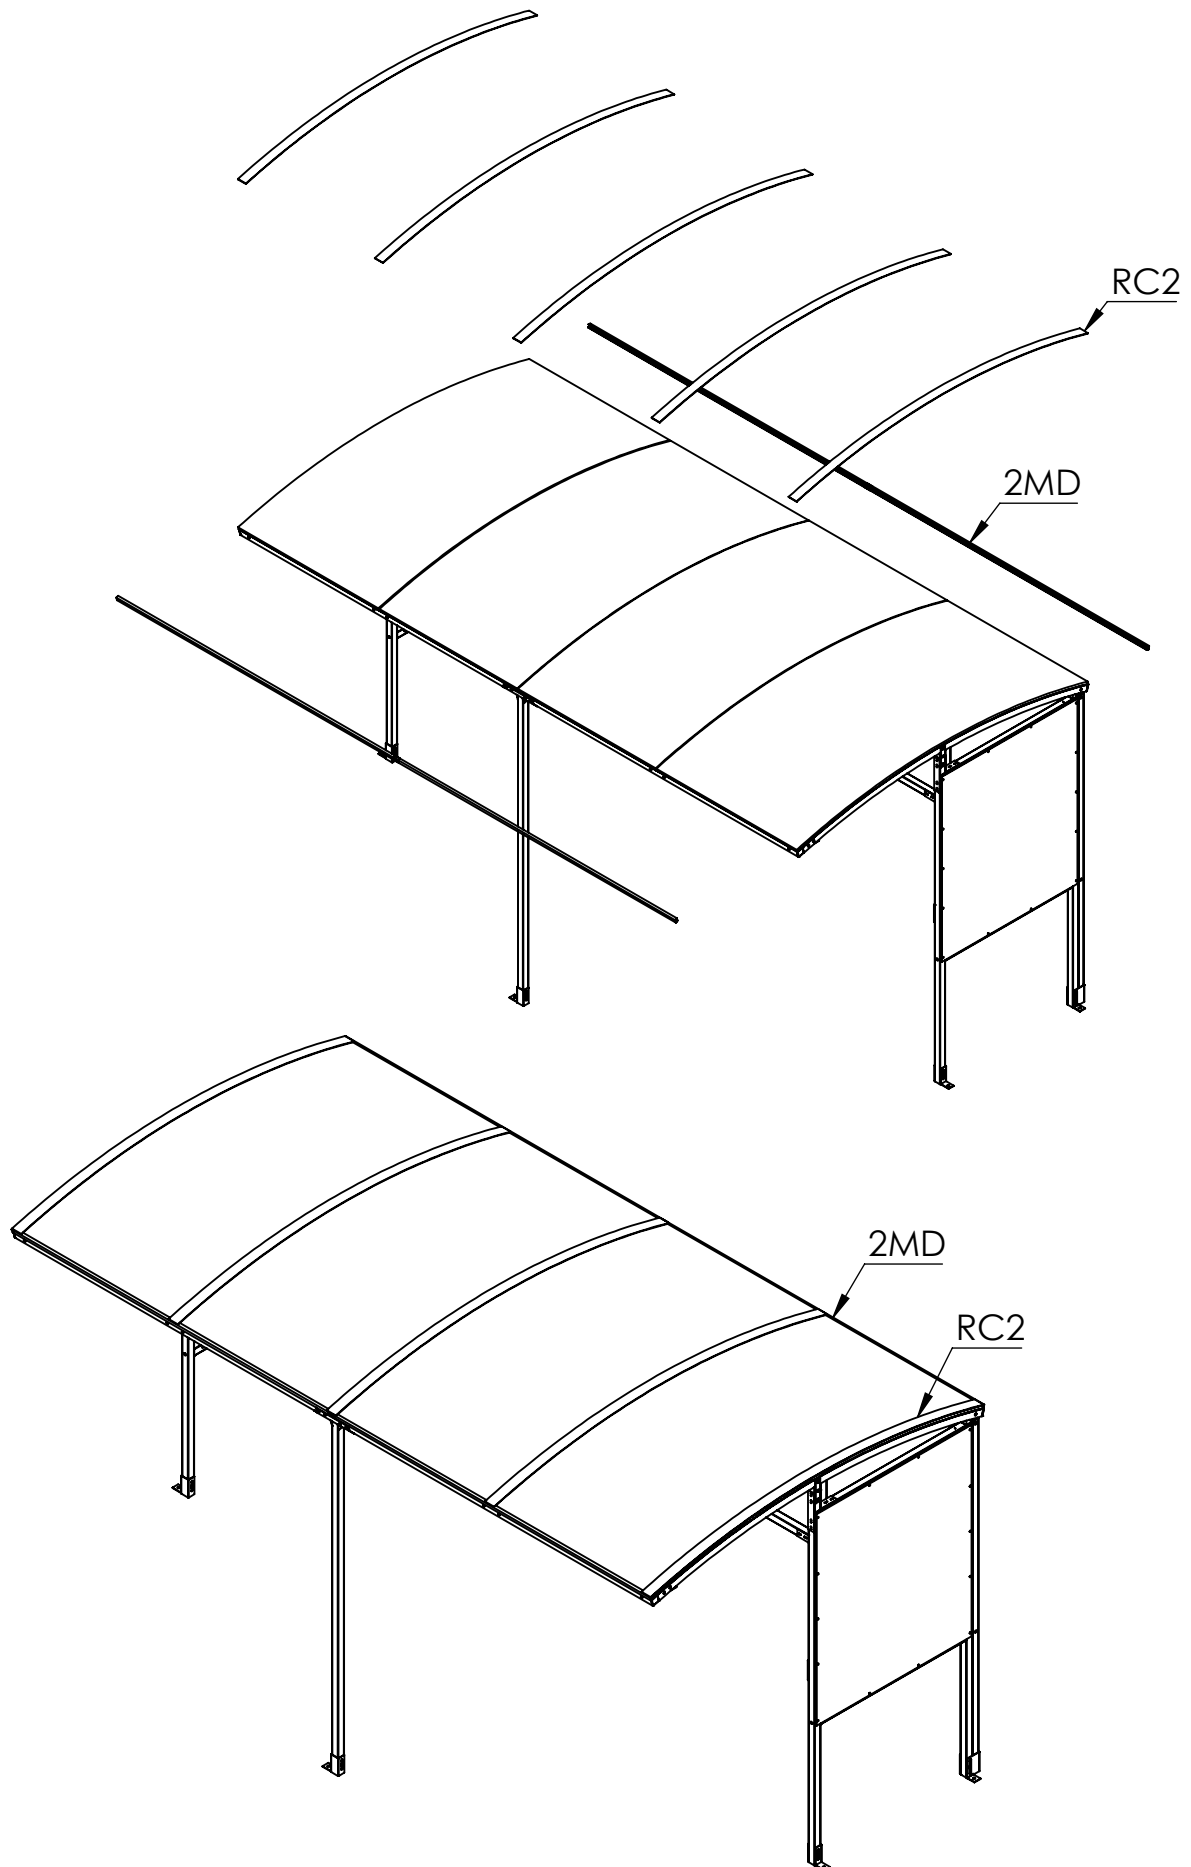

# PLAN VIEW

OVERALL DIMENSIONS AND GROUND FIXING POSITIONS

Suggested size for concrete base: 200mm oversized on all four sides.

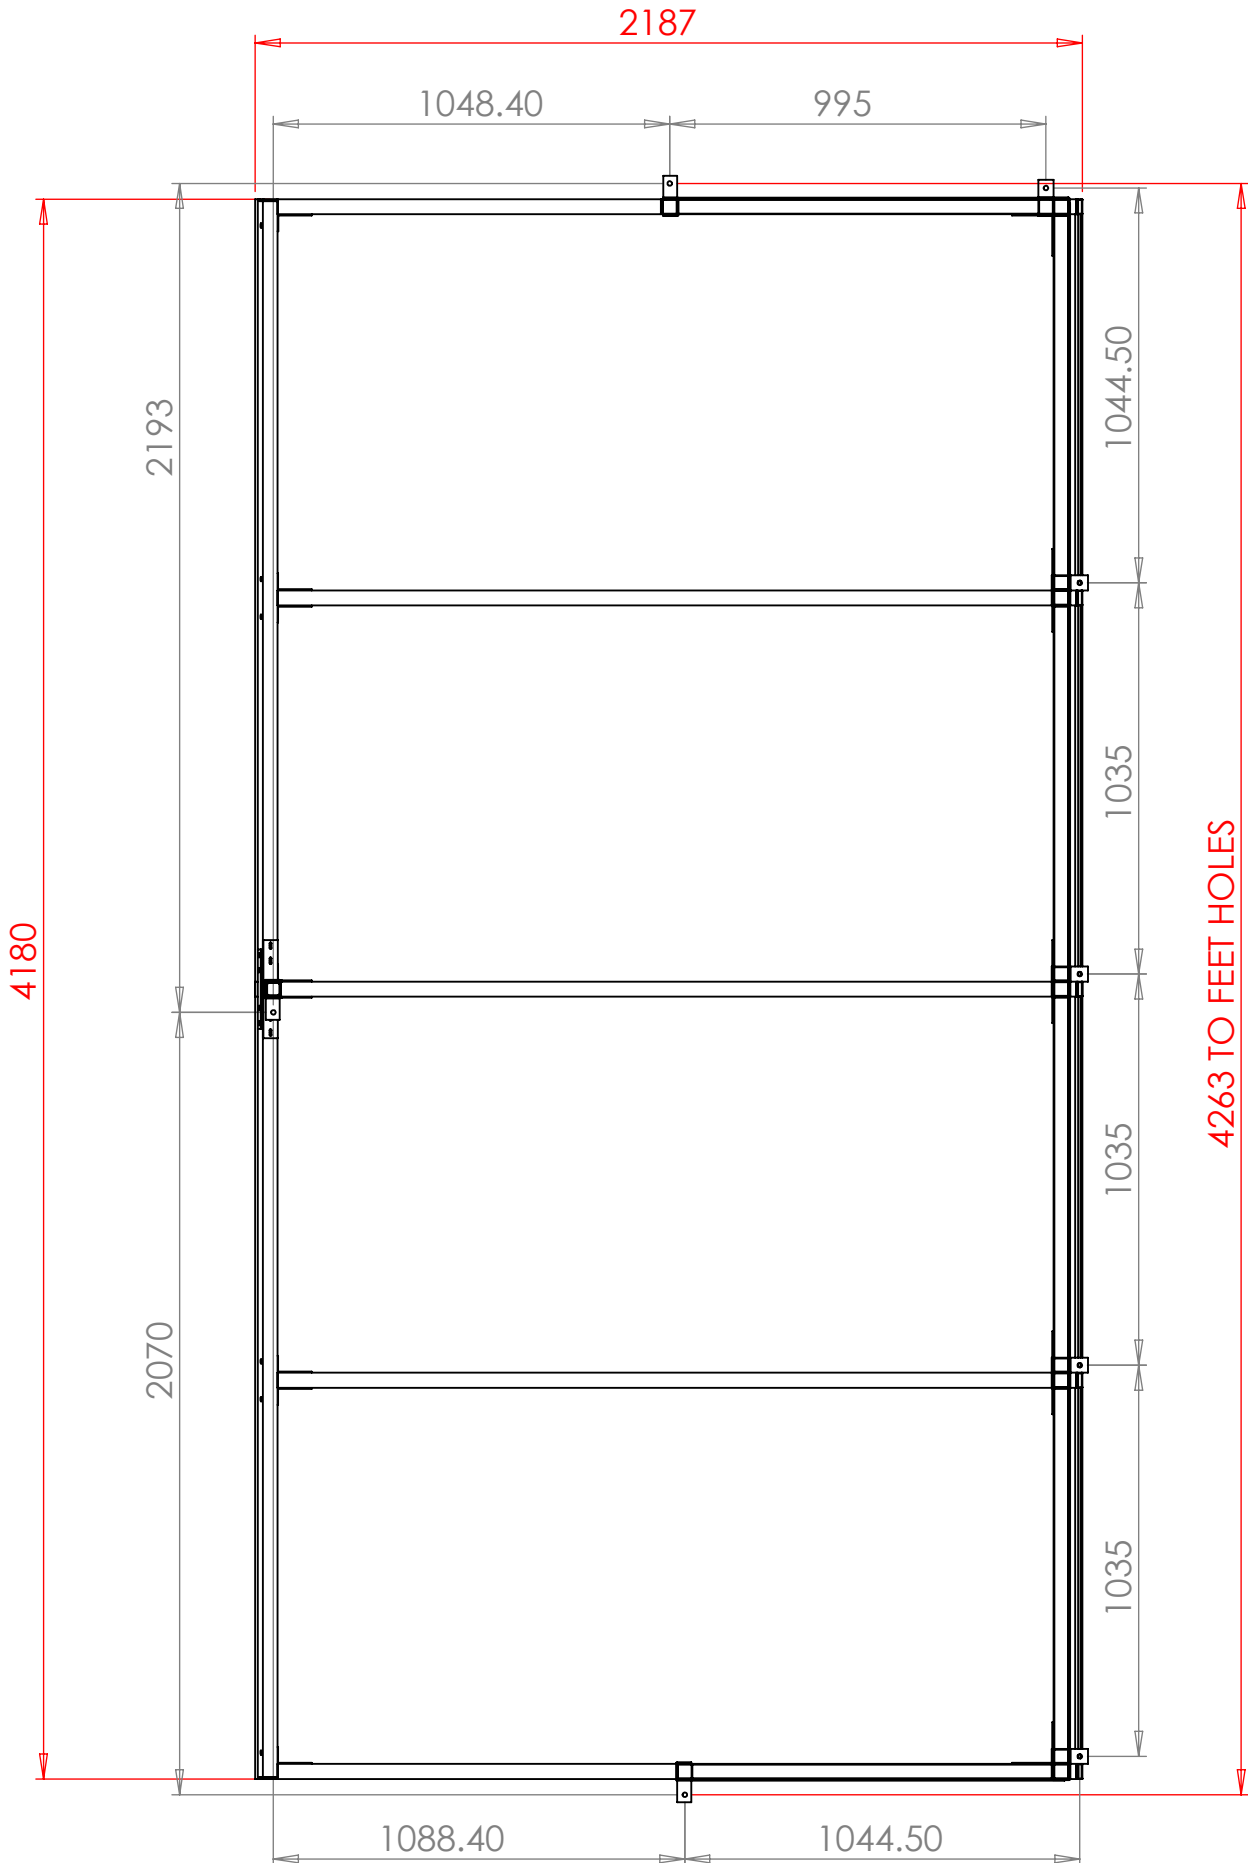

**Notes:**

# THANK YOU FOR PURCHASING THIS PRODUCT

## **MAINTENANCE:**

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

## **CONTACT DETAILS:**

Email : Sales@shelters4less.co.uk

Web : [www.shelters4less.co.uk](http://www.shelters4less.co.uk)

Tel : 0800 160 1002

Shelters4Less, Unit 3, 2 Lansdowne Crescent, Bournemouth, BH1 1SA

<b>All Parts and Fixings checked by:</b>	
Print Name:	Signature: