


Assembly Instructions

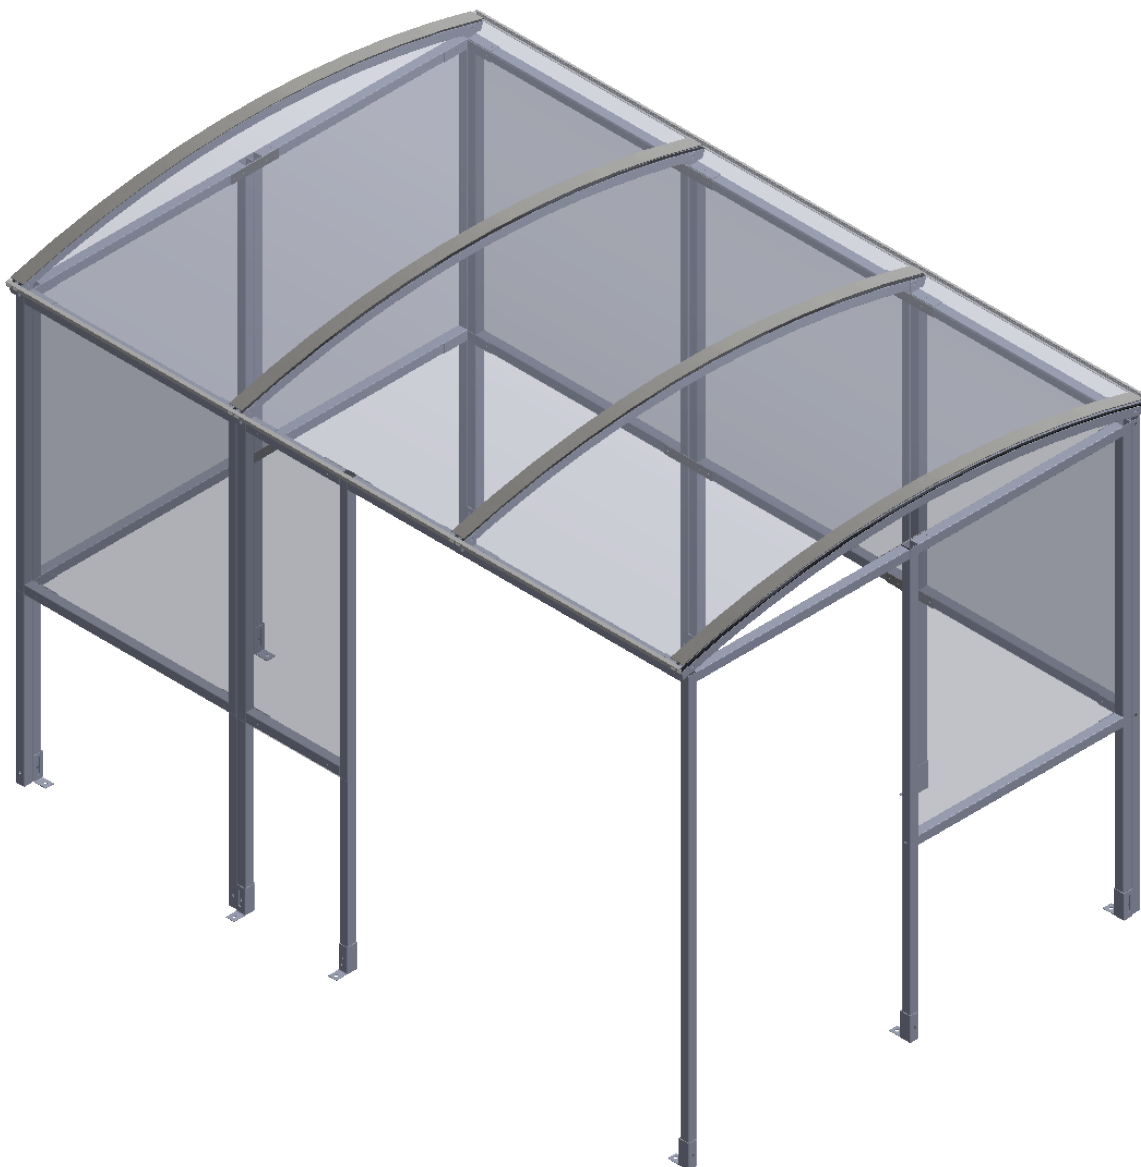

No Butts Bin Co.
Better Ash & Trash Solutions
Est. 1991

Email : Sales@nobutts.com


Web : www.nobutts.com

Tel : 1-888-662-8887

Shelter type: SR1555

SR1555-01-150116-USA

Exploded View of Shelter

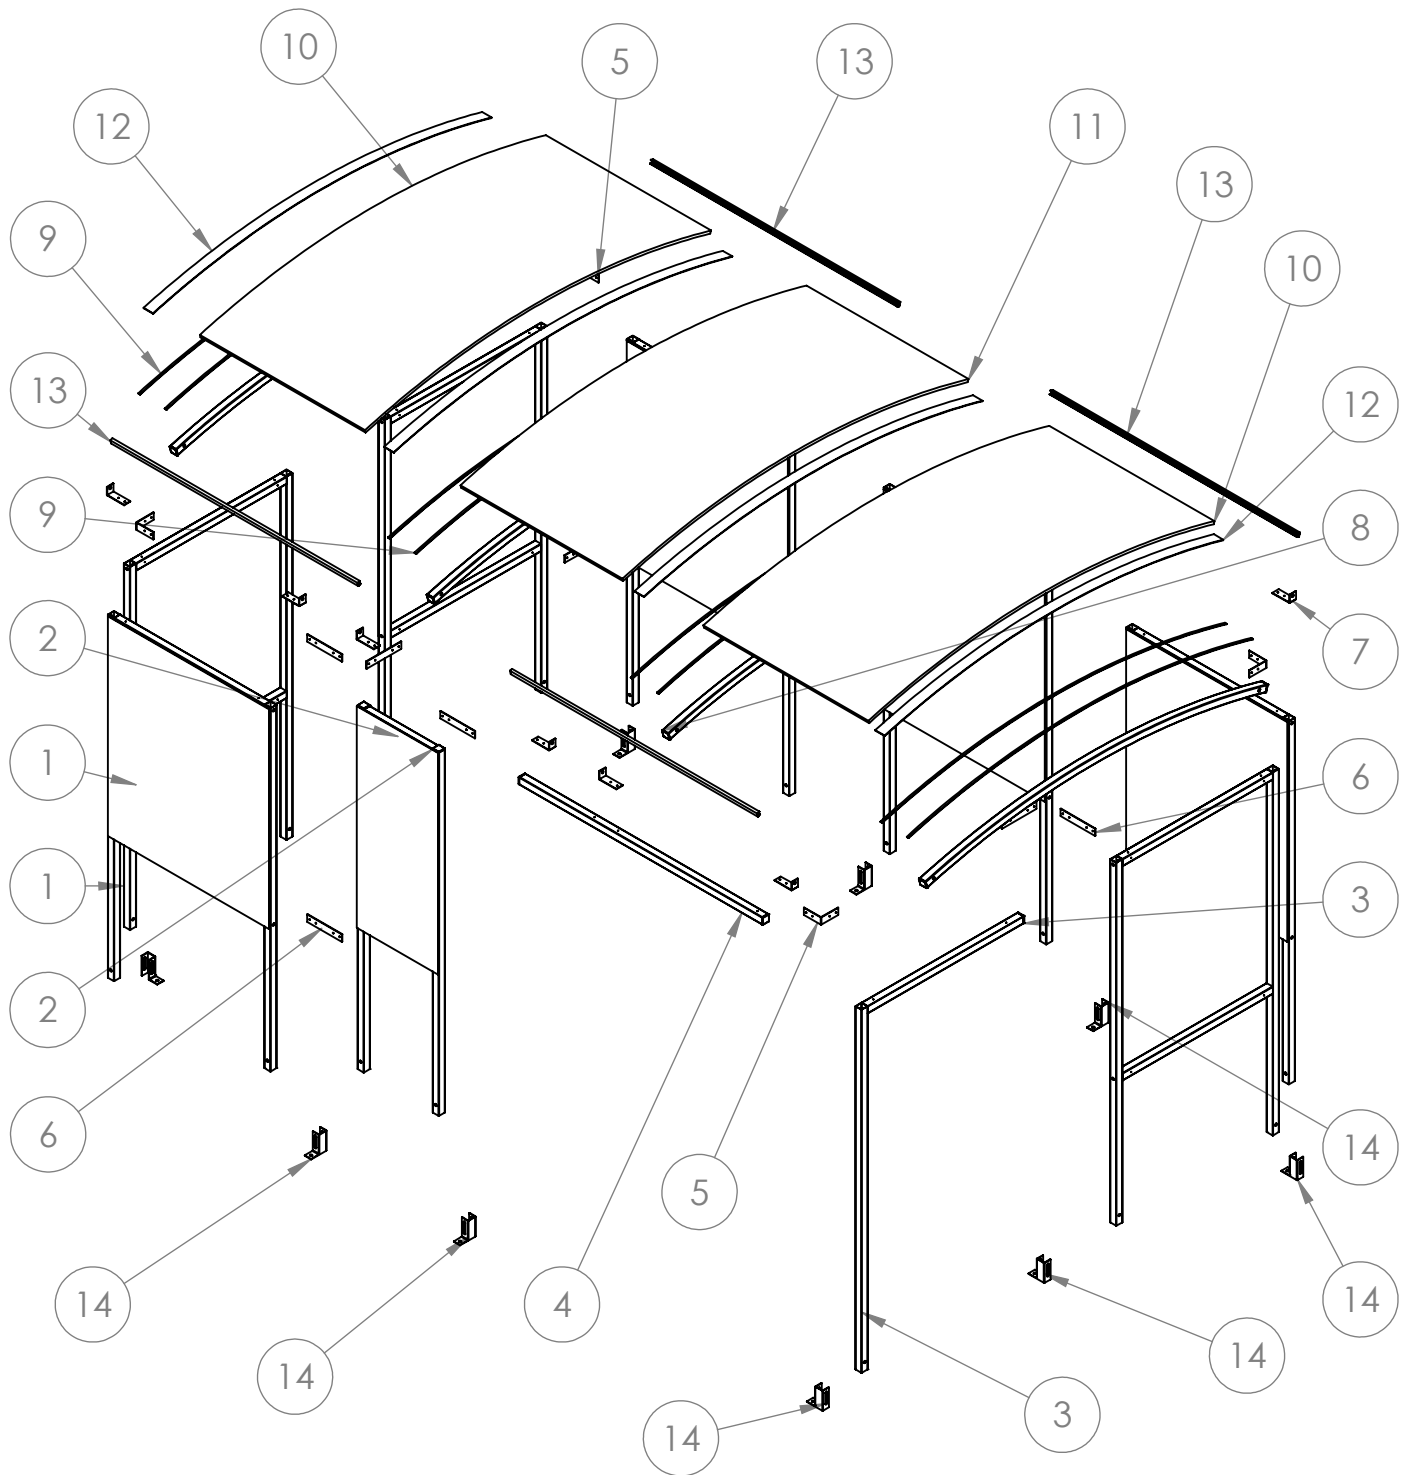

Tools required:



Drill/Screwdriver



Mallet



Hack saw

Tools included:

























Wrench





Torx bit

PARTS LIST


ITEM NO.	PART NO.	DESCRIPTION	DIMENSIONS	IMAGE	QTY.
1	S1	Frame	$78\frac{3}{4} \times 40\frac{3}{4}$		7
2	S3	Frame	$78\frac{3}{4} \times 20\frac{1}{3}$		1
3	P1	Post	$78\frac{3}{4}$		1
4	ST5	Roof Tie	$60\frac{3}{4}$		1
5	CB1	Bracket	$4\frac{1}{3} \times 4\frac{1}{3}$		7
6	JF1	Bracket	$8\frac{2}{3} \times 1\frac{5}{8}$		10
7	RB2	Bracket	$4\frac{1}{3} \times 1\frac{3}{4}$		12
8	R2	Rafter	$86\frac{5}{8}$		4
9	SS	Sealing Strip	Trim to $87\frac{3}{8}$		8
10	PCE2	Roof Panel	$87\frac{3}{8} \times 41\frac{3}{8}$		2
11	PCC2	Roof Panel	$87\frac{3}{8} \times 40\frac{1}{2}$		1
12	RC2	Roof strip	$85\frac{7}{8}$		4
13	2MD	Edge trim	$61\frac{7}{8}$		4
14	FT1	Bracket	$4\frac{1}{3} \times 4$		10
15	EC40	Plastic End cap	$1\frac{1}{2} \times 1\frac{1}{2}$		12

Fittings	Bolt set M10			T25	T50		BTANCM12100
	3/8th x 2 3/8"	Nut	Washer	1" Tech screw	2" Tech screw	Black Caps	1/2 x 4" Concrete Bolt
Pack B	33	33	66	136	40	66	11
Required	28	28	56	72	32	56	8
Spare	5	5	10	64	8	10	3
Image							


Step 1 Assemble **S1** frames to make up the main structure using **CB1** brackets for the Corners and **JF1** brackets for the straight joints.

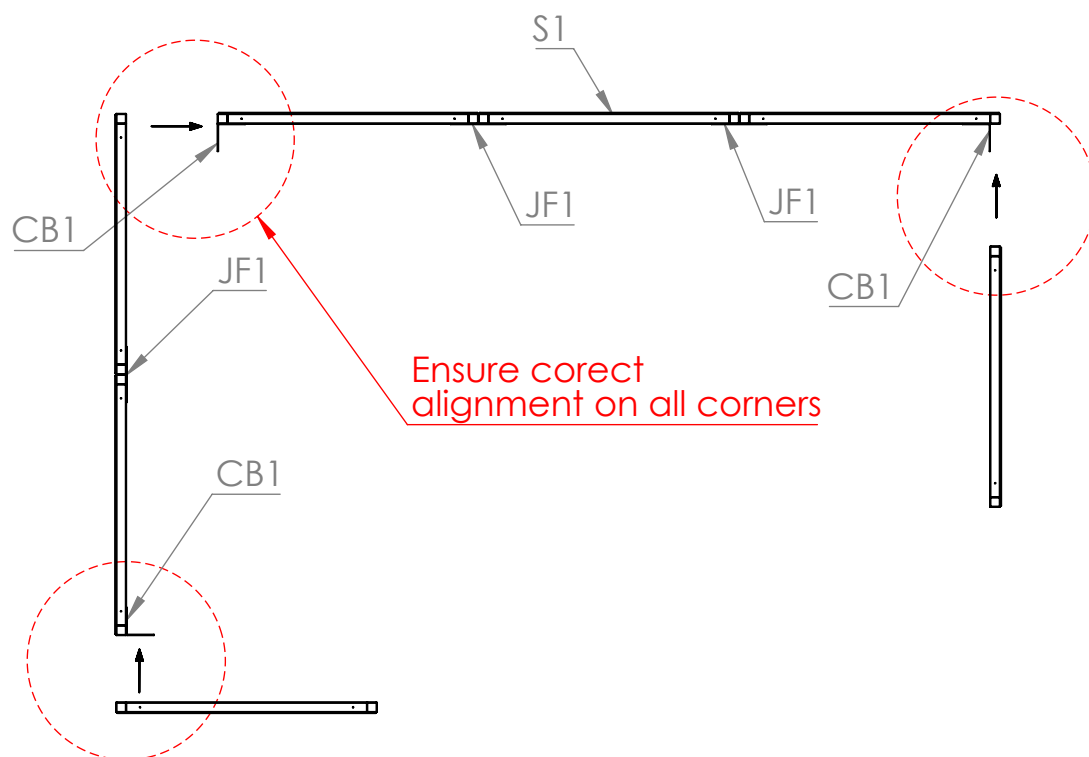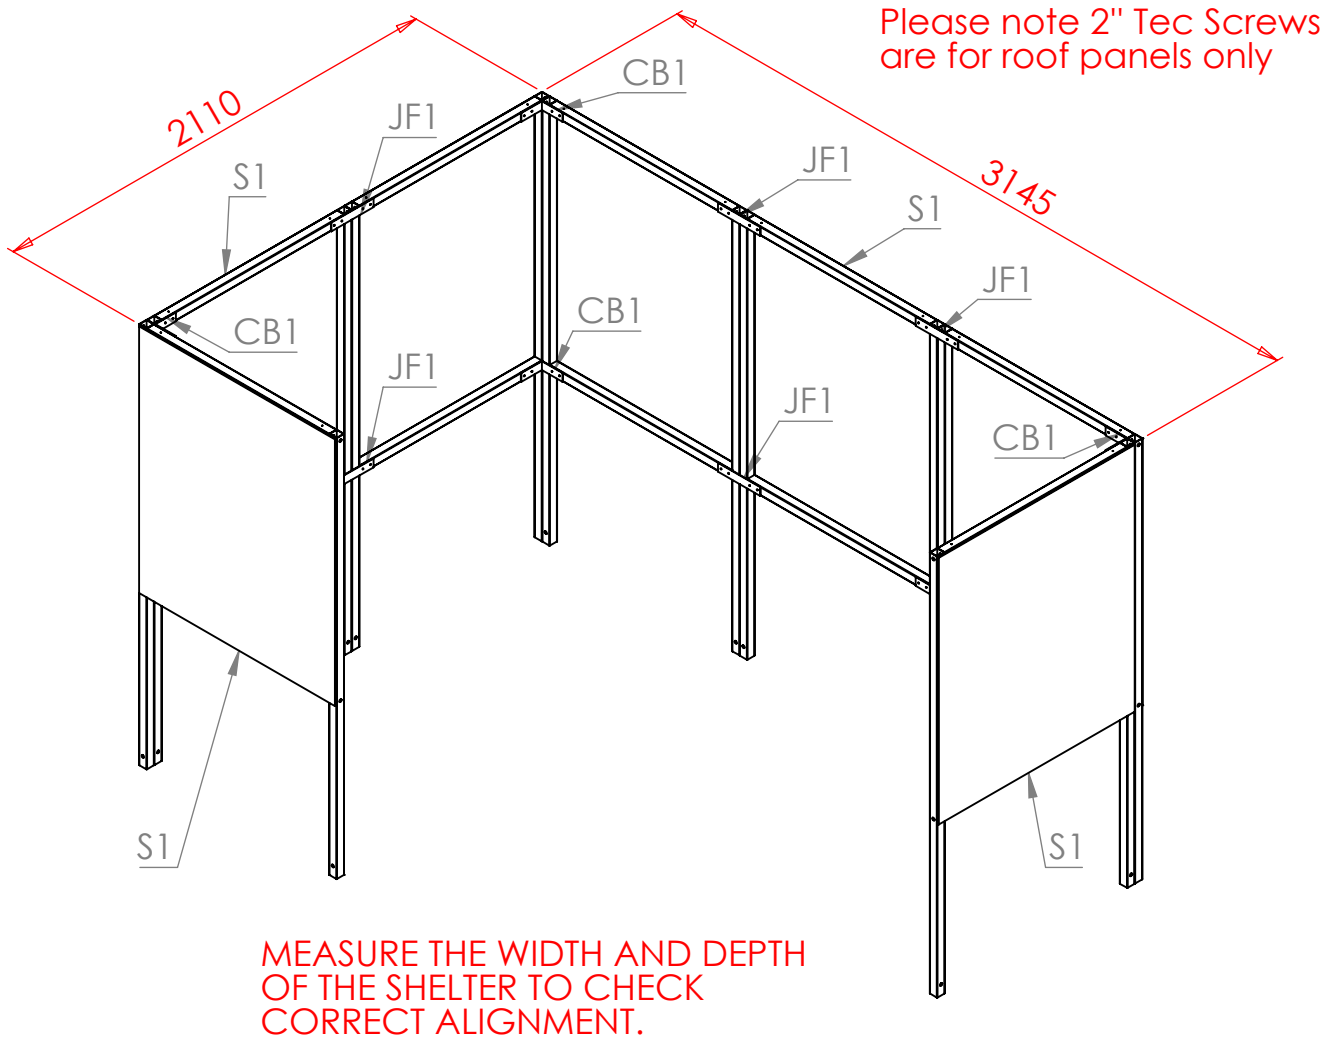


Step 2 Attach **P1** post using a **JF1** bracket then use two **JF1** brackets to attach **S3** frame. The **ST5** tie bar is mounted using a **CB1** and a **JF1** bracket. Make sure the structure is square then move the shelter to its final location before using the **FT1** foot brackets to secure it to the ground.

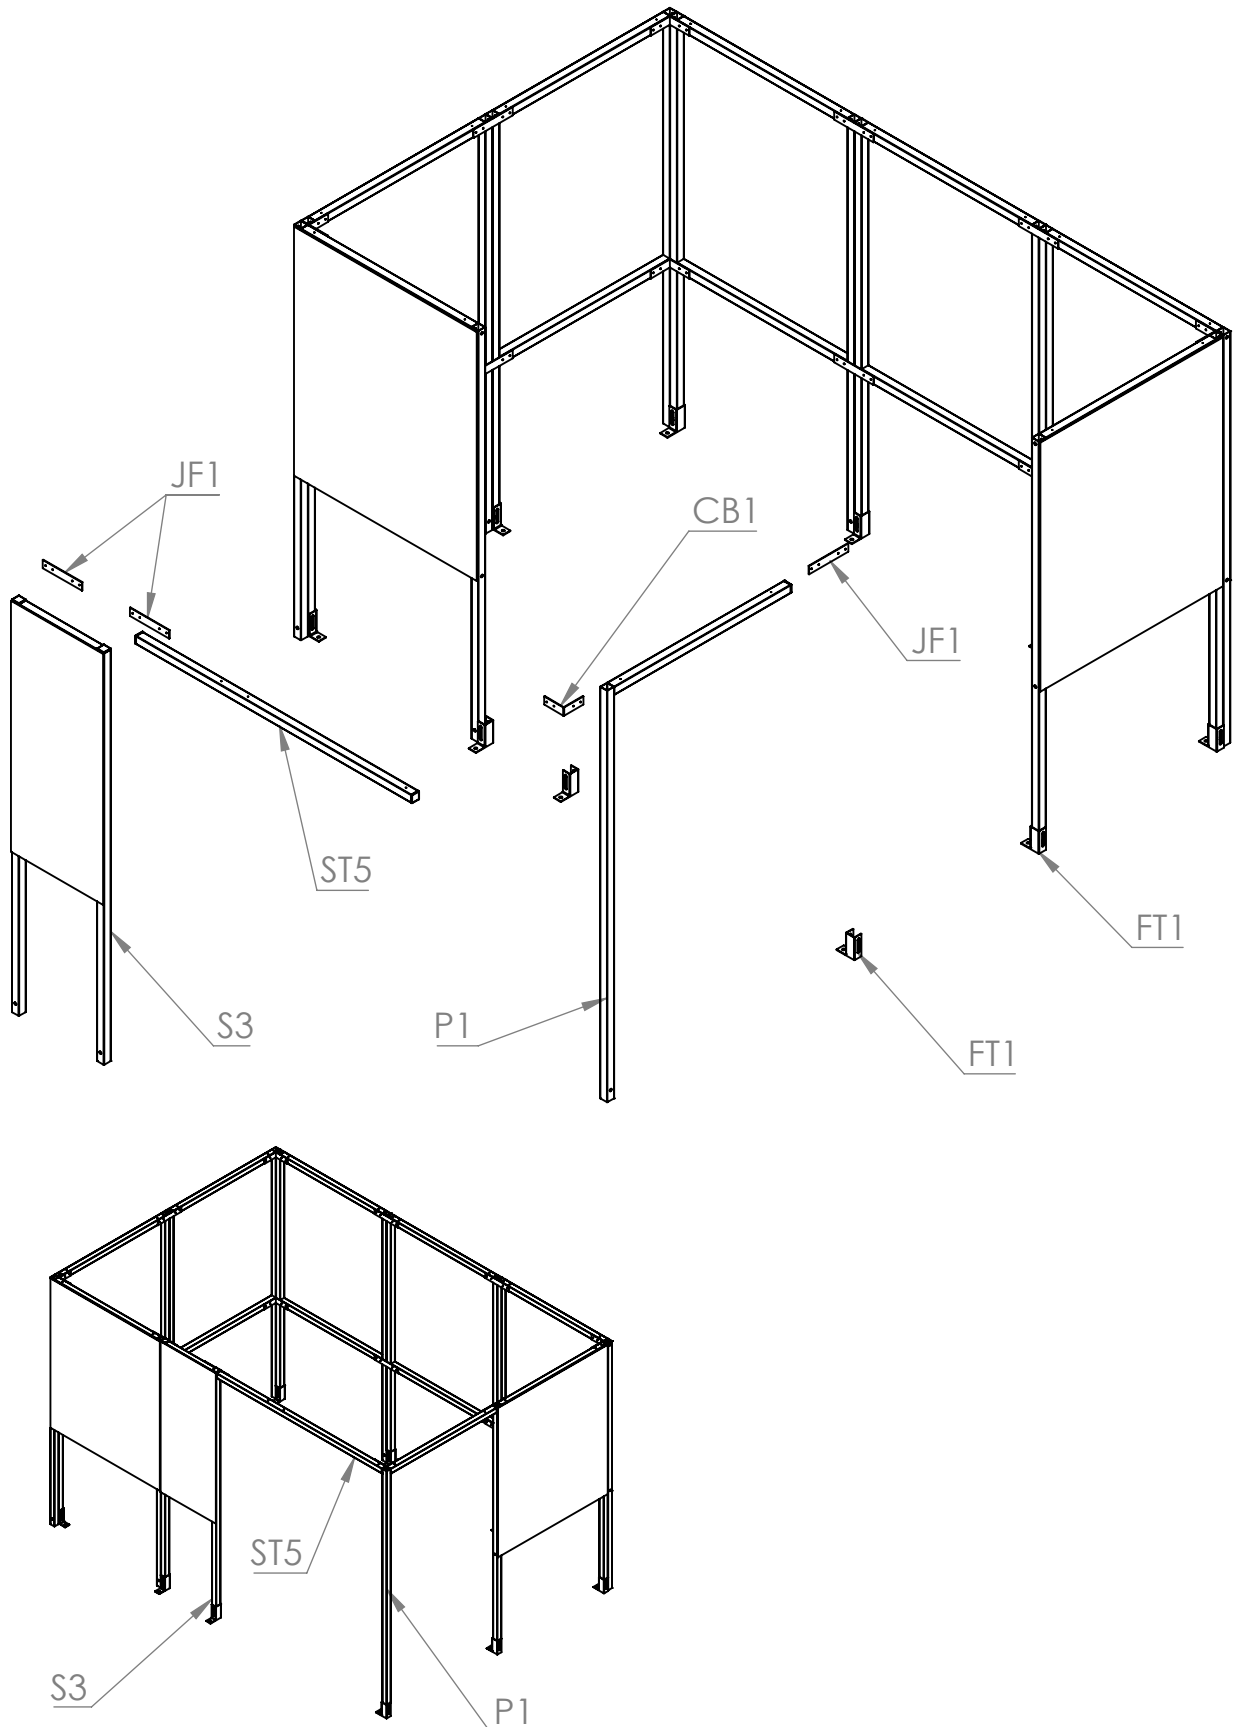


Step 3 Attach **R2** rafters using **RB2** brackets.

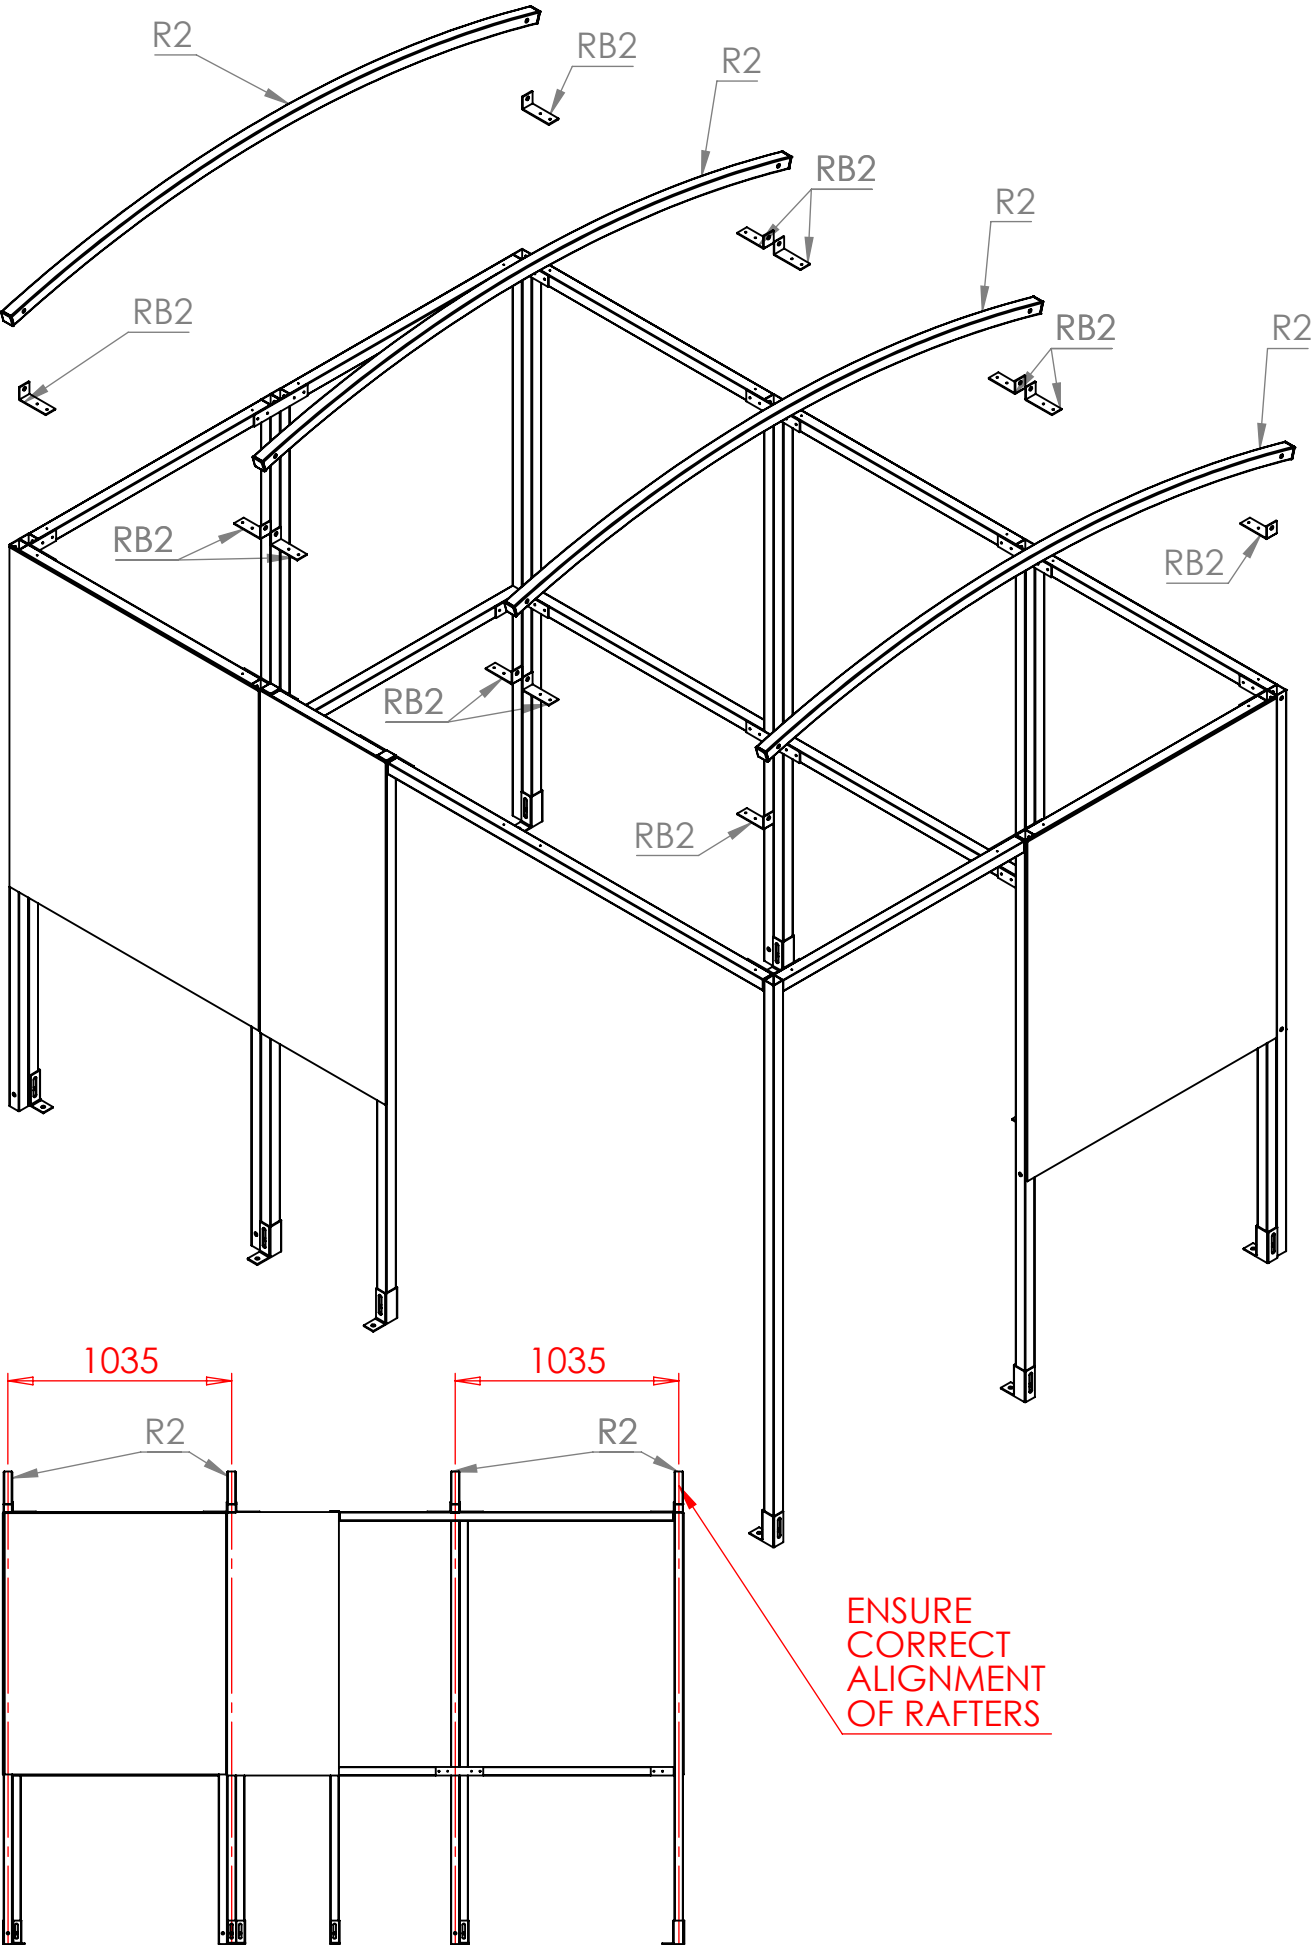

Step 4 Stick sealing strips (**SS**) to the rafters. Align the **PCE2** roof panels with the outer roof rafters and equally space the **PCC2** panel in the middle.

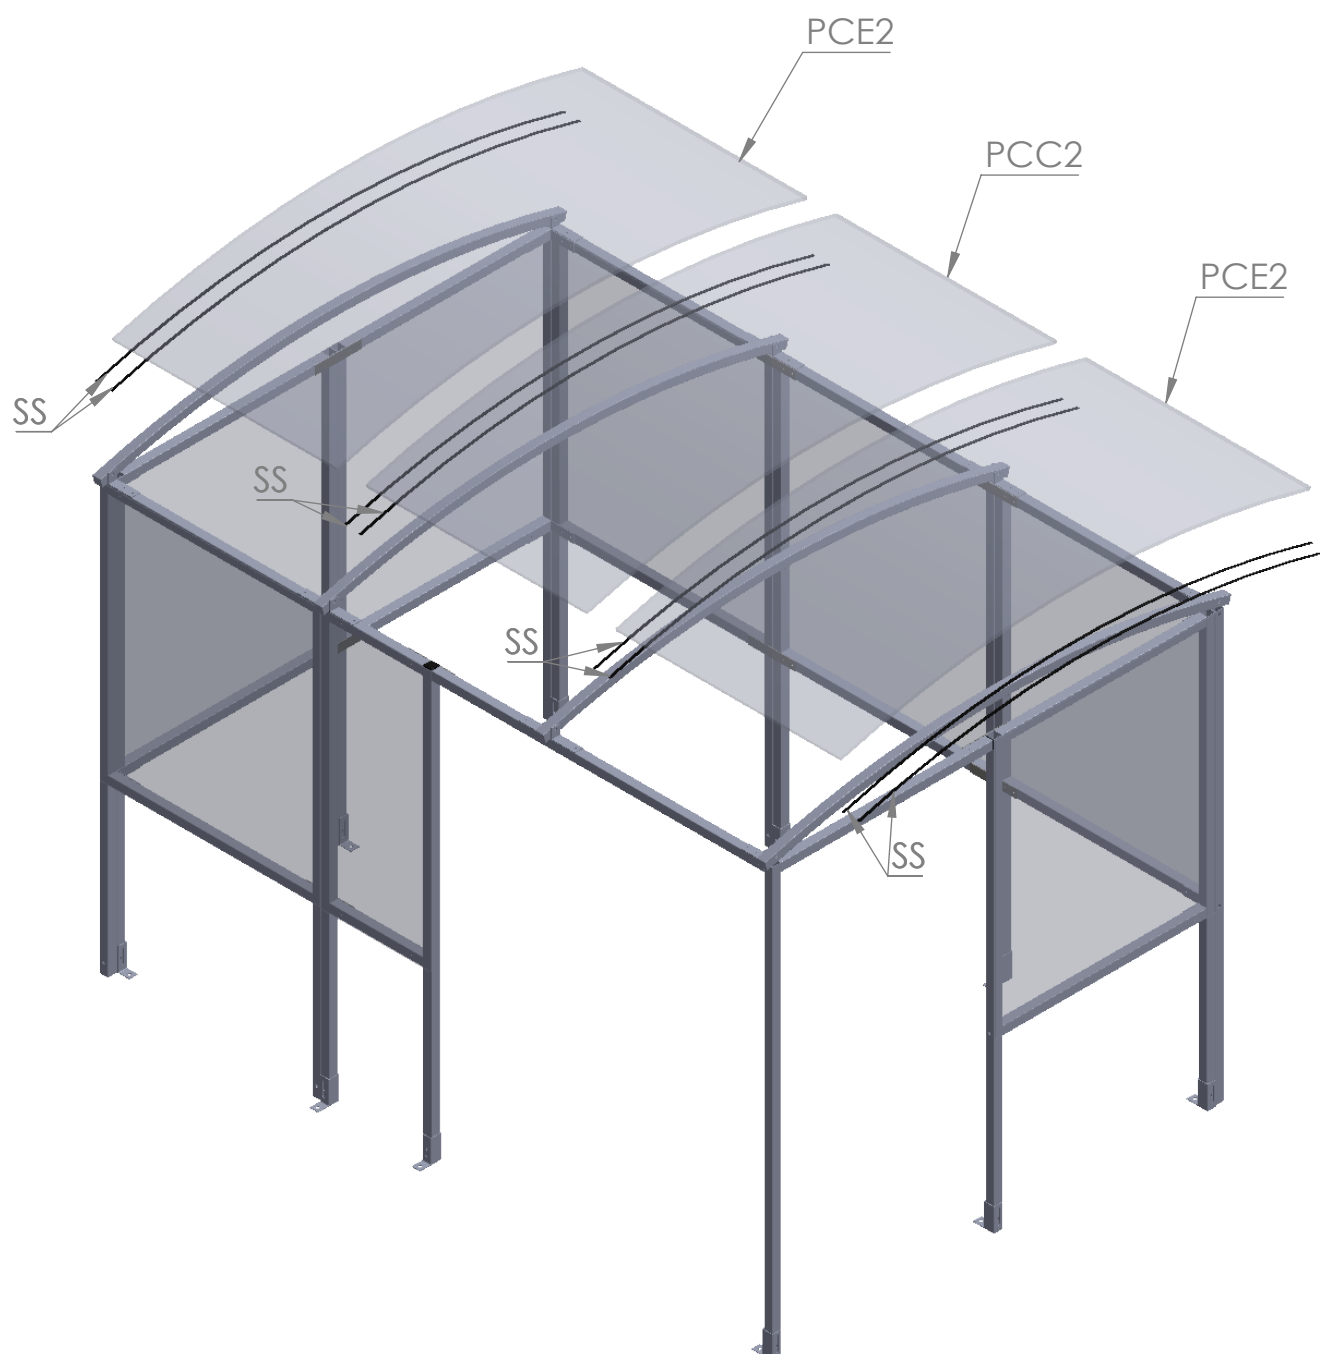


Step 5 Screw down the **RC2** strips as shown below.
Then apply the **2MD** edge trim to the bottom edges of the roof panels.

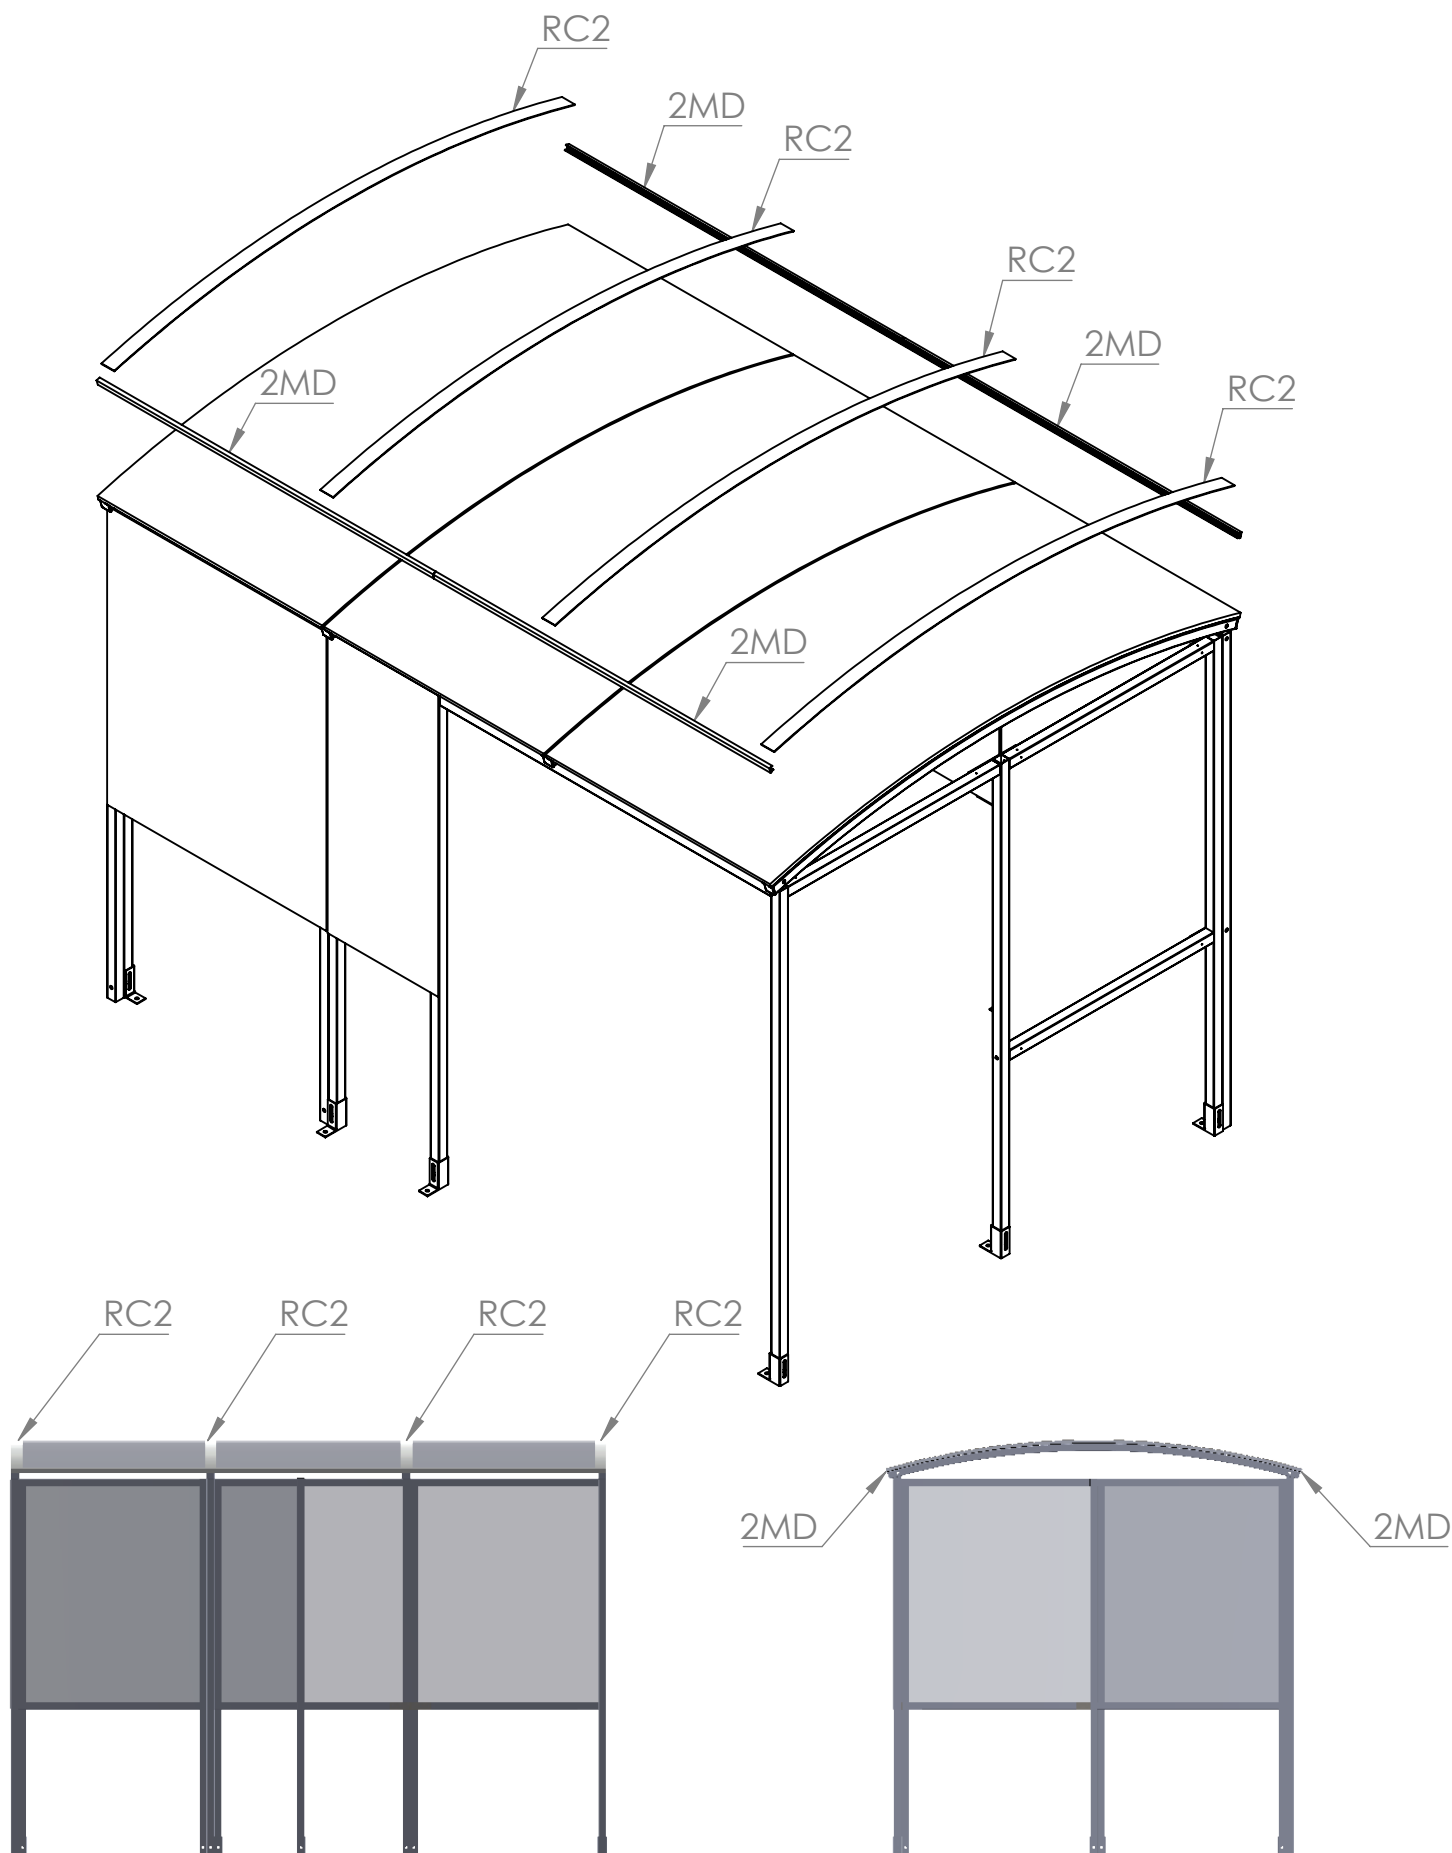

PLAN VIEW

OVERALL DIMENSIONS AND GROUND FIXING POSITIONS

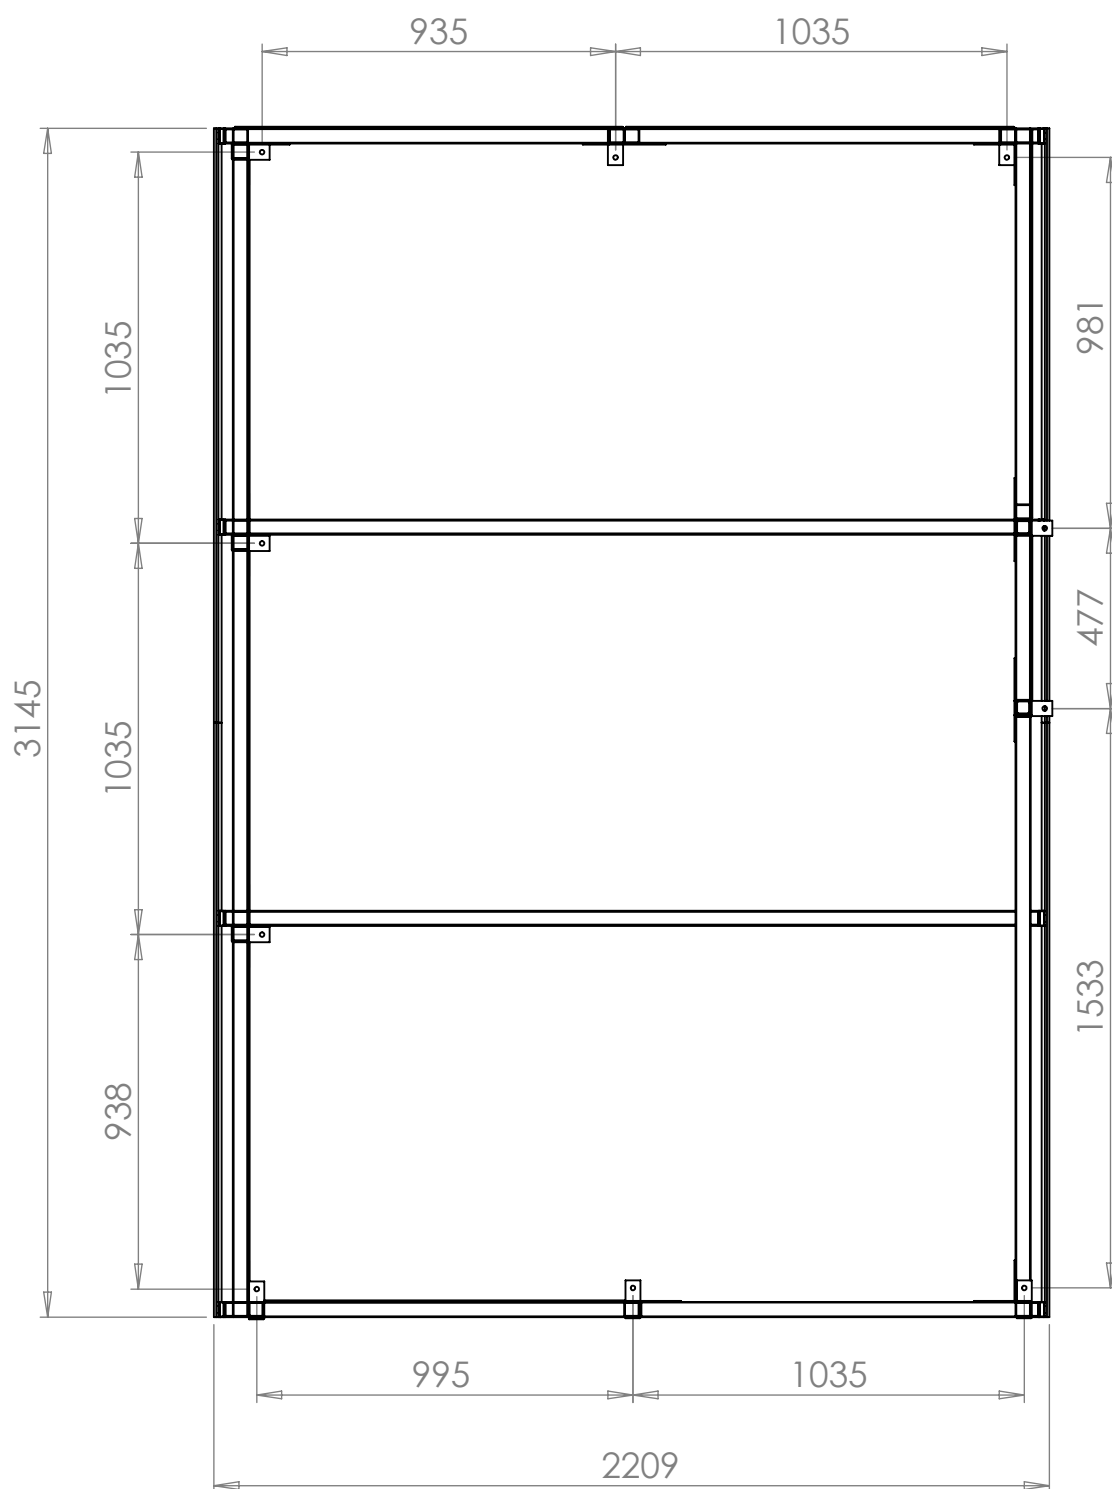

Notes:

Notes:

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@nobutts.com

Web : www.nobutts.com

Tel : 1-888-662-8887

No Butts Bin Company, Inc. 16 Birch Lane, Madison, CT 06443

All Parts and Fixings checked by:	
Print Name:	Signature: