


# Assembly Instructions

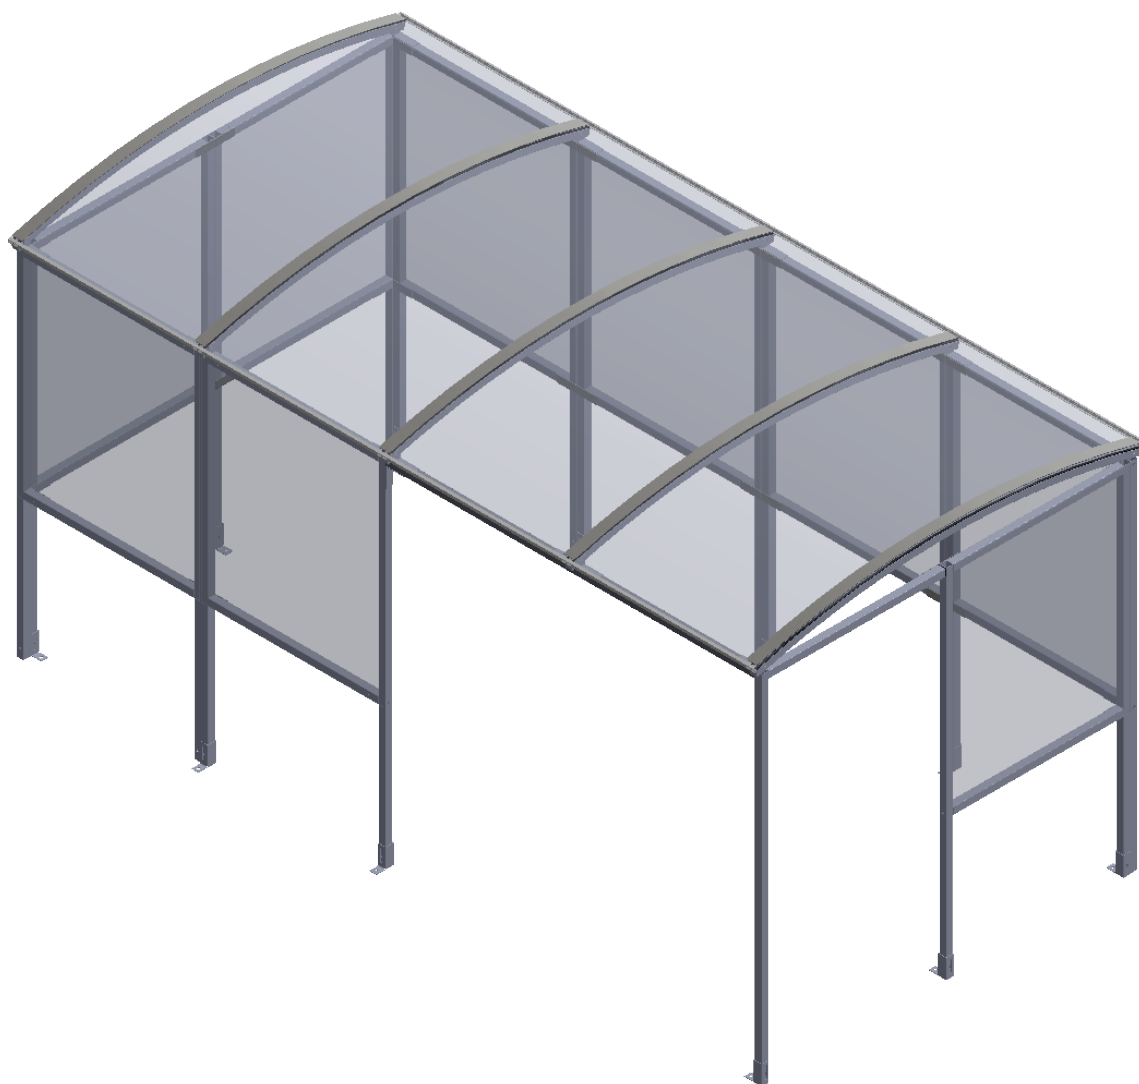

**No Butts Bin Co.**  
*Better Ash & Trash Solutions*  
Est. 1991

Email : [Sales@nobutts.com](mailto:Sales@nobutts.com)


Web : [www.nobutts.com](http://www.nobutts.com)

Tel : 1-888-662-8887











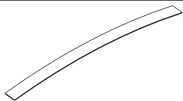
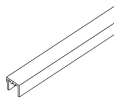
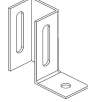
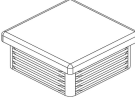
**Shelter type: SR1556**

**SR1556-01-190116-USA**


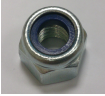



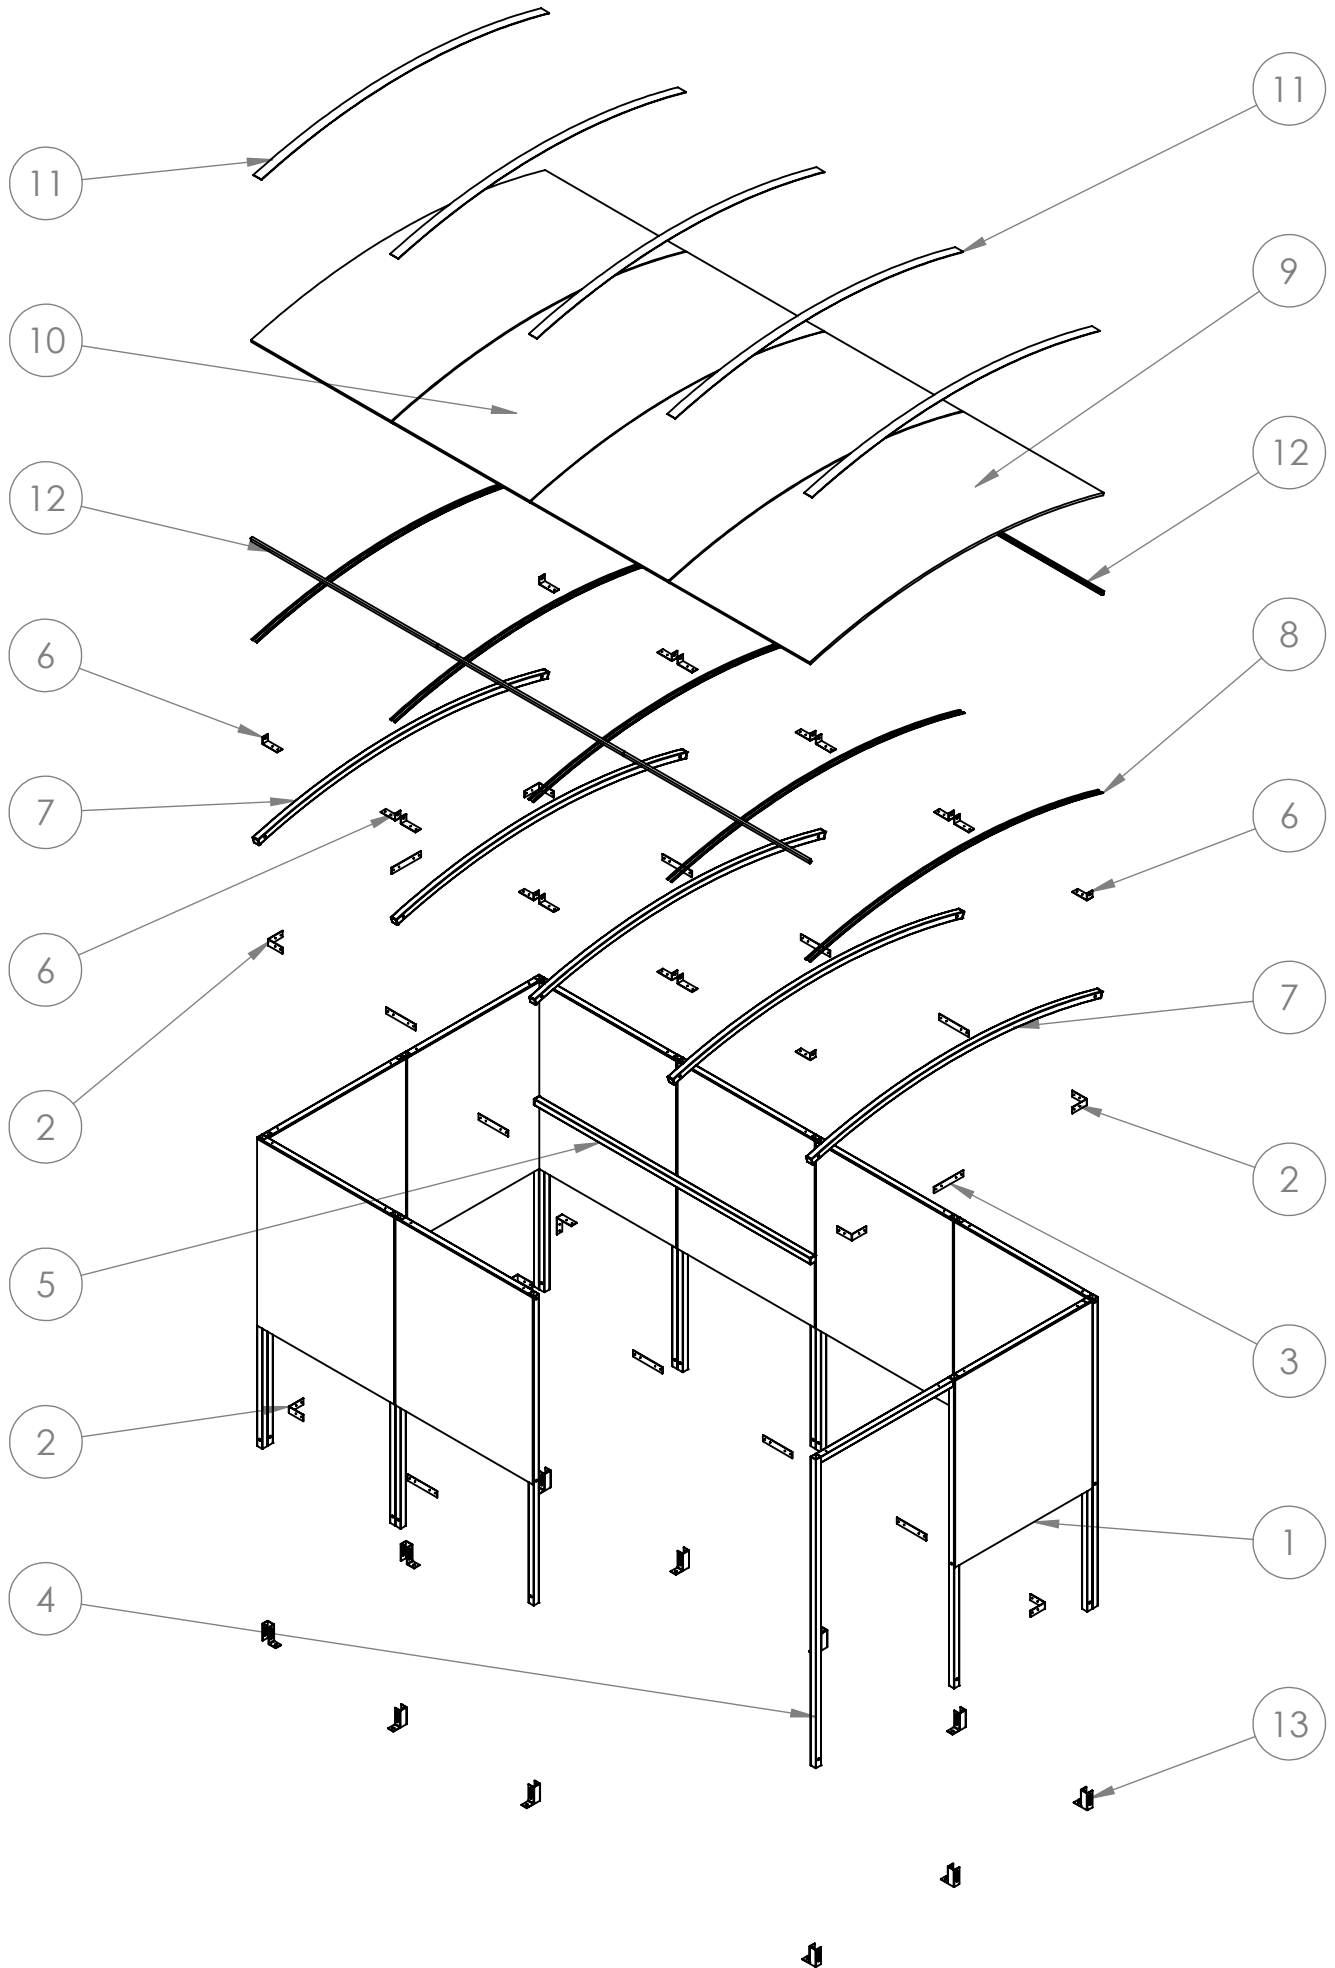

# EXPLODED VIEW

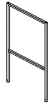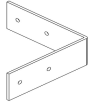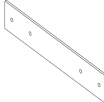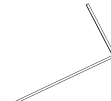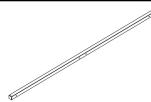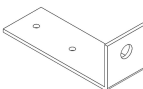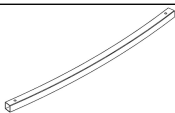

## PARTS LIST

ITEM NO.	PART NO.	DESCRIPTION	DIMENSION	IMAGE	QTY.
1	S1	Frame	$78 \frac{3}{4} \times 40 \frac{3}{4}$		9
2	CB1	Bracket	$4 \frac{3}{8} \times 4 \frac{3}{8} \times 1 \frac{1}{2}$		8
3	JF1	Bracket	$8 \frac{5}{8} \times 1 \frac{1}{2}$		12
4	P1	Post	$78 \frac{3}{4}$		1
5	ST3	Roof Tie	81		1
6	RB2	Bracket	4.3 x 1.81		16
7	R2	Rafter	86.57		5
8	SS	Sealing Strip	Trim to 87.4		10
9	PCE2	Roof Panel	87.4 x 41.34		2
10	PCCE2	Roof Panel	87.4 x 40.55		2
11	RC2	Roof Strip	85.83		5
12	2MD	Roof Edge Trim	54.84		6
13	FT1	Bracket	4.3 x 3.94		11
14	EC40	Plastic End Cap	$1 \frac{1}{2} \times 1 \frac{1}{2}$		13

## Fittings/Tools

	<b>Bolt set M10</b>	<b>Nut</b>	<b>Washer</b>	<b>Black Cap</b>	<b>T25</b>	<b>T50</b>	<b>AB1210</b>
	<b>3/8th x 2 3/8"</b>				<b>1" Tech screw</b>	<b>2" Tech screw</b>	<b>1/2 x 4" Concrete Bolt</b>
<b>Pack A+B</b>	40	40	80	80	136	66	13
<b>Required</b>	21	21	42	42	112	50	11
<b>Spare</b>	19	19	38	38	24	16	2
<b>Image</b>							

### Tools required:



Drill/Screwdriver



Mallet



Hack saw

### Tools included:




Wrench




Torx bit




**Step 1** Assemble **S1** frames to make up the main structure using **CB1** brackets for the corners and **JF1** brackets for the straight joints.

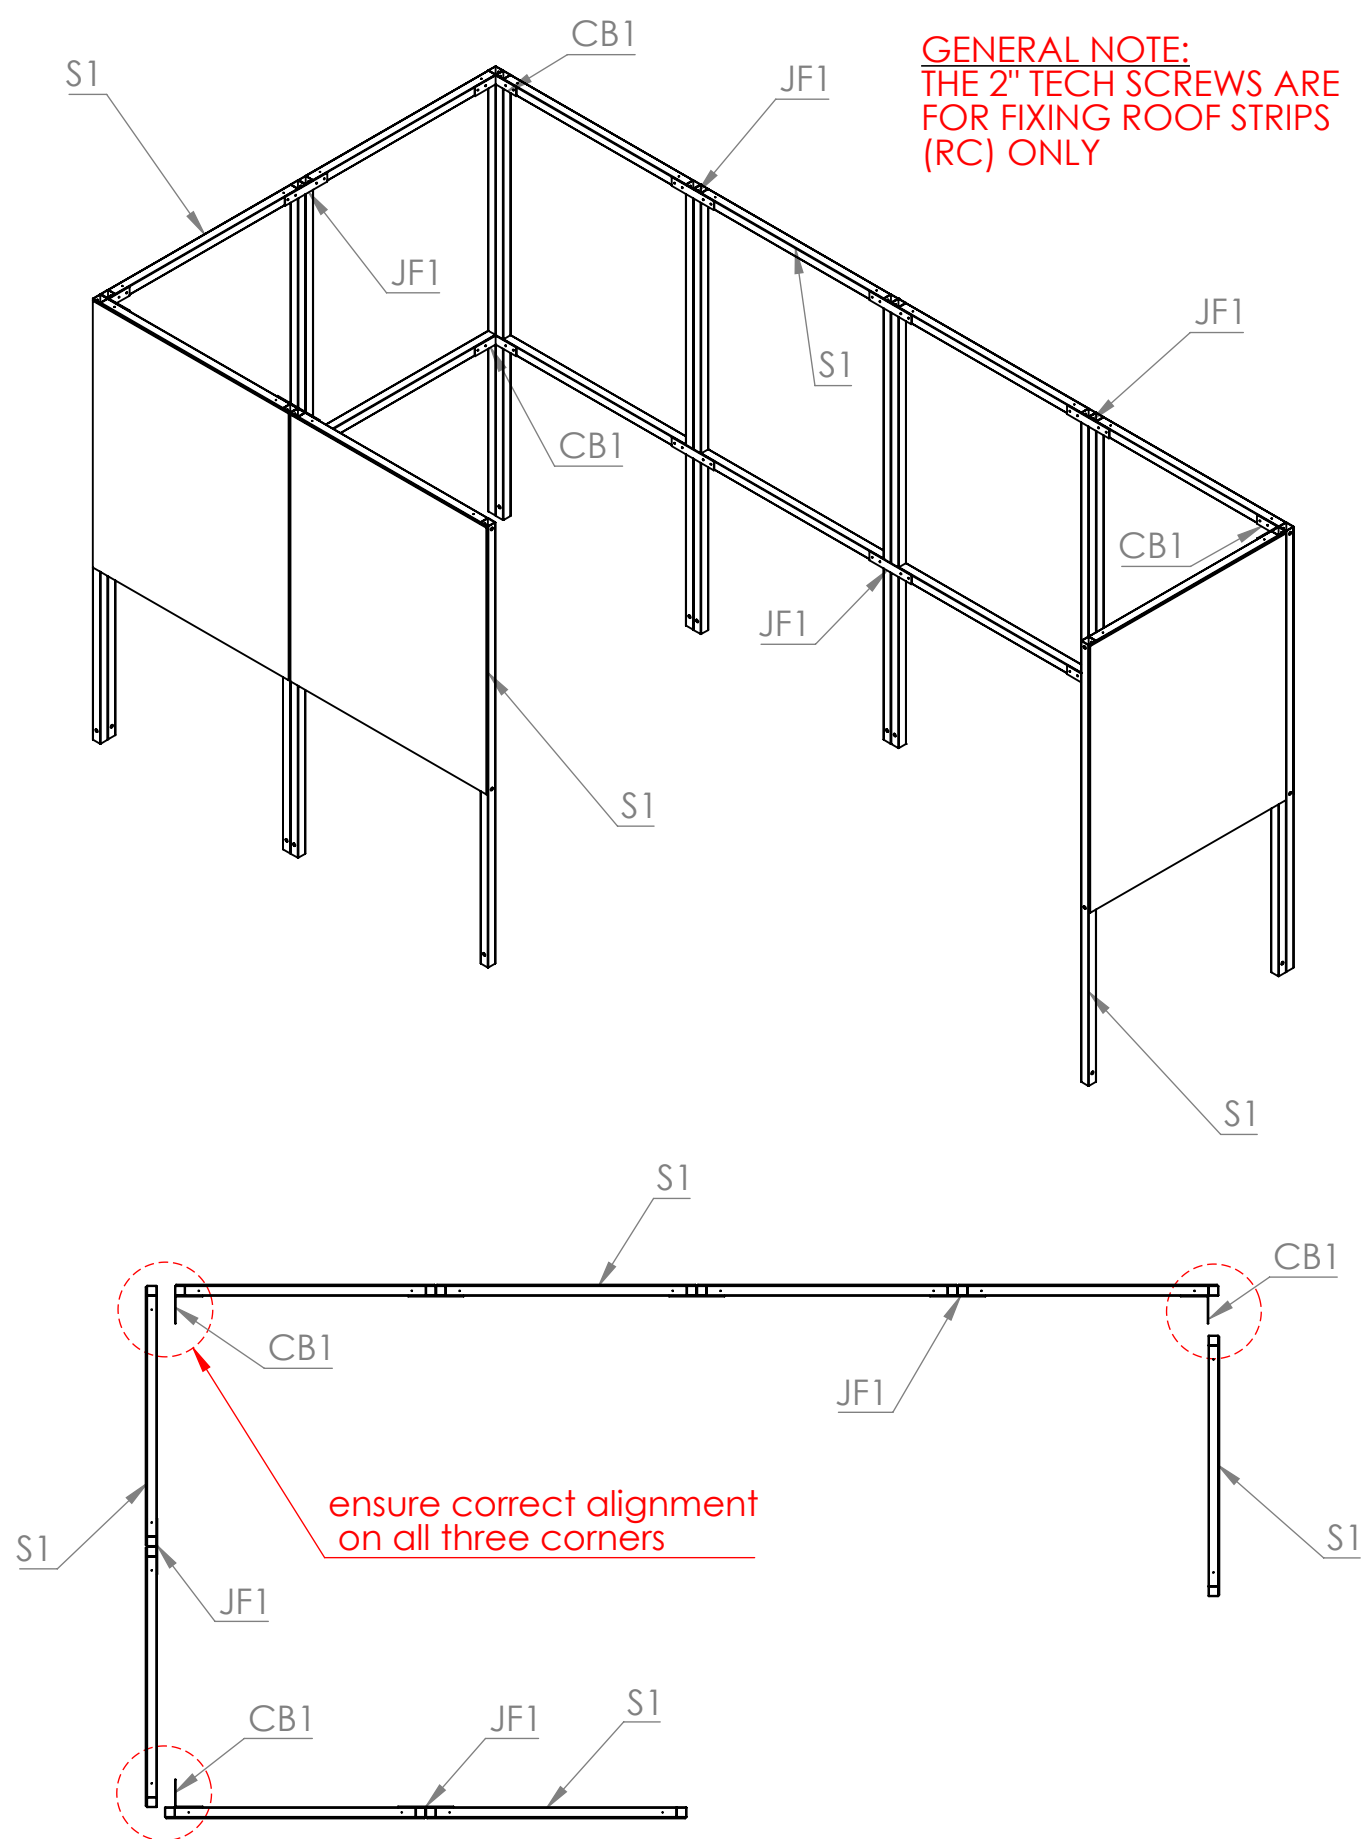


**Step 2** Attach **P1** post using one **JF1** bracket, then attach **ST3** tie bar using another **JF1** bracket and two **CB1** brackets. Move the shelter to its final position, make sure the structure is square and attach the **FT1** foot brackets to secure the shelter to the ground.

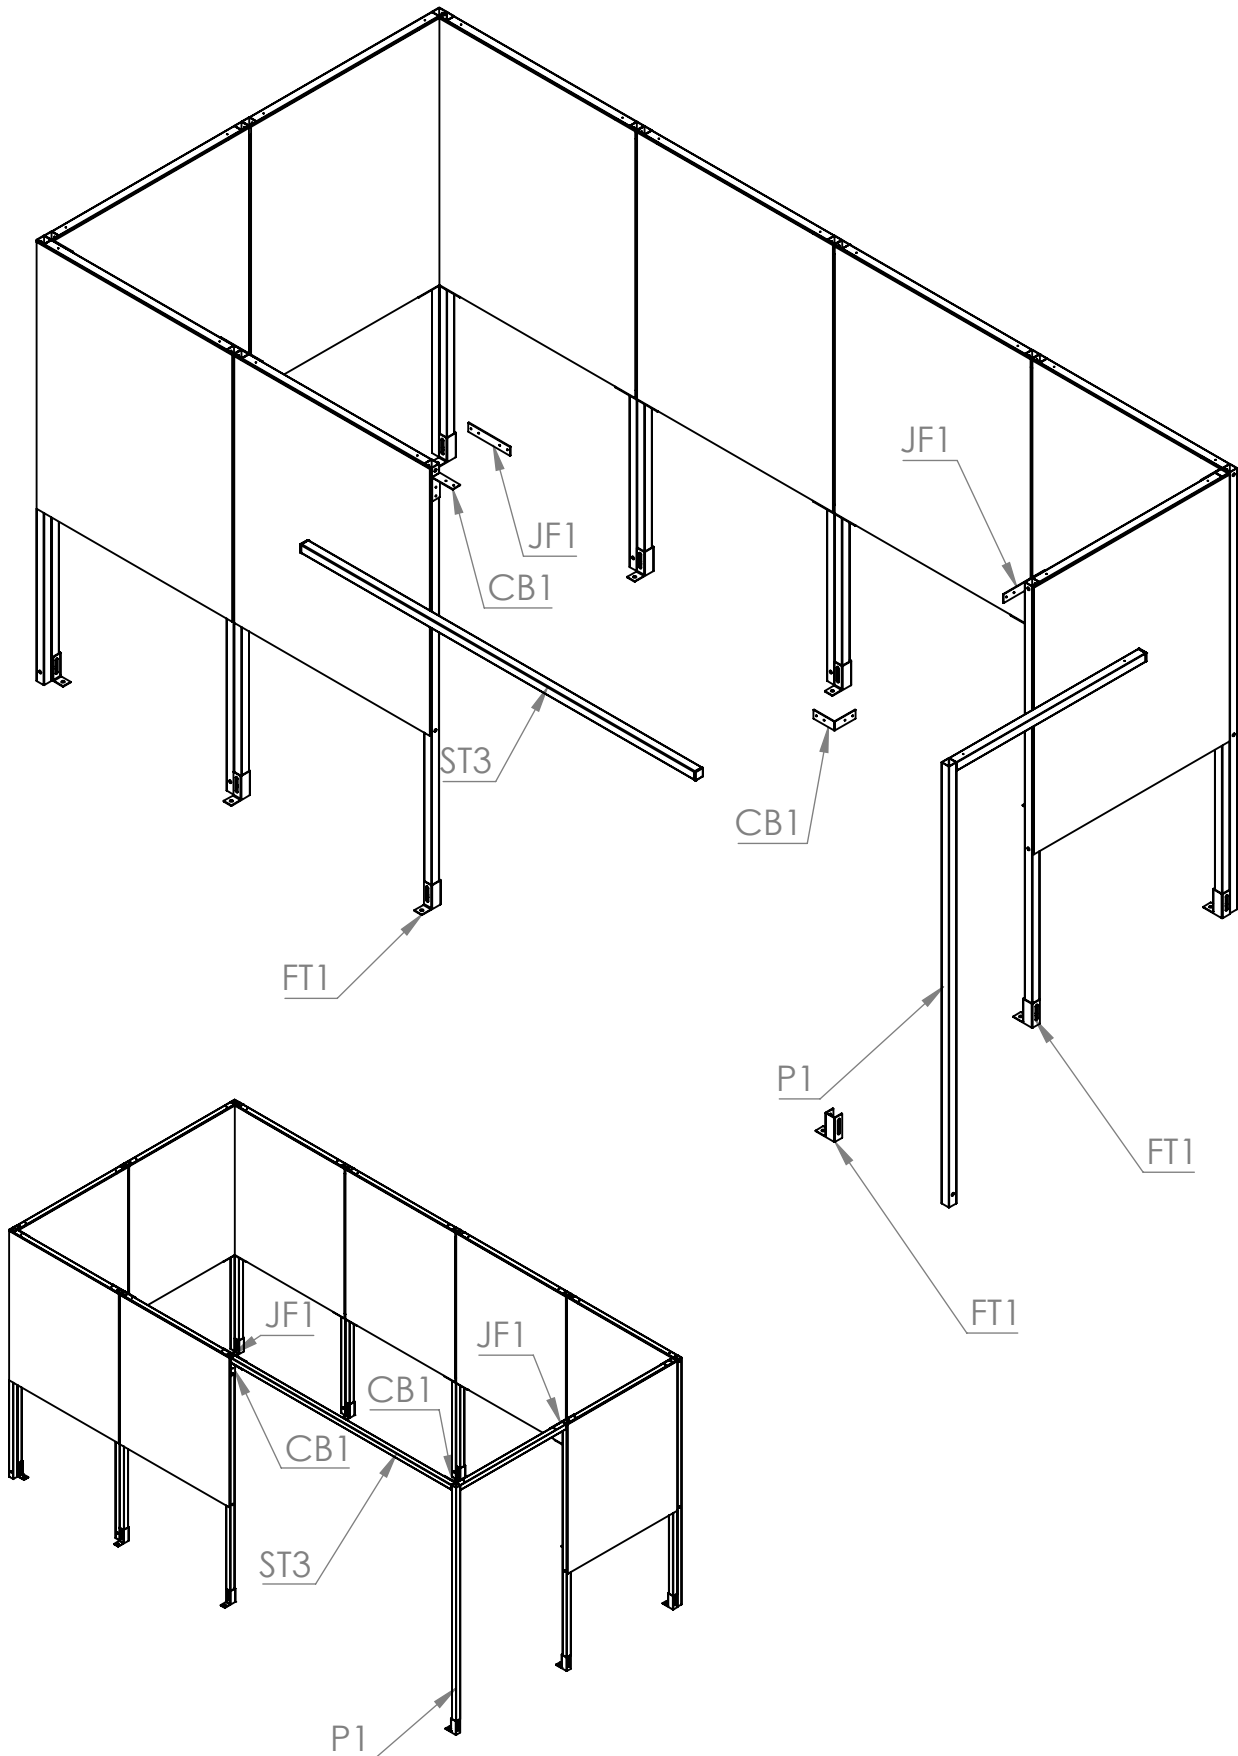


**Step 3** Use **RB2** brackets to secure the **R2** roof rafters.

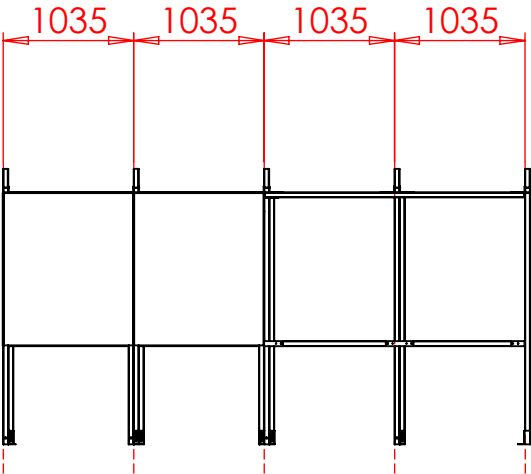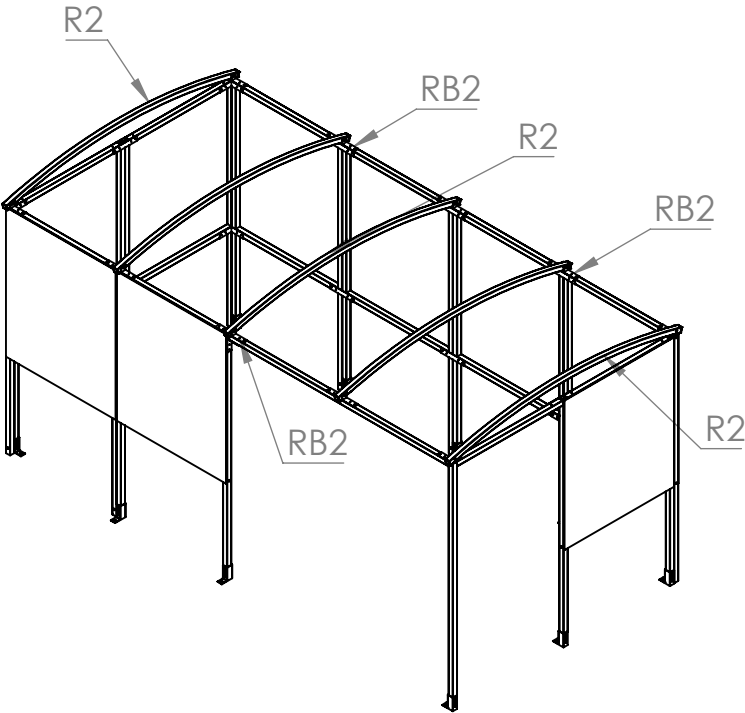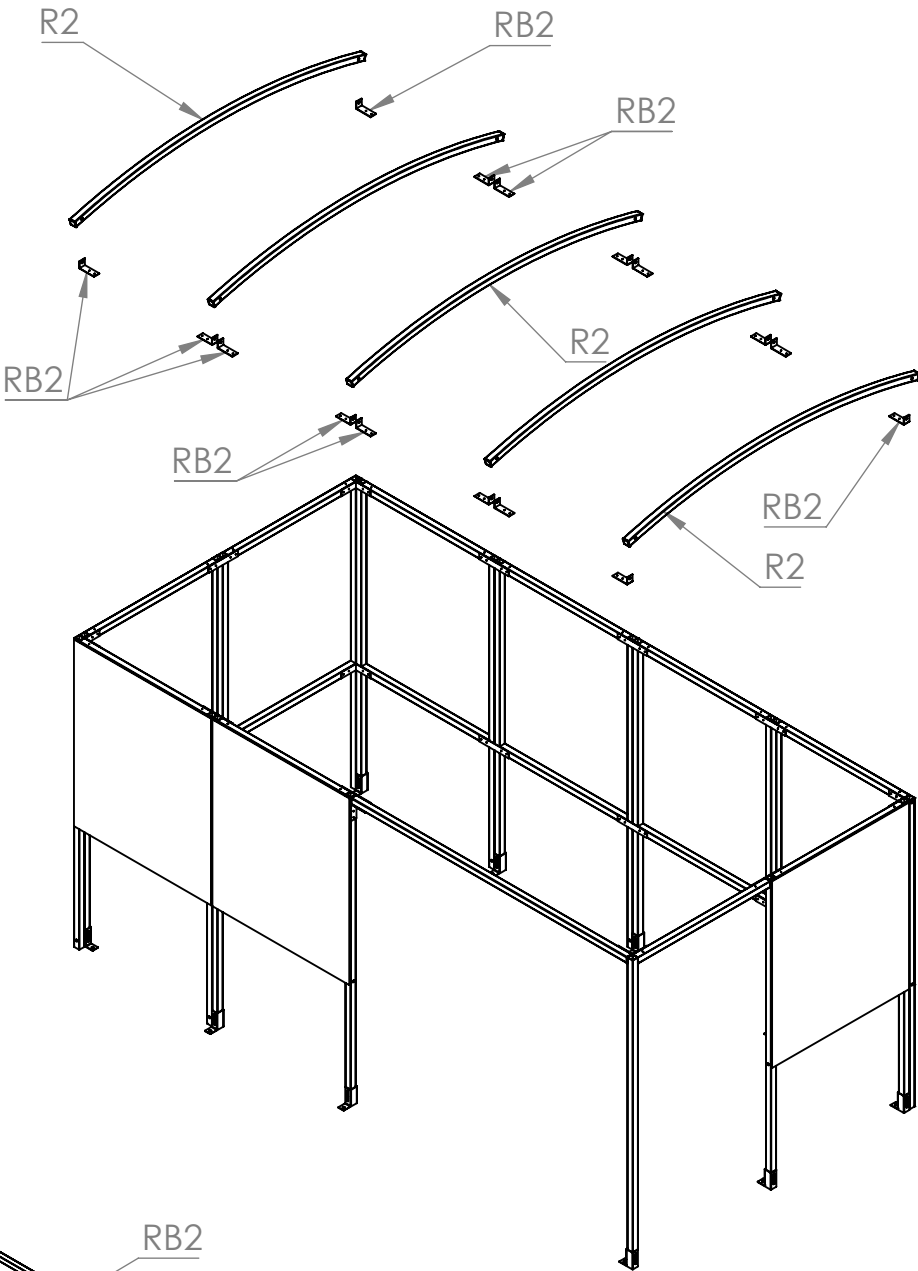

**Step 4** Align **PCE2** roof panels with the outer rafters then space out the **PCC2** panels evenly. Cover the two edges along the outer rafters and gaps with **RC2** strips before screwing them into place.

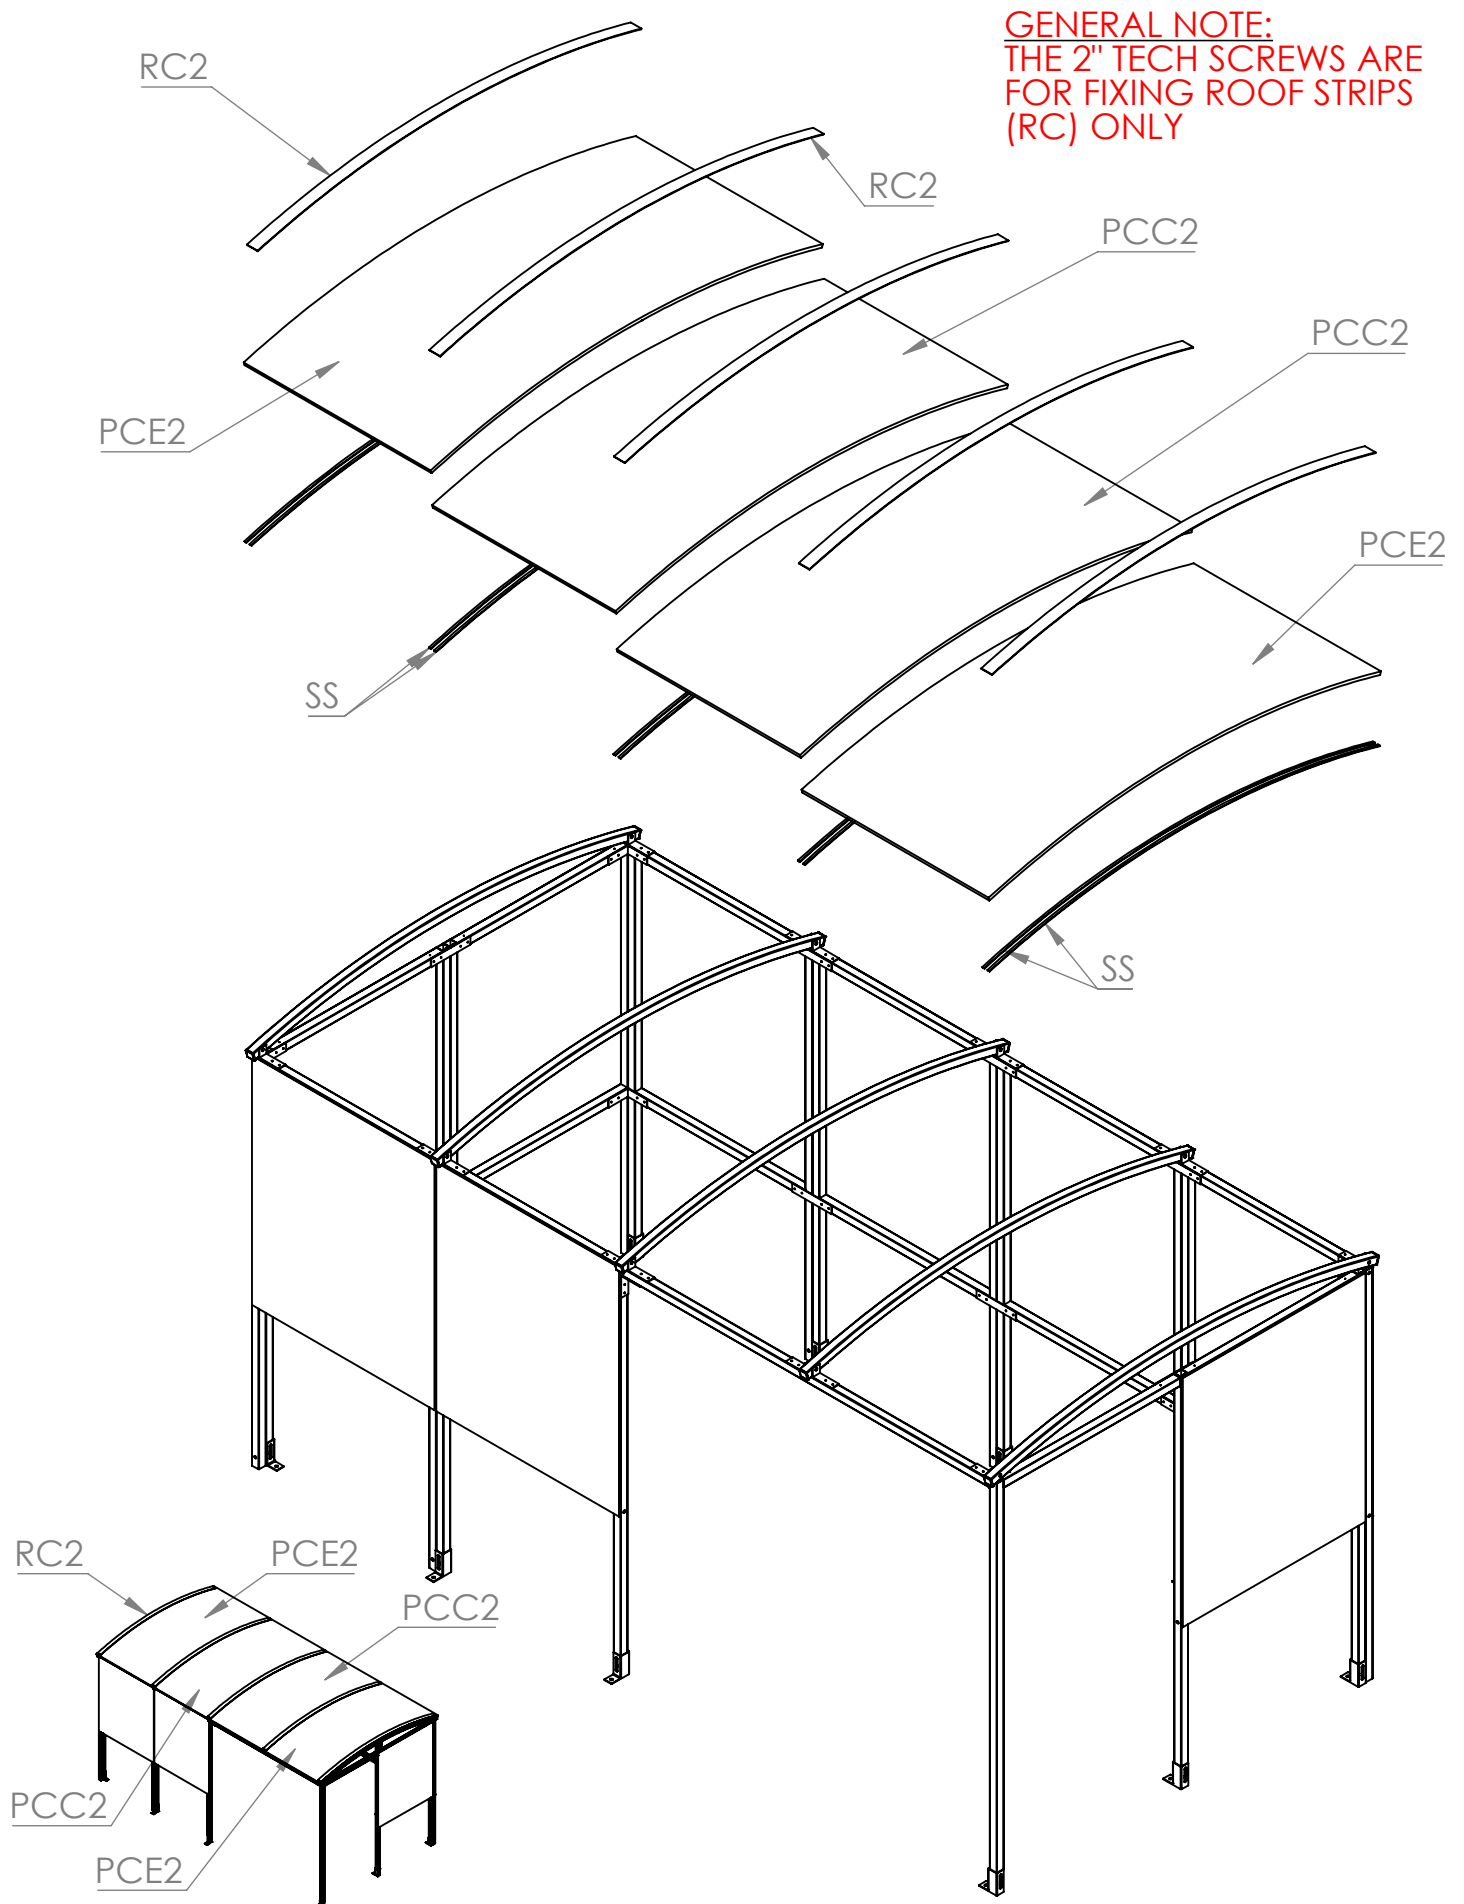


**Step 5** Clip on the **2MD** end caps. Attach the **FT1** brackets to the uprights and move the shelter to its final position before securing it to the ground using ground anchor bolts. Then fit the Black plastic caps on exposed nuts and bolts. Fit the square end caps to any open ends of box sections.

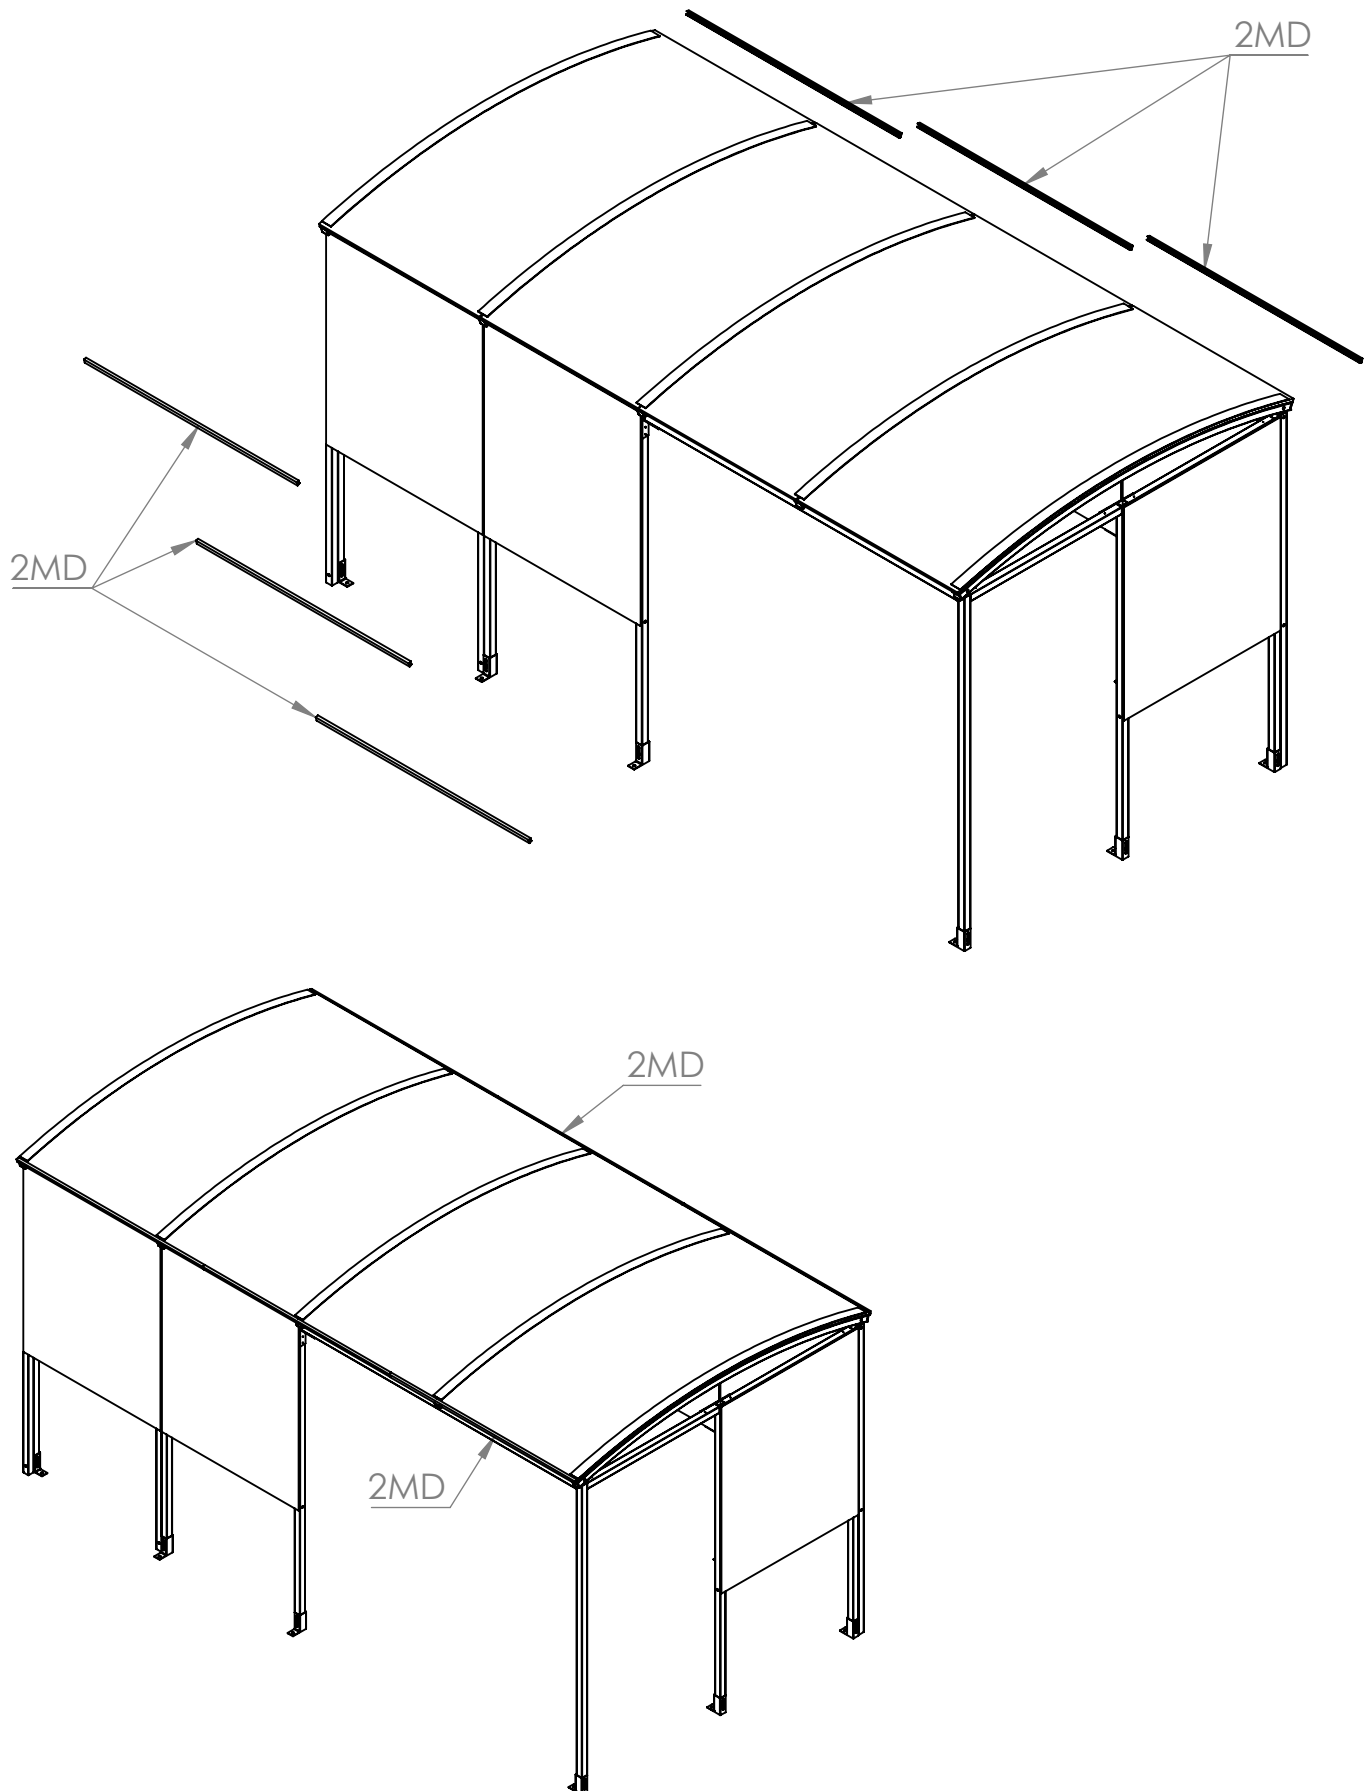

## Plan view

Suggested size for concrete base: 200mm oversized on all four sides.

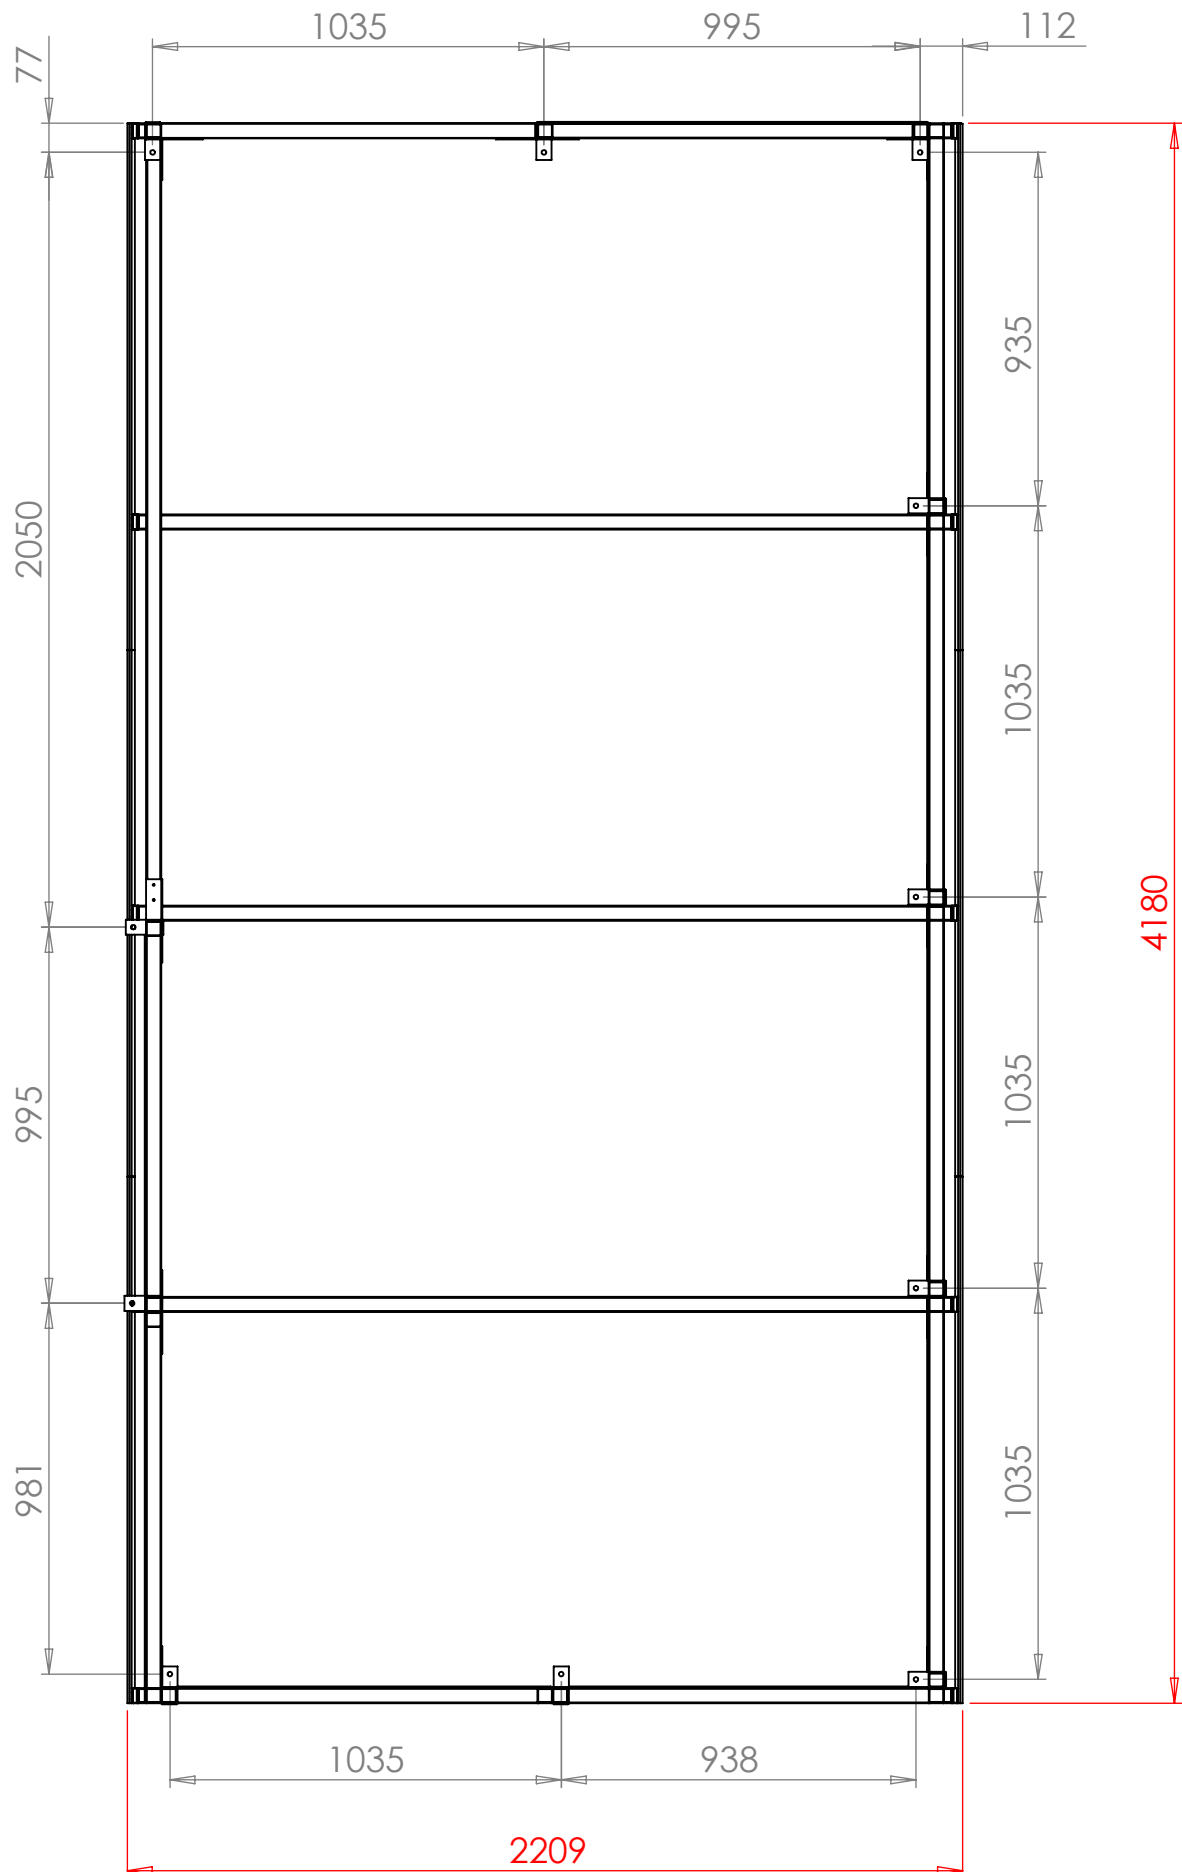

NOTES:

# THANK YOU FOR PURCHASING THIS PRODUCT

## **MAINTENANCE:**

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

## **CONTACT DETAILS:**

Email : Sales@nobutts.com

Web : www.nobutts.com

Tel : 1-888-662-8887

No Butts Bin Company, Inc. 16 Birch Lane, Madison, CT 06443

<b>All Parts and Fixings checked by:</b>	
Print Name:	Signature: