


Assembly Instructions

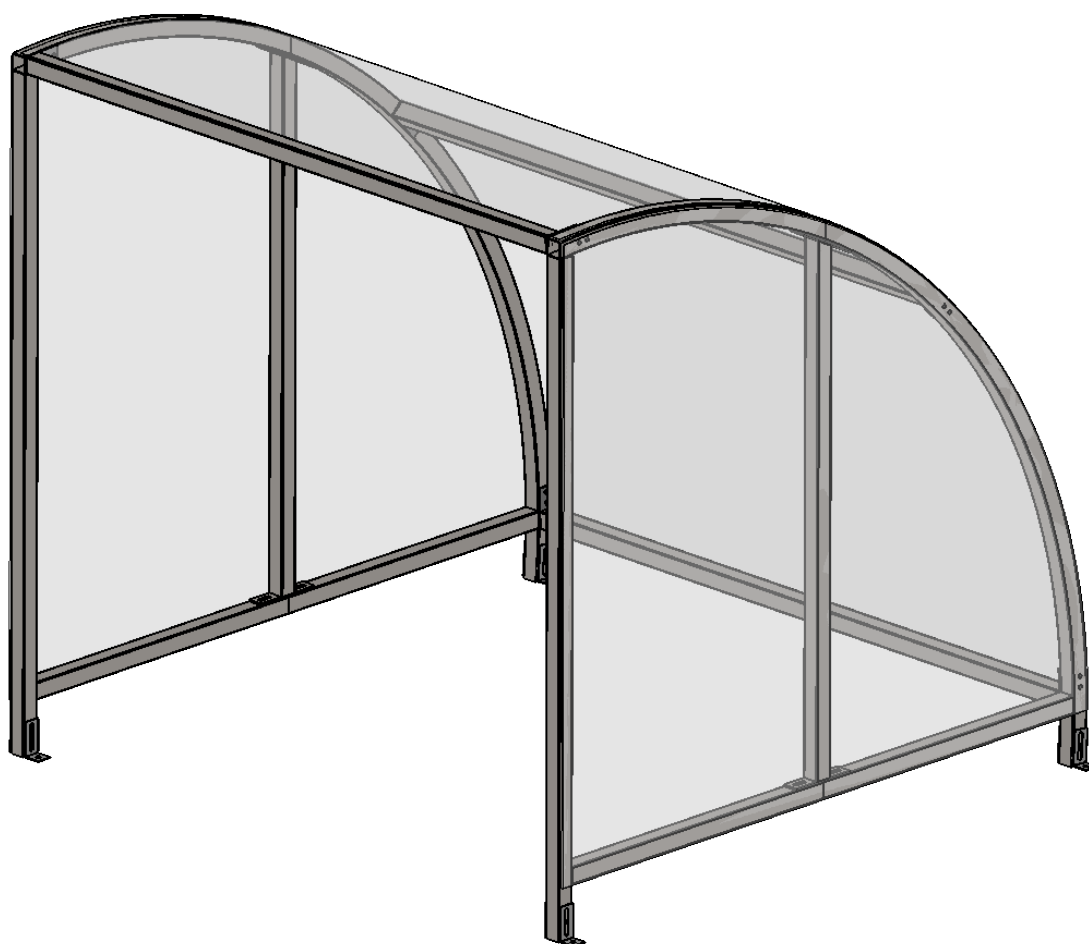

No Butts Bin Co.
Better Ash & Trash Solutions
Est. 1991


Email : Sales@nobutts.com

Web : www.nobutts.com

Tel : 1-888-662-8887

Shelter type: NSKCS01ZC

NSKCS01ZC-04-010519

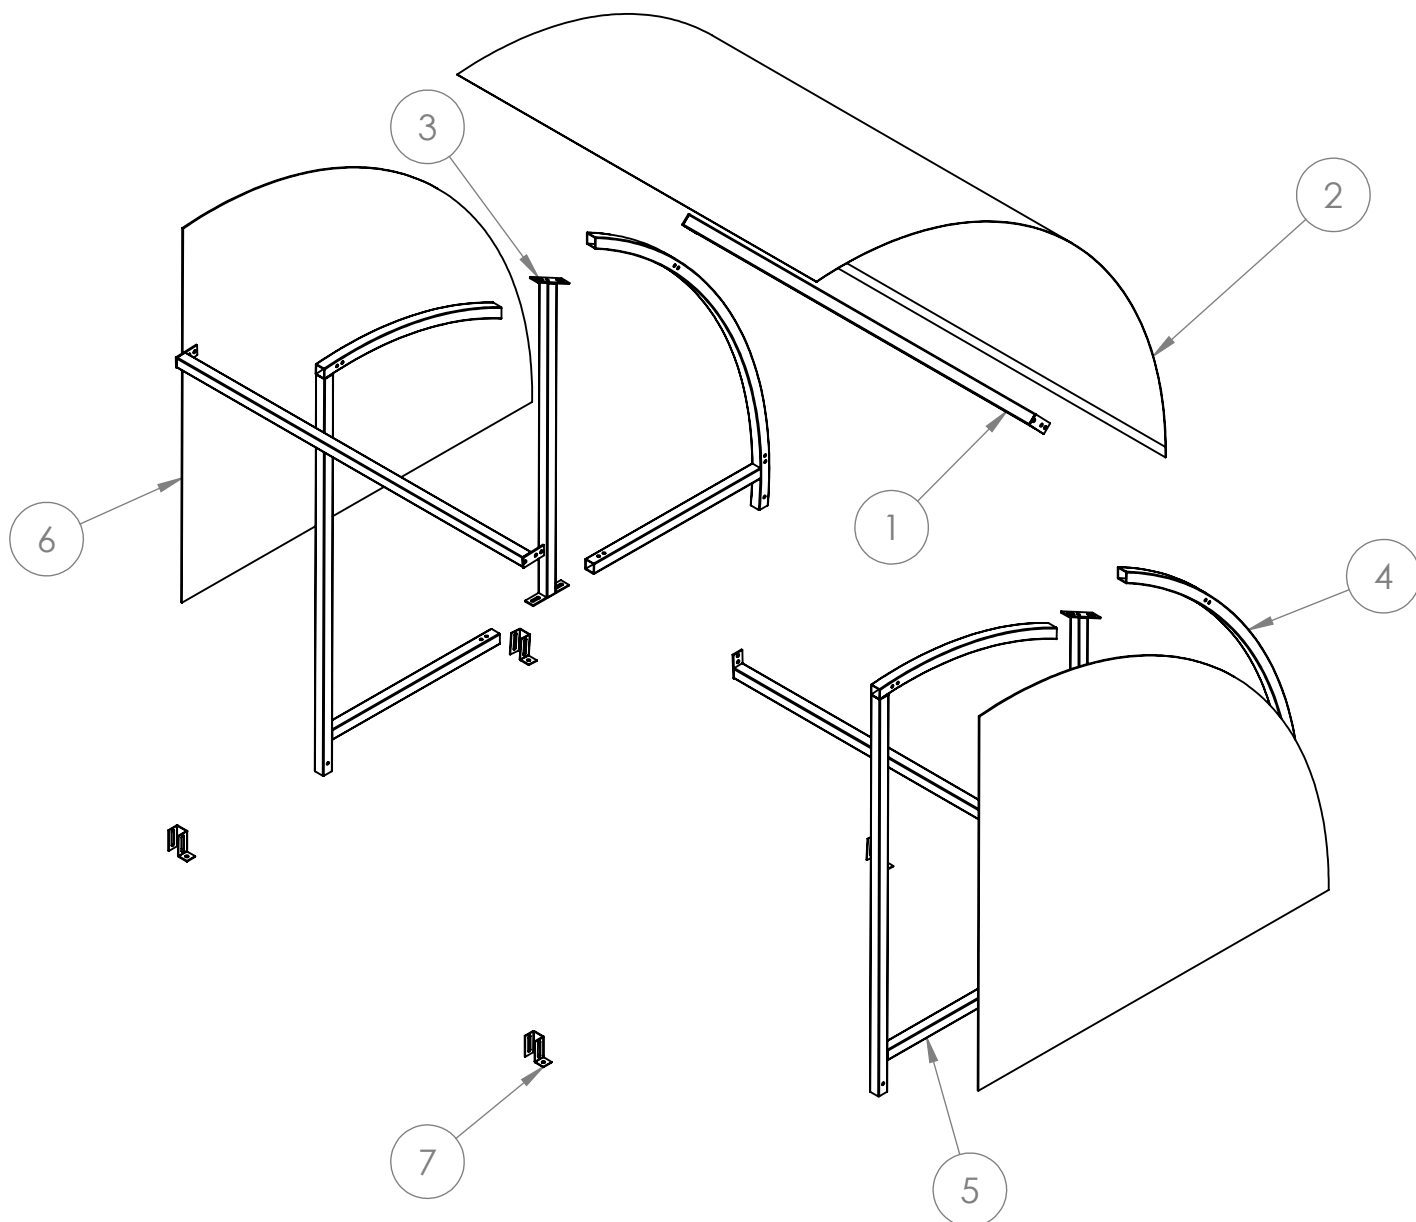

Tools required: (Not supplied)


















Drill/Screwdriver



Socket set

PARTS LIST & FITTINGS

ITEM NO.	PART NO.	DESCRIPTION	DIMENSION (Inch)	IMAGE	QTY.
1	CTB	Central Tie Bar	$76\frac{3}{4}$		3
2	RP1	Outside Roof Panel	$113 \times 79\frac{1}{4}$		1
3	KST	Kimmeridge Straight Tie Bar Assembly	$60\frac{2}{5}$		2
4	KRF	Kimmeridge Rear Frame Assembly	$88\frac{1}{3} \times 38\frac{3}{4}$		2
5	KFF	Kimmeridge Front Frame Assembly	$77\frac{3}{4} \times 39$		2
6	SP	Side Panel	$71\frac{1}{2} \times 77\frac{1}{3}$		2
7	KEF	Kimmeridge External Foot	4		4
8	EC50	Plastic end cap	2 x 2		2


Fittings	M10 x $\frac{3}{4}$ Hex head bolt	M10 x $3\frac{1}{8}$ Hex head bolt	M10 / 12 Anchor bolt	M10 Nuts	M10 Standard Washers	1" Tech screws	Plastic caps M10
QTY.	20	4	4	4	32	110	32
Image							

If you have received the "Split End" version (If not go straight to Step 1)

Join the three frame sections to make the Complete Side Frame using the $M10 \times \frac{3}{4}$ bolts.


Note: Shelter has 2 sides Left and Right. Make sure all holes are in correct position before assembling. (Facing into shelter)

2 people recommended to fit this shelter.

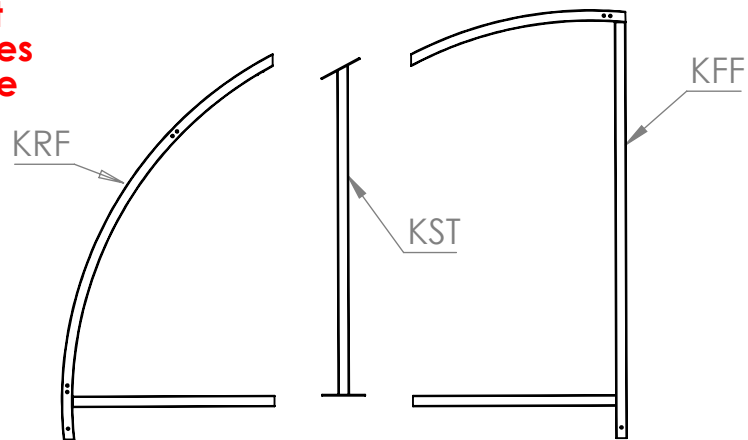


Note: Solid ends do not require any $M10 \times \frac{3}{4}$ fixings


Step 1 Take the **CF Side Frame** and attach the **CTB Tie Bar** to it in the positions shown below using the $M10 \times \frac{3}{4}$ Bolts supplied.

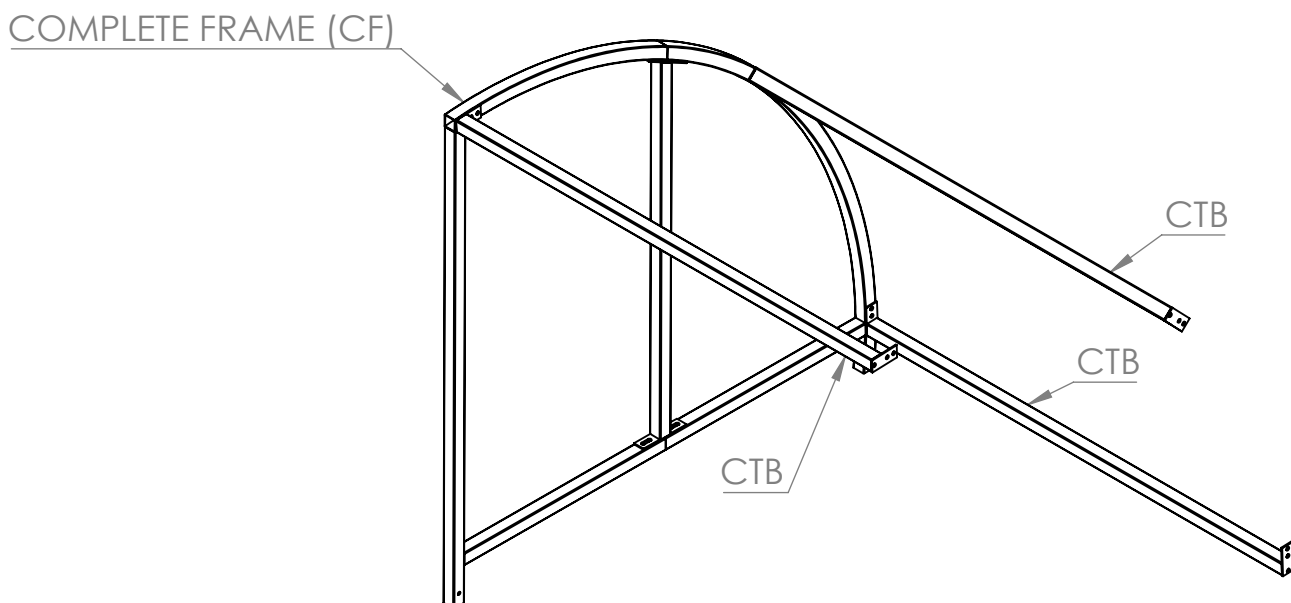

Step 2 Repeat **Step 1** with the other side of the shelter. (**Structure should now stand without support.**) Make sure all bolts are tight at this point.

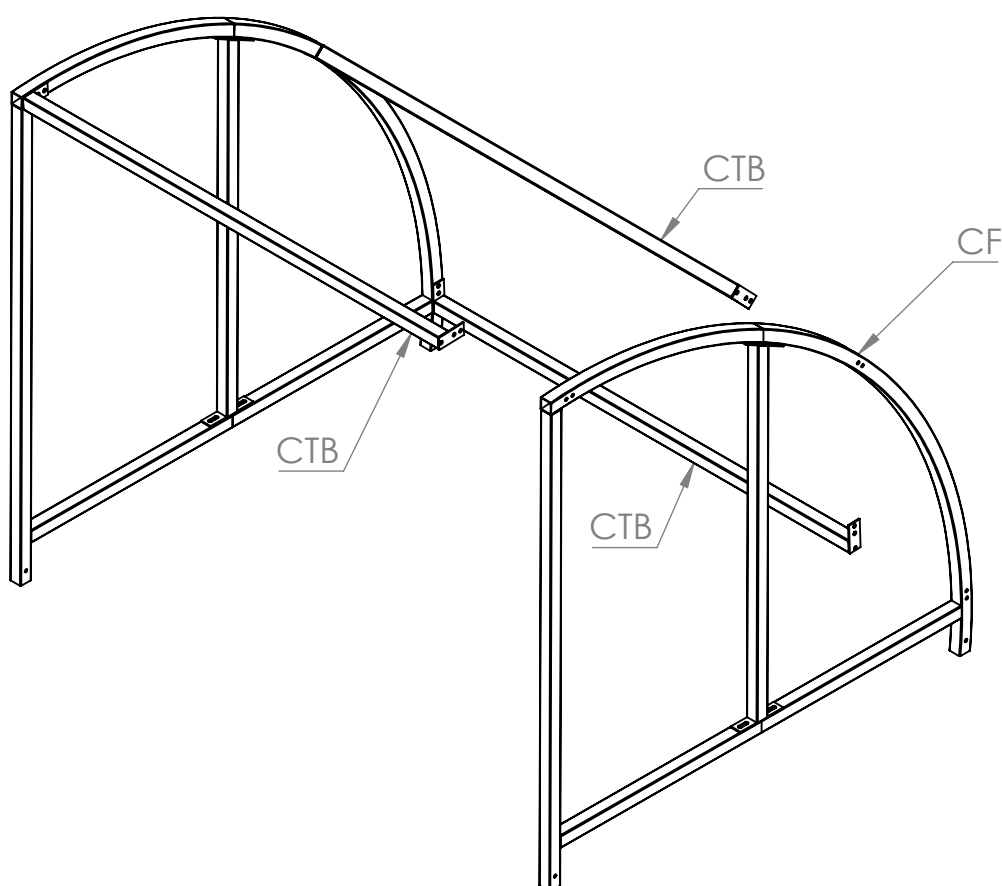


Step 3 Secure the polycarbonate supplied with the shelter to the outer parameter, using **1" TEC Screws** in the fixing kit. (Note: 8" Spacings Between **TEC Screws**)

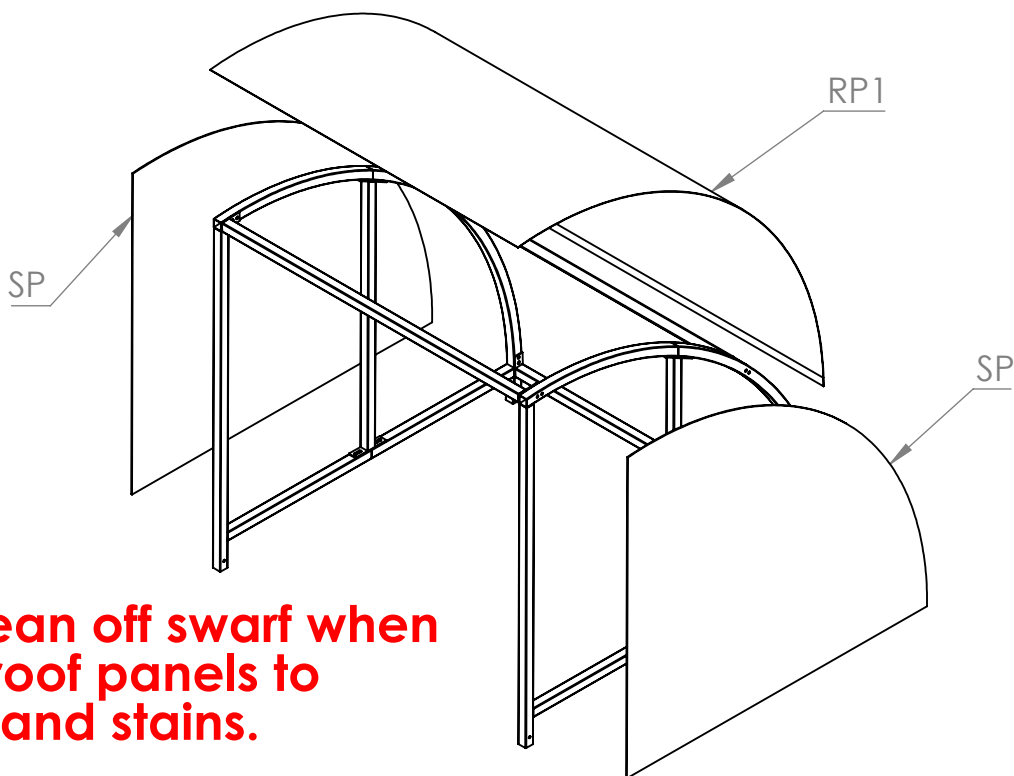


Always clean off swarf when fitting the roof panels to avoid rust and stains.

Step 4 Now all the polycarbonate is attached, move shelter to desire location.

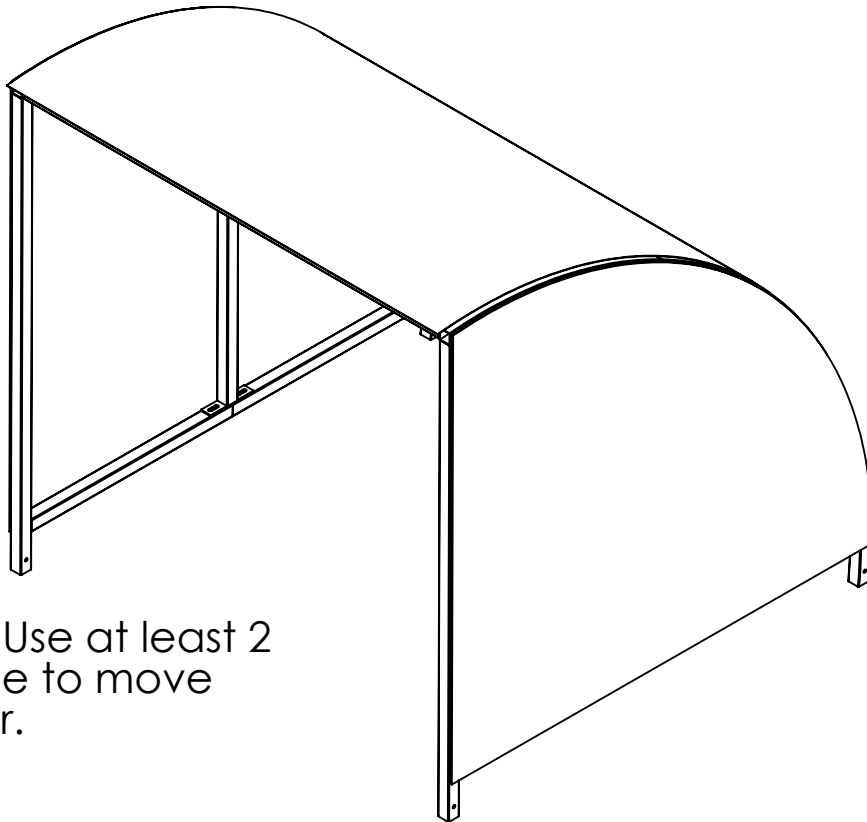

Note: Use at least 2 people to move shelter.

Step 5 Once in desired location bolt the foot to the shelter (**M10x3¹/₈**) and to ground (**M10/12 Anchor Bolt**) using fixings within the kit provided.

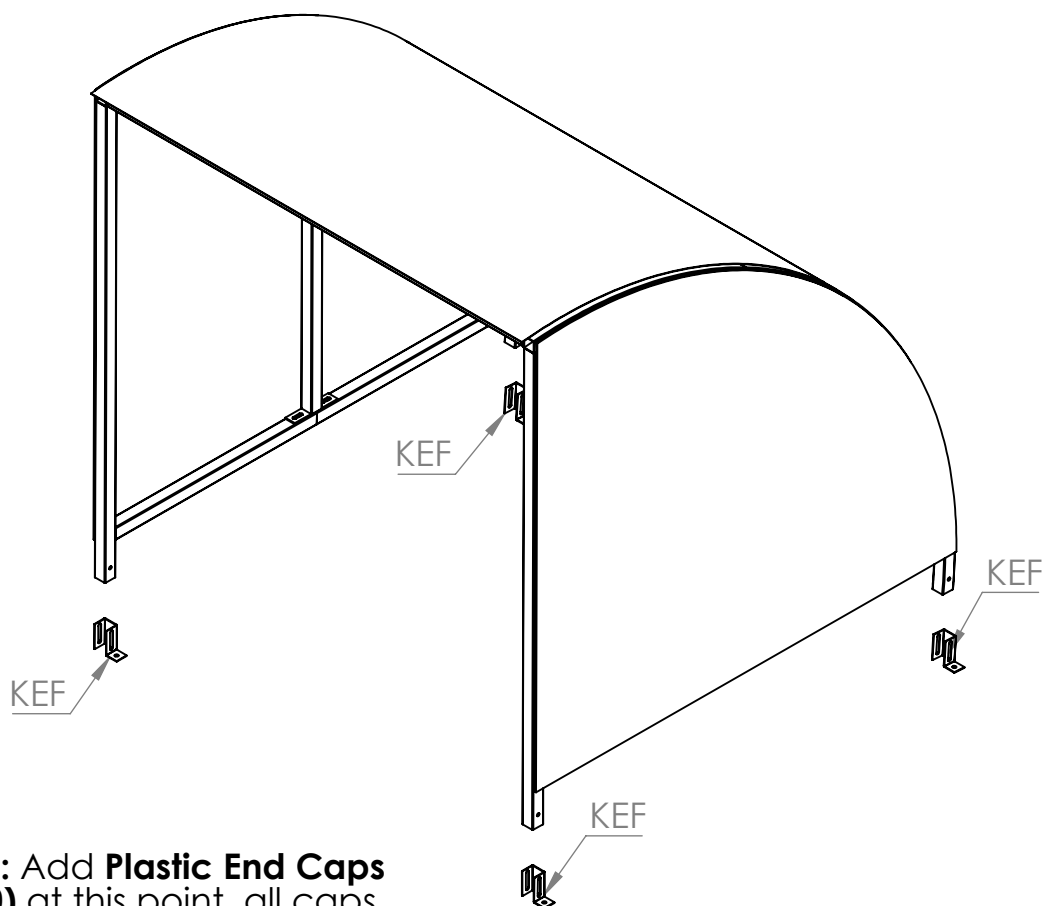

Note: Add **Plastic End Caps (M10)** at this point, all caps should be used.

NOTES:

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@nobutts.com

Web : www.nobutts.com

Tel : 1-888-662-8887

No Butts Bin Company, Inc. 16 Birch Lane, Madison, CT 06443

All Parts and Fixings checked by:	
Print Name:	Signature: