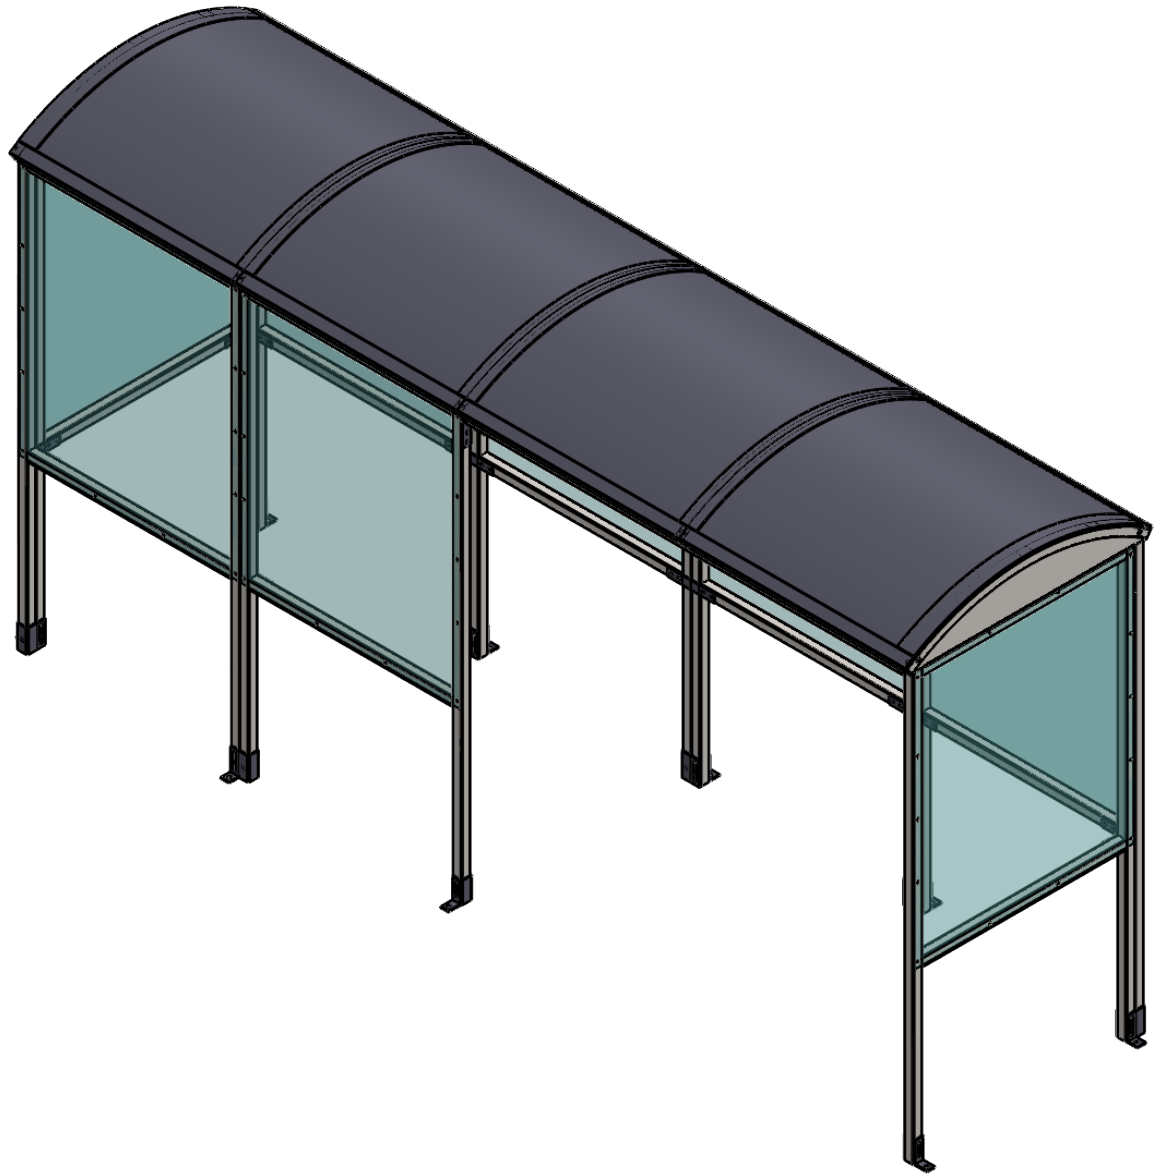


Assembly Instructions



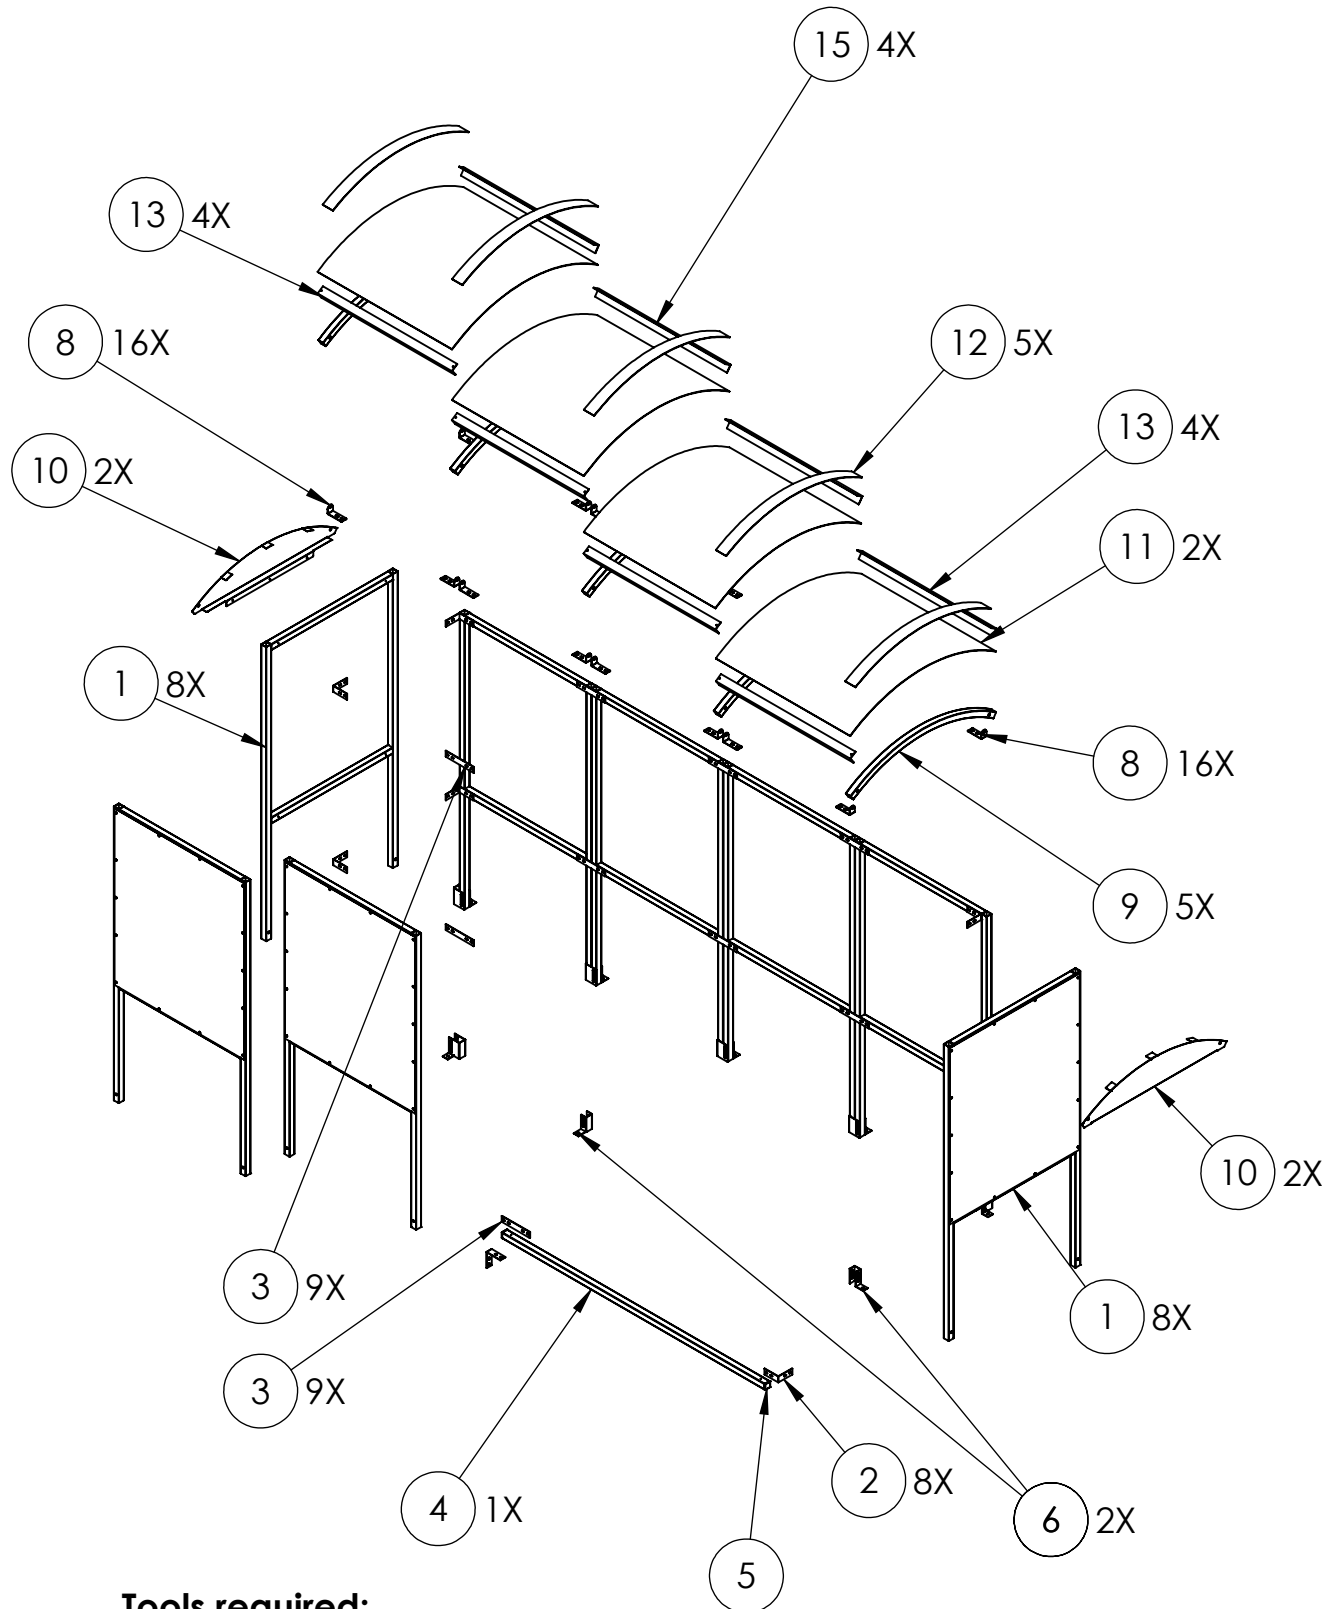
No Butts Bin Co.
Better Ash & Trash Solutions
Est. 1991

Email : Sales@nobutts.com
Web : www.nobutts.com
Tel : 1-888-662-8887

Product code: SR7896

Doc. No.: SR7896-01-191021-USA

EXPLODED VIEW AND TOOLS



Tools required:



Drill/Screwdriver



Mallet















Wrench



Torx bit

PARTS LIST AND FITTINGS


ITEM NO.	PART NO.	DESCRIPTION	Size (inch)	IMAGE	QTY.
1	S1	Full Frame	78.74 x 40.74		8
2	CB1	Corner Bracket - CB1	4.3 x 4.3 x 1.57		8
3	JF1	Joint Flat - JF1	4.33 x 1.57		9
4	ST3	Roof Tie - ST3	81.1		1
5	EC40	40x40 PLASTIC END CAP	1.57 x 1.57		2
6	FT1	FT1 BRACKET	1.57 x 1.57 x 3.94		2
7	FT3	FT3 Bracket	1.57 x 3.15 x 4.17		7
8	DR	Rafter Bracket	4.3 x 1.6 x 2		16
9	DR1R	Rafter	45		5
10	DR1I	Infill Panel	44.6 x 7.9		2
11	DR1PO	Roof Panel Outer	47.7 x 41.5		2
12	DR1T	Roof Trim	47.7 x 3.1		5
13	DRATO	DR Ally-Angle Trim Outer	2 x 2 x 41.5		4
14	DR1PI	DR1 Roof Panel Inner	47.6 x 40.75		2
15	DRATI	DR Ally-Angle Trim Inner	2 x 2 x 40.75		4

Fittings	Bolt set M10				T25	T38	AB1210
	M10 x 60mm	Nut	Washer	Black Cap	25 mm Tech screw	38 mm Tech screw	M10/12 x 100 mm Concrete Bolt
Pack A+B	40	40	80	80	136	66	13
Required	19	19	38	38	100	30	9
Image							


Step 1 Assemble **S1** frames to make up the main structure using **CB1** brackets for the corners and **JF1** brackets for straight joints. Also use **CB1** and **JF1** brackets to secure the **ST3** tie bar.

NOTE: Insert **EC40** into **ST3** before installation.


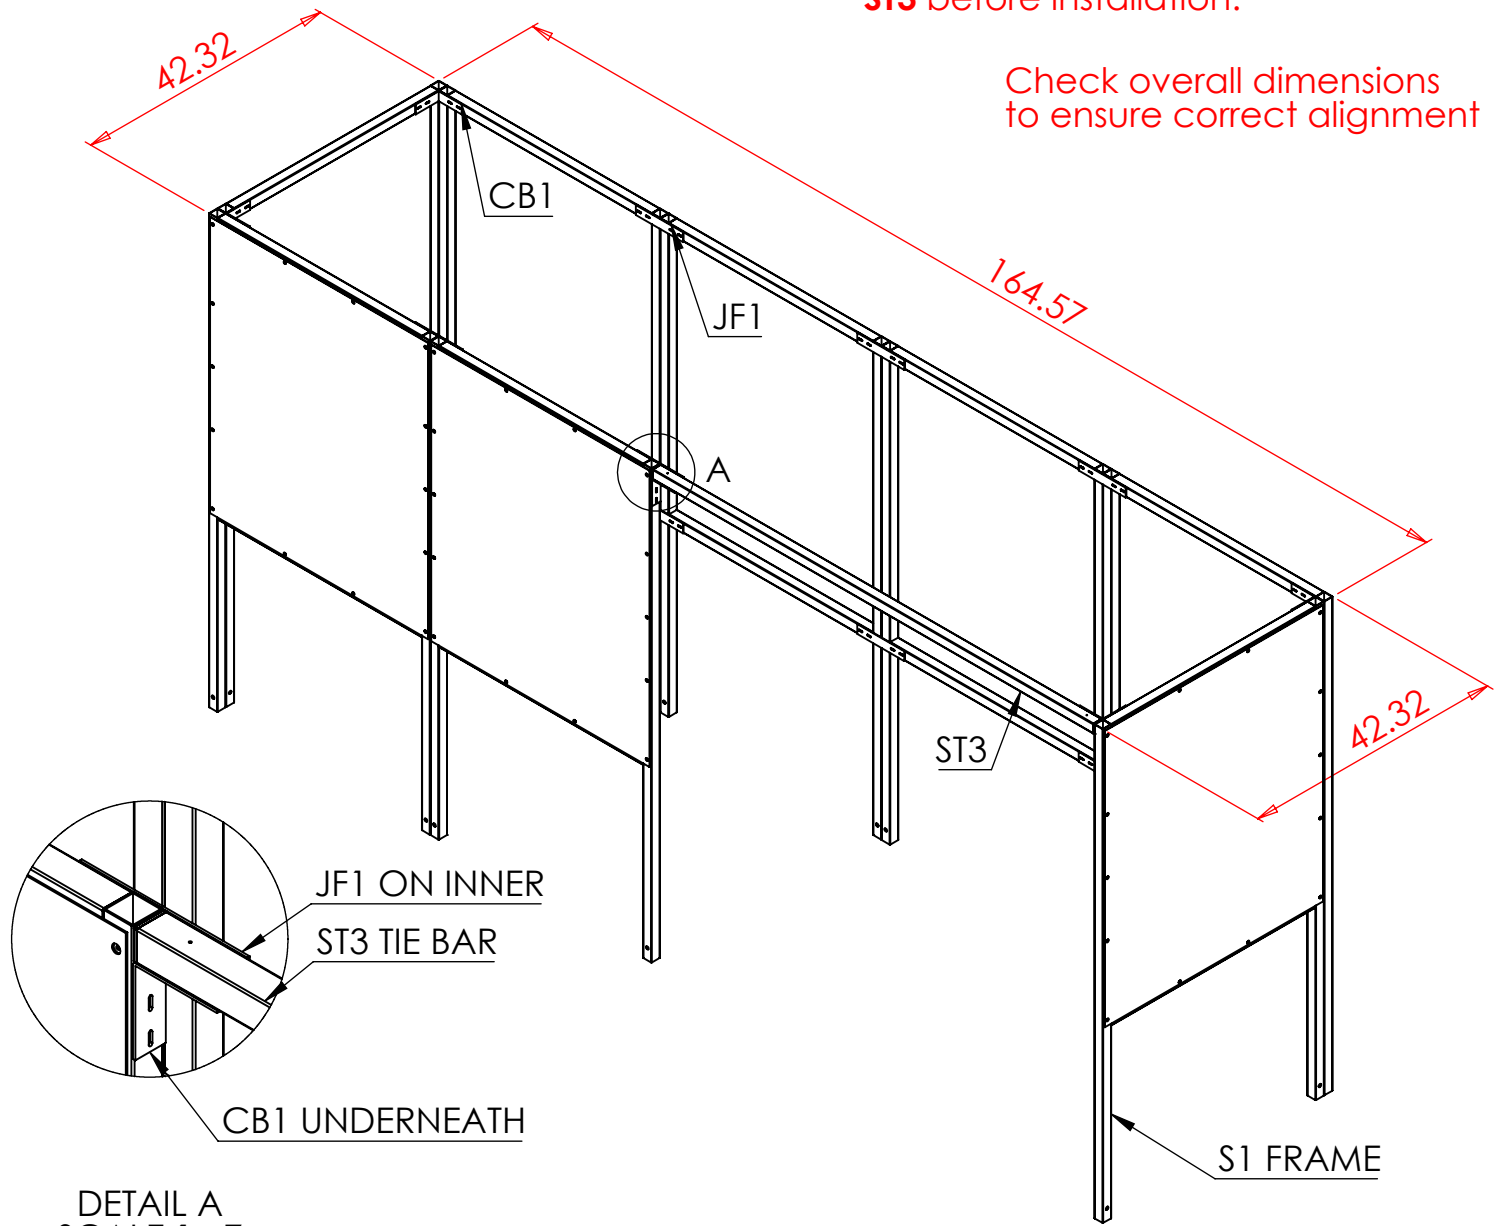
Check overall dimensions to ensure correct alignment




DETAIL A
SCALE 1 : 7

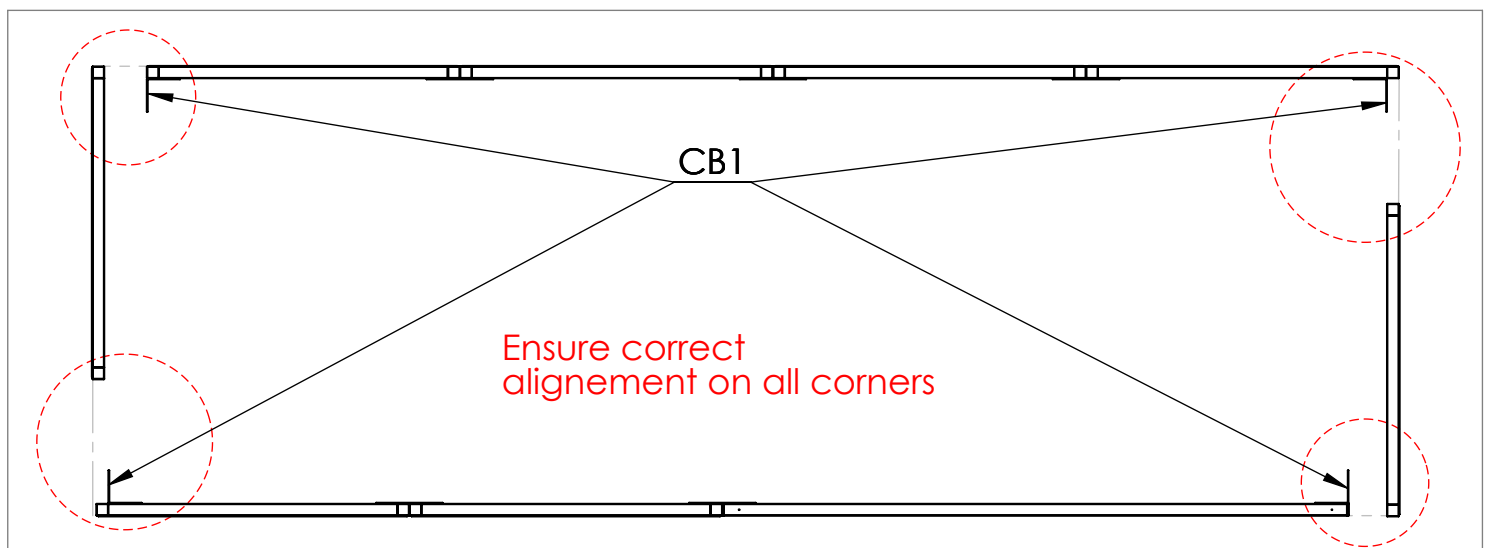

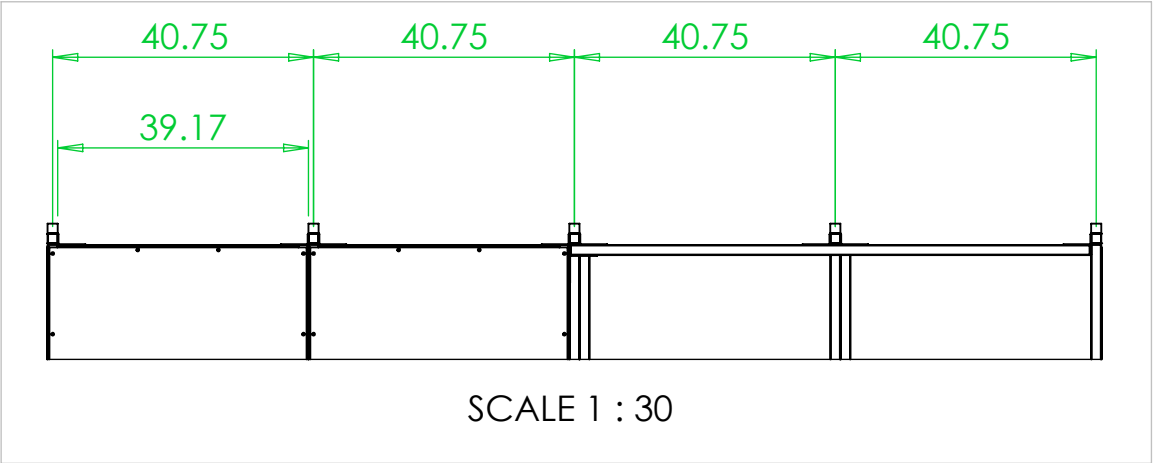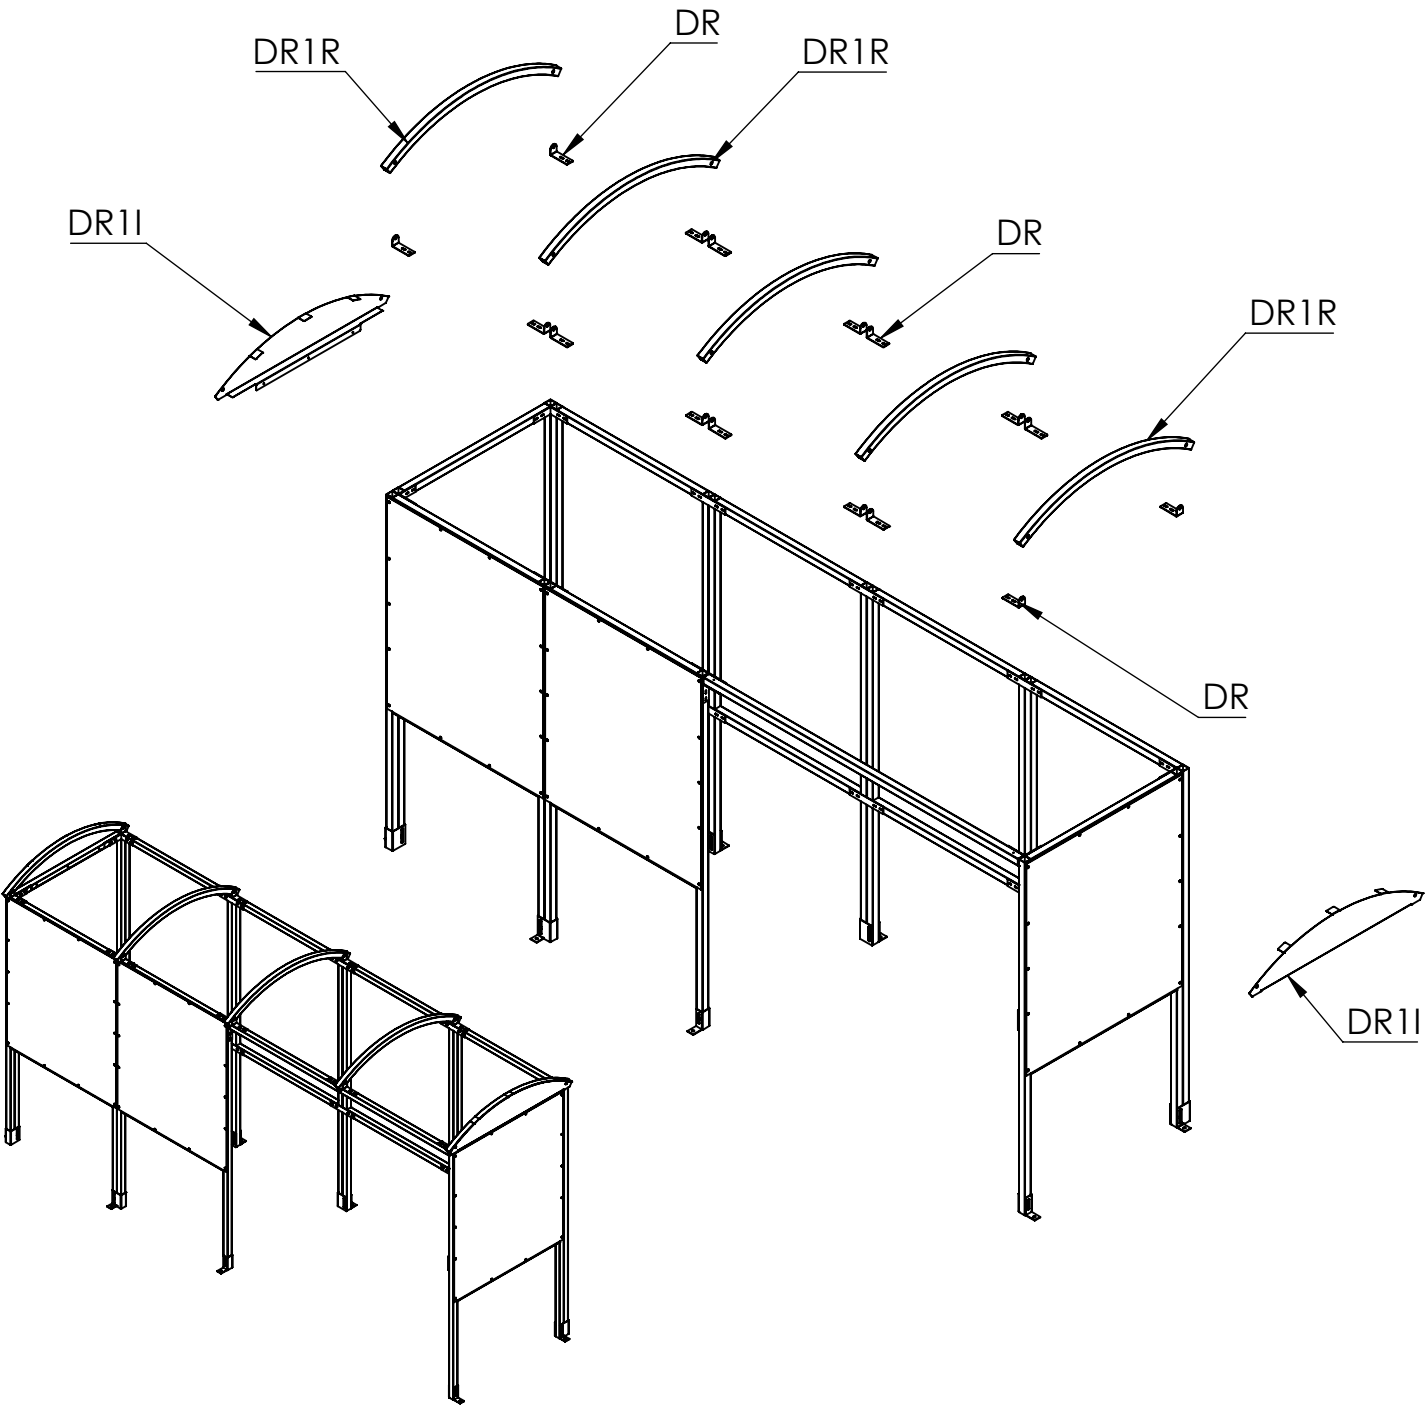
Step 2 Attach the **DR1R** rafters using the **DR** brackets and 1 inch tech screws. The Infill panels (**DR1I**) are also attached using 1 inch tech screws but must be placed into positioned at the same time as the end rafters.



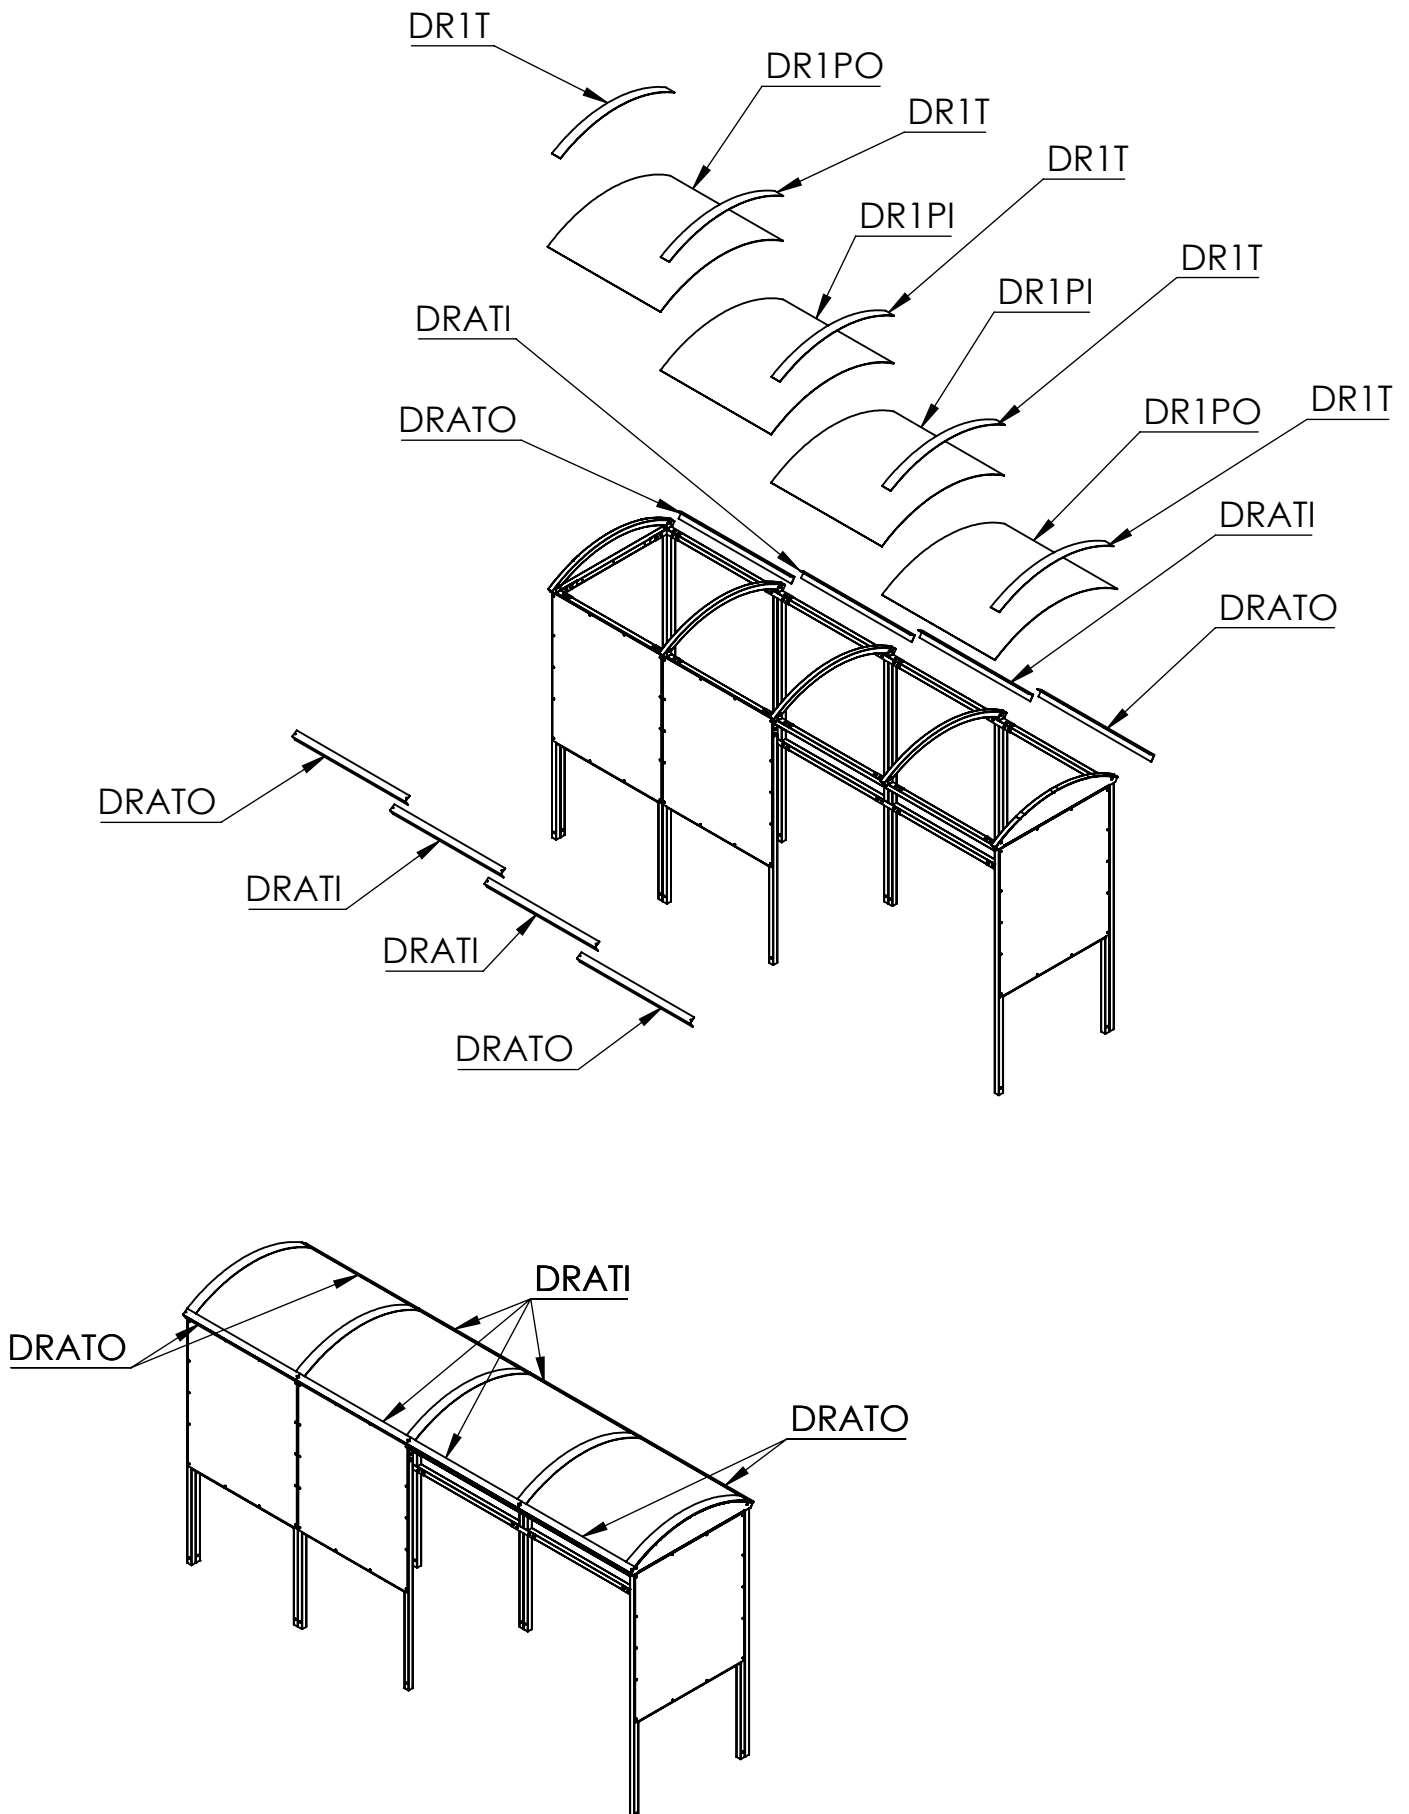
Step 3 Arrange the roof panels by lining up the end panels(**DR1PO**) flush with the outer rafters and equally space the middle pieces(**DR1PI**) between the outers. Seal the gaps between the panels and the outer edges with the **DR1T** strips. Then cap the bottom of the rafters using the **DRATO** and **DRATI** angles.



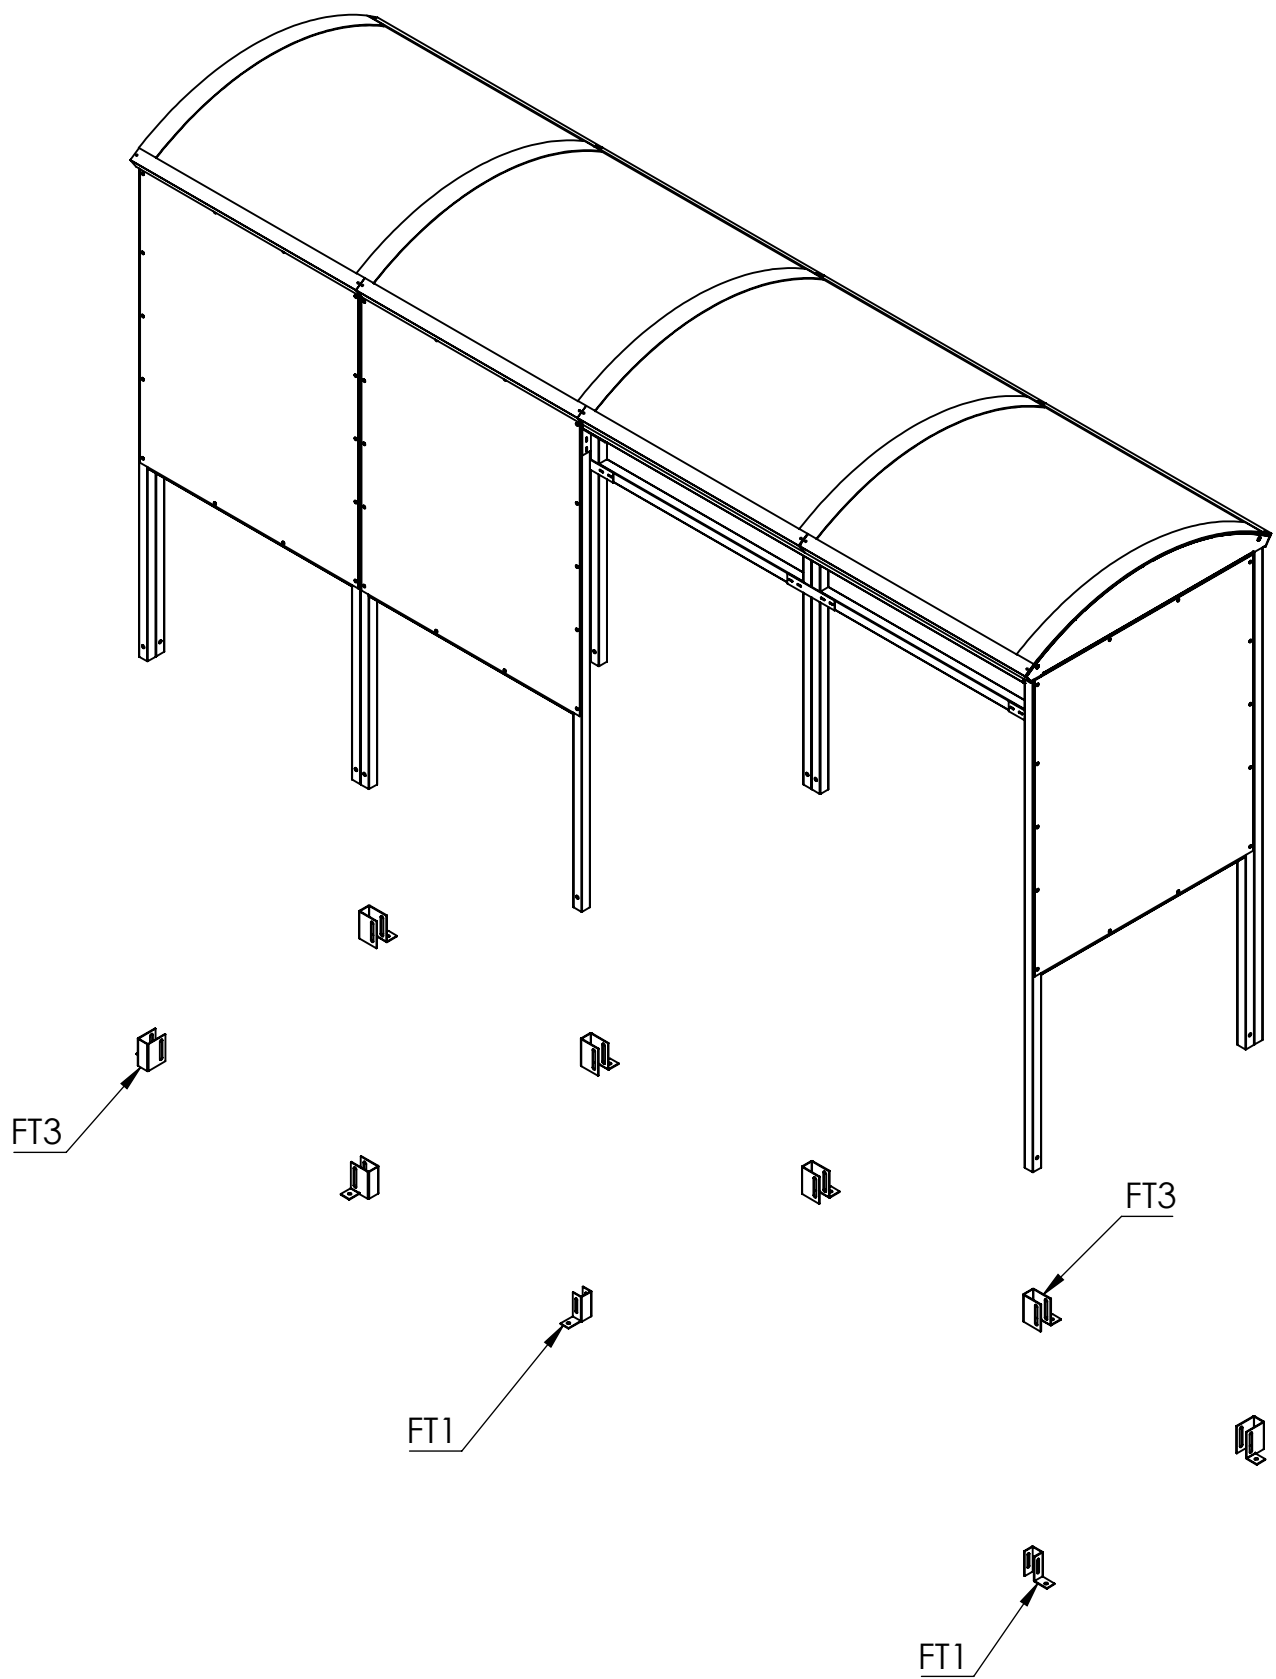Step 4 Move the shelter into its final position and attach the floor brackets. **FT1** brackets are used where there is only a single leg and **FT3** brackets used where there are two legs next to each other.



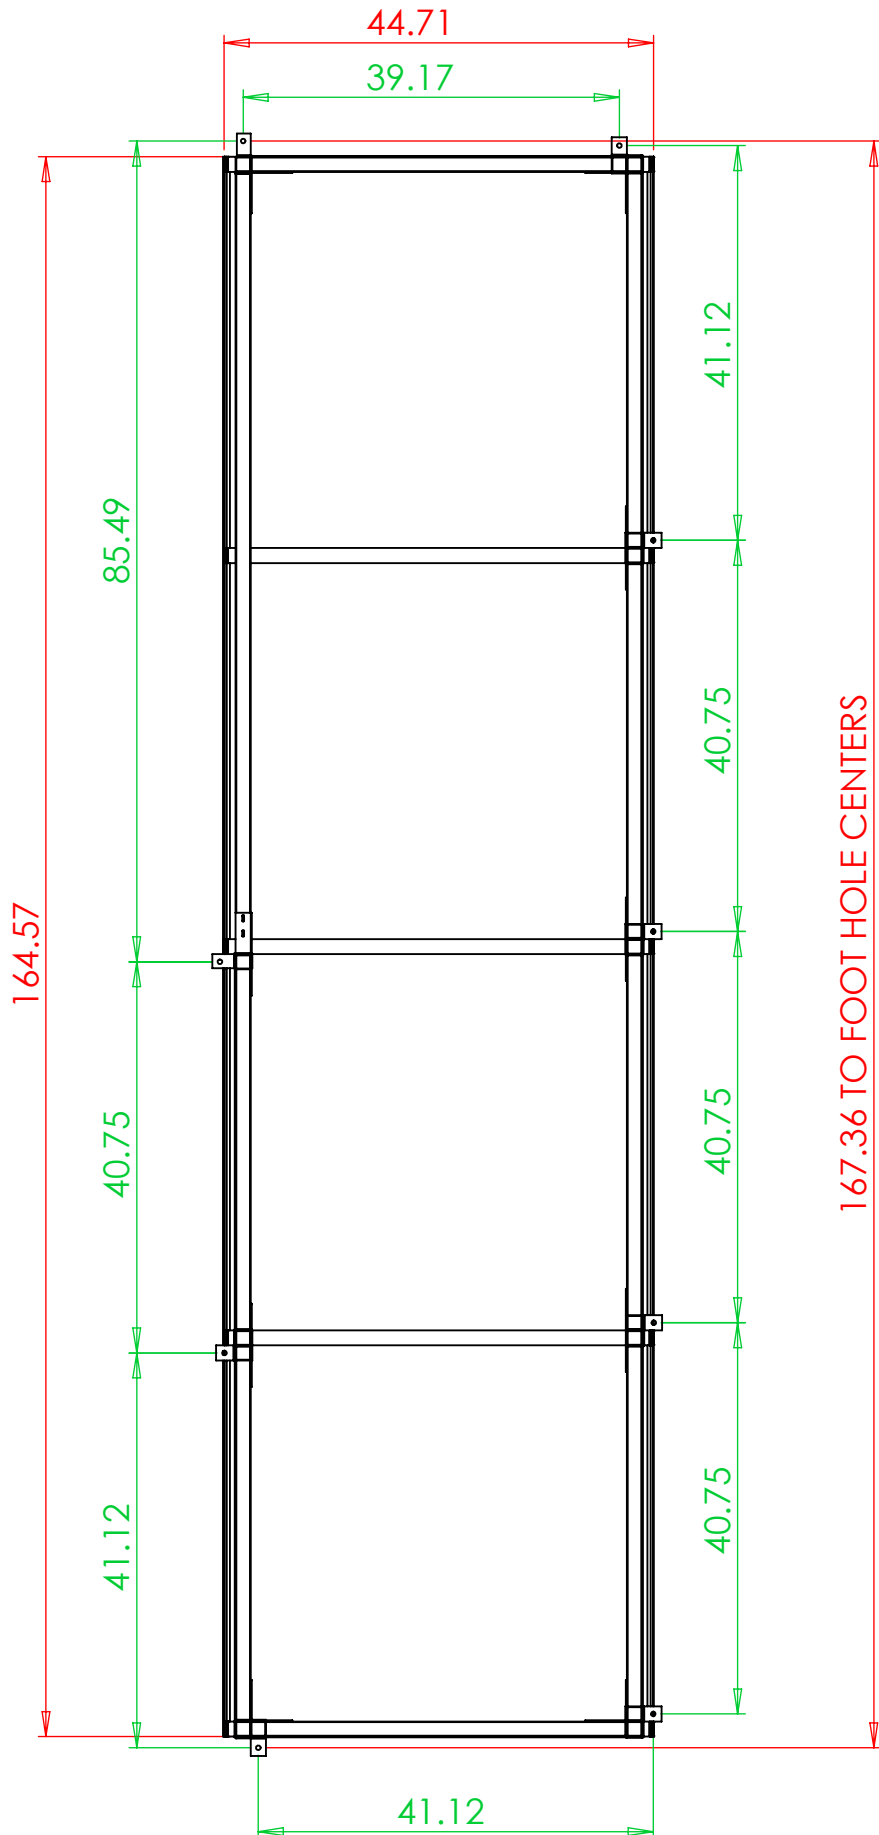GROUND ANCHOR POSITIONS AND OVERALL SIZE
SUGESTED SIZE FOR BASE: 8Inch OVERSIZES ON ALL 4 SIDES
Scale 1:20



THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fitting are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

No Butts Bin Company, Inc.
16 Birch Lane, Madison, CT 06443

Email: Sales@nobutts.com

Web: www.nobutts.com

Tel: 1-888-662-8887

All Parts and Fixing checked by:	
Print Name:	Signature