

Assembly Instructions



Email : sales@nobutts.com


Web : www.nobutts.com

Tel : 1-888-662-8887















Shelter Type: SR8298

SR8298-01-28102021-USA


EXPLODED VIEW

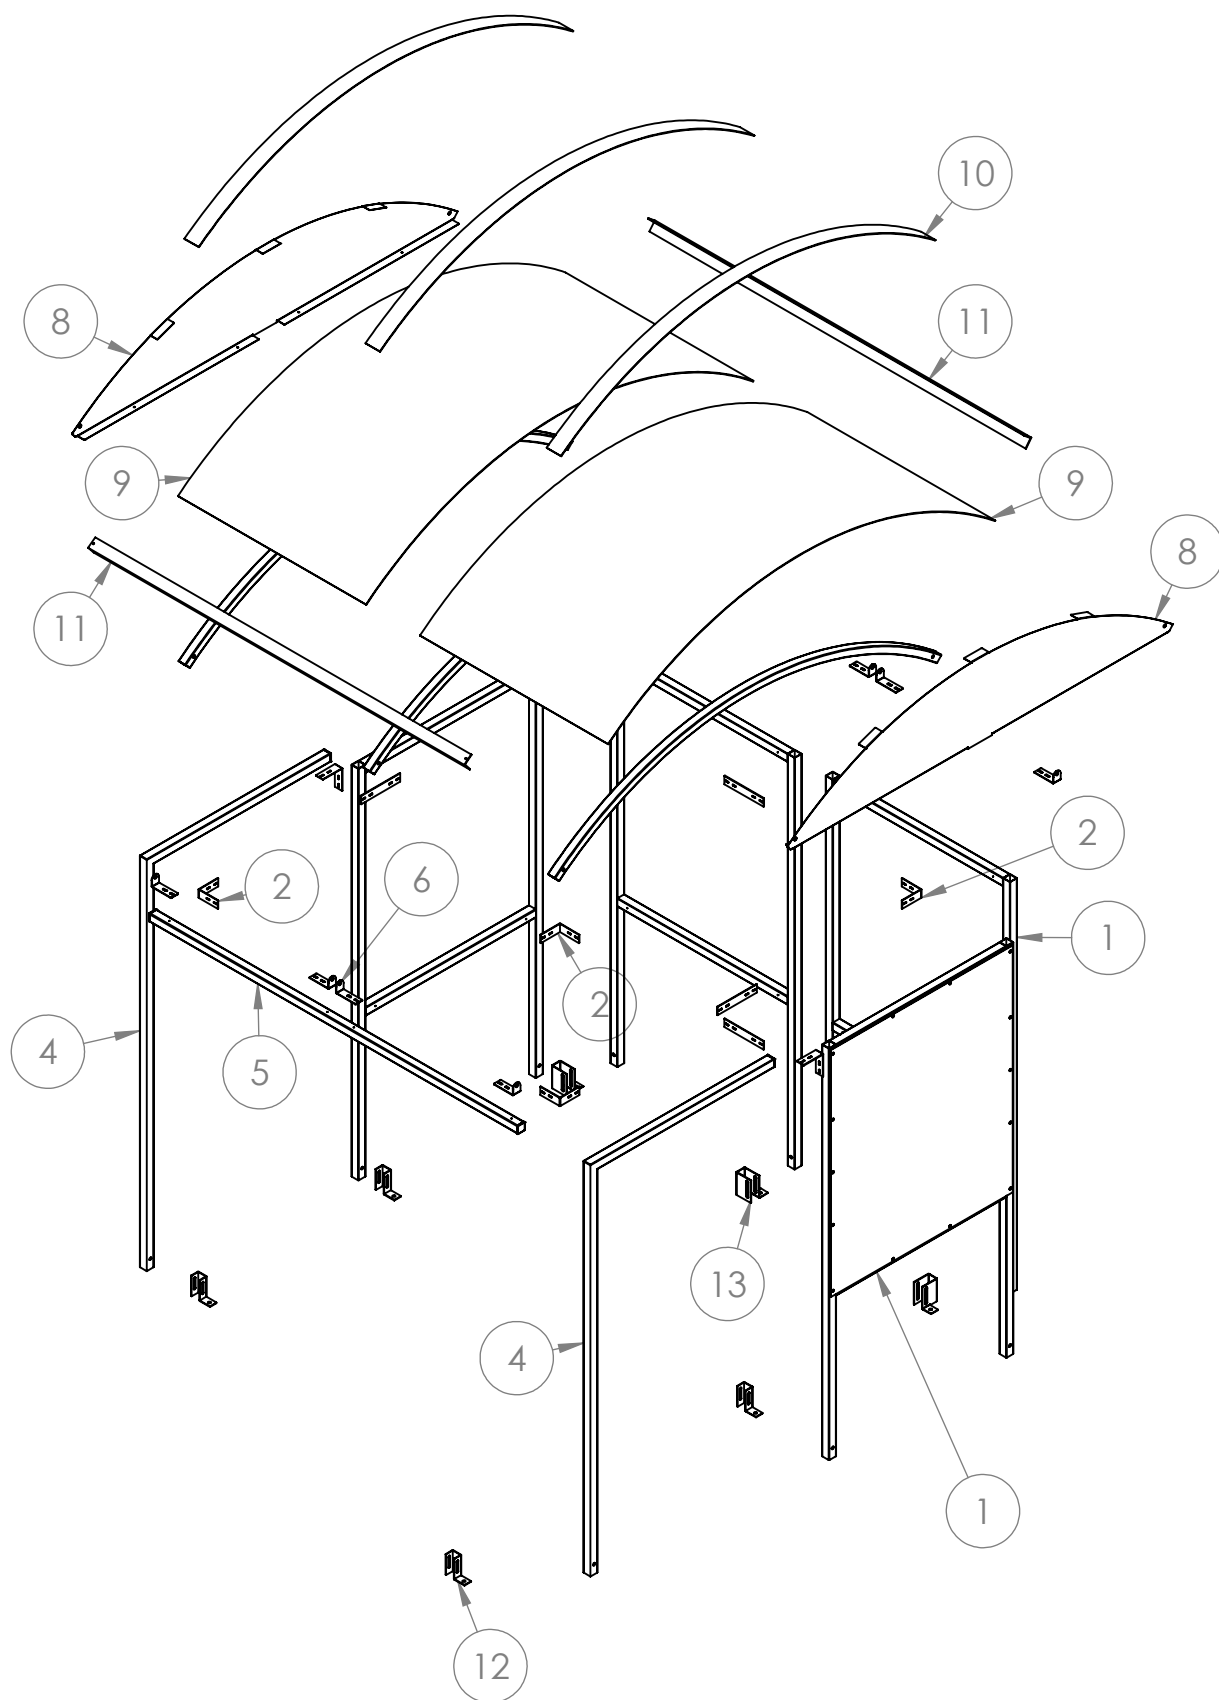

PARTS LIST

| ITEM NO. | PART NO. | DESCRIPTION | Size (inch) | IMAGE | QTY. |
|----------|----------|----------------------|--------------------|---|------|
| 1 | S1 | Full Frame | 78.74 x 40.74 |  | 4 |
| 2 | CB1 | Corner Bracket - CB1 | 4.3 x 4.3 x 1.57 |  | 8 |
| 3 | JF1 | Joint Flat - JF1 | 4.33 x 1.57 |  | 4 |
| 4 | P1 | Post Frame - P1 | 78.74 x 40.74 |  | 2 |
| 5 | ST3 | Roof Tie | 81.1 x 1.57 x 1.57 |  | 1 |
| 6 | DR | Rafter Bracket | 4.3 x 1.6 x 2 |  | 8 |
| 7 | DR2R | DR2R Rafter | 92.32 |  | 3 |
| 8 | DR2I | DR2 infill panel | 85 x 15.75 |  | 2 |
| 9 | DR2PO | DR2 Roof Panel Outer | 92.32 x 41.54 |  | 2 |
| 10 | DR2T | DR2 Roof Trim | 92.32 x 3.15 |  | 3 |
| 11 | DRAT2 | Ally-Angle Trim 2M | 2 x 2 x 83 |  | 2 |
| 12 | FT1 | FT1 BRACKET | 1.57 x 1.57 x 3.94 |  | 4 |
| 13 | FT3 | FT3 Bracket | 1.57 x 3.15 x 4.17 |  | 3 |
| 14 | EC40 | Plastic end cap | 1.6 x 1.6 |  | 4 |

FIXINGS

| Fittings | Bolt set M10 | | | T25 | T38 | | BTANCM12100 |
|----------|---|---|---|---|--|---|---|
| | M10 x 60mm | Nut | Washer | 1" Tech screw | 1.5" Tech screw | Black Caps | M10/12 x 100 mm Concrete Bolt |
| Pack A+B | 33 | 33 | 66 | 136 | 40 | 66 | 11 |
| Image |  |  |  |  |  |  |  |



Drill/Screwdriver

Tools required:



17mm Wrench




Mallet




T25 Torx bit

Step 1 Assemble **S1** frames to make up the main structure using **CB1** brackets for the corners and **JF1** brackets for the straight joints. Attach **P1** post to the S1C Frame using **CB1** and **JF1** brackets. Brackets as shown below.

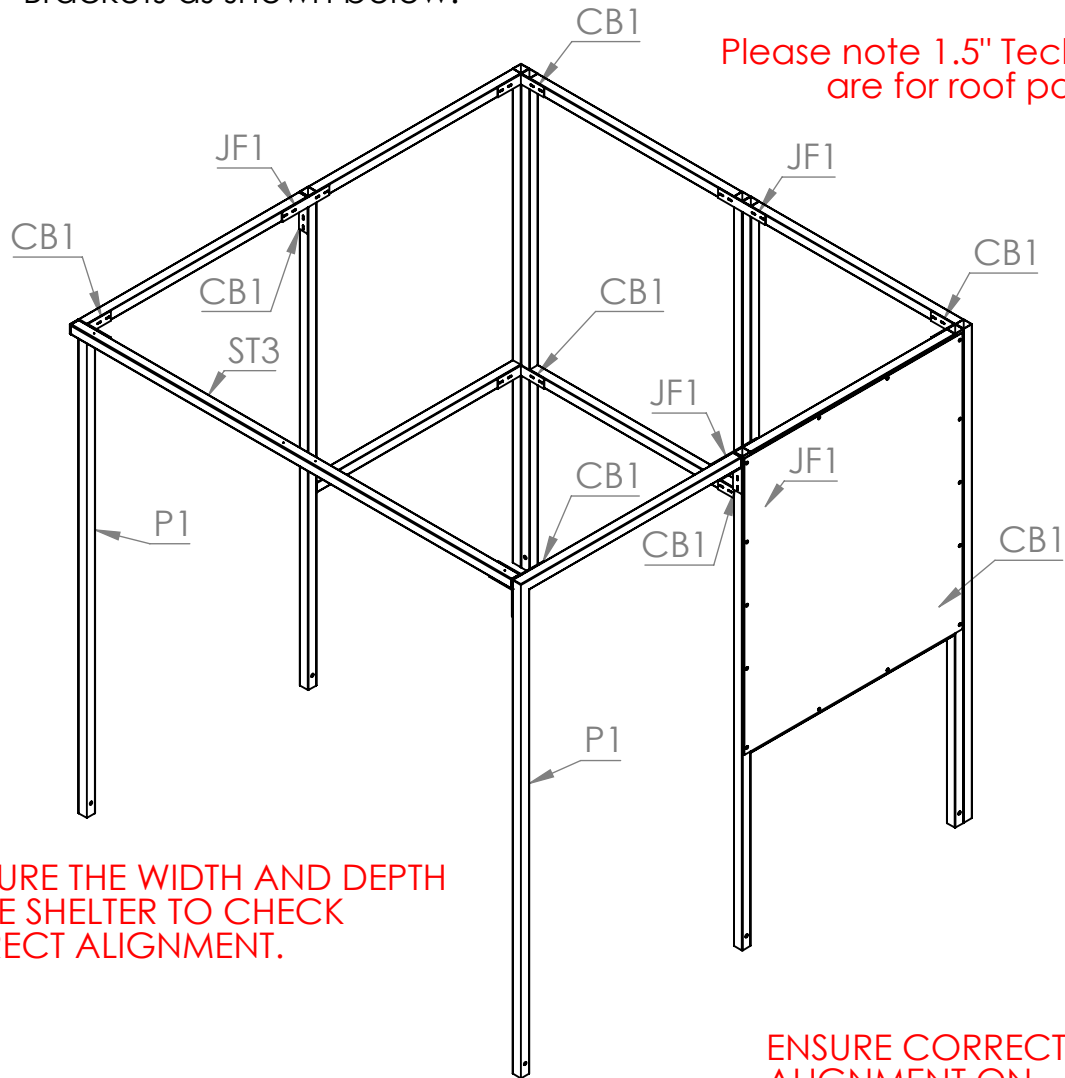


MEASURE THE WIDTH AND DEPTH OF THE SHELTER TO CHECK CORRECT ALIGNMENT.

ENSURE CORRECT ALIGNMENT ON CORNERS

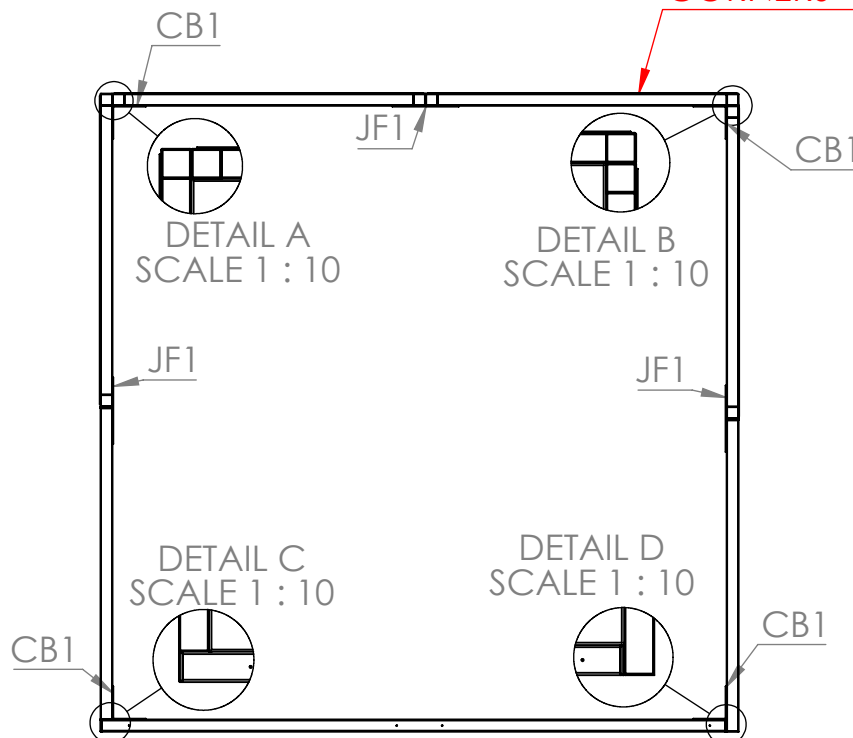


Step 2

Attach **DR2R** rafters using **DR** brackets. Secure the **END PANELS (DR2I)** to frames using tec screws. The end rafters need to be placed in position at the same time as the **DR2I**

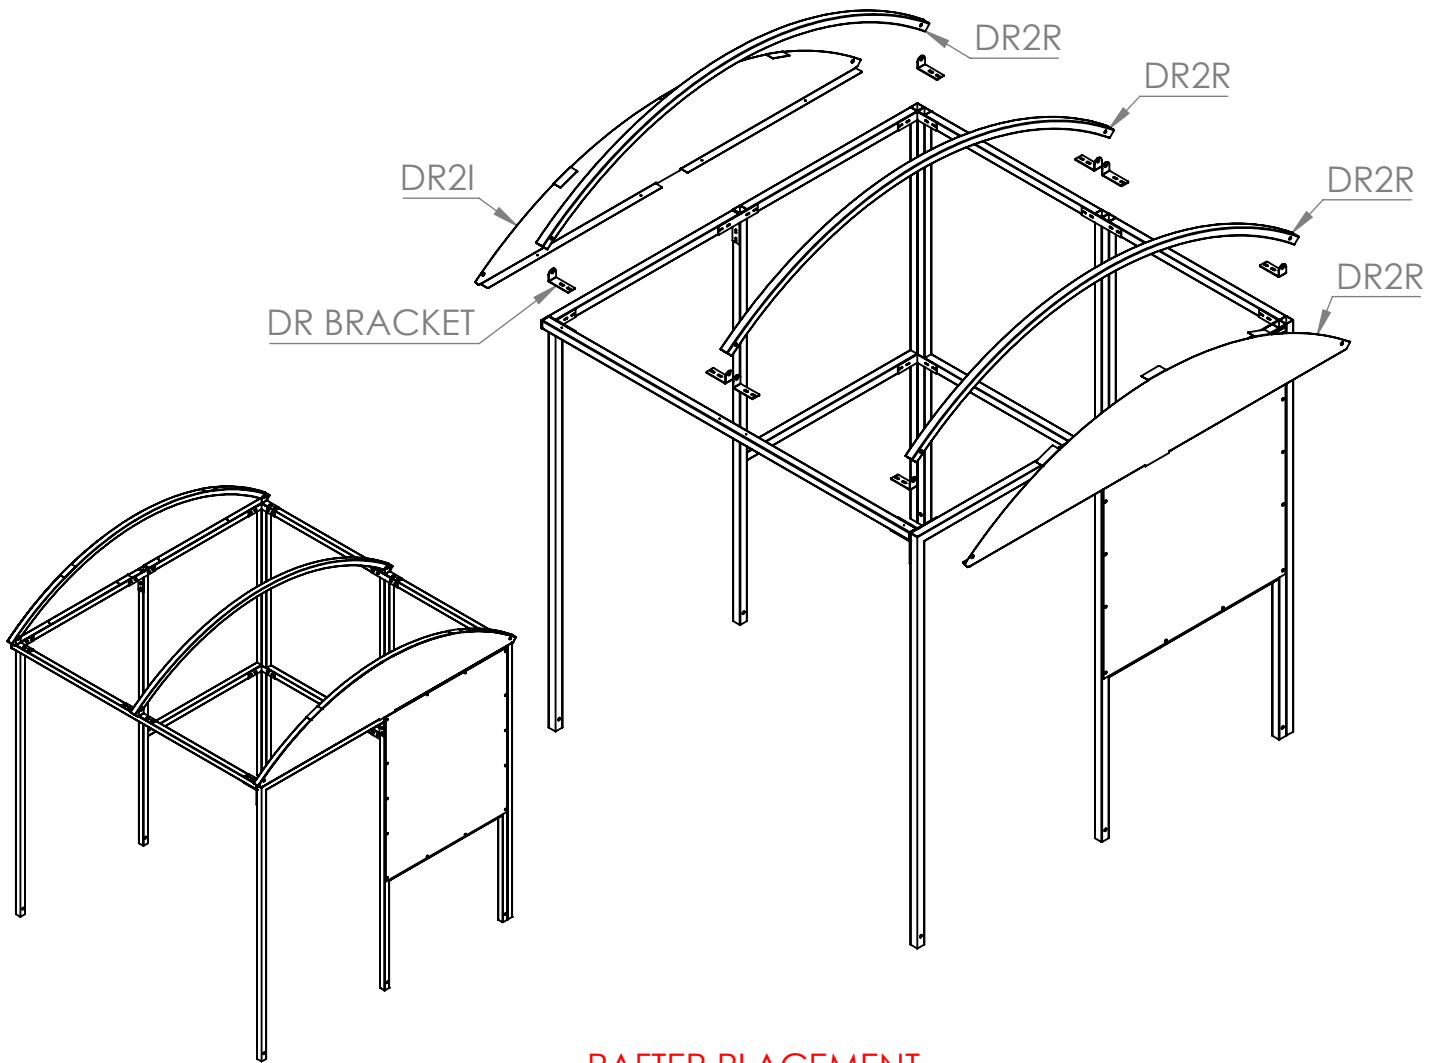


RAFTER PLACEMENT

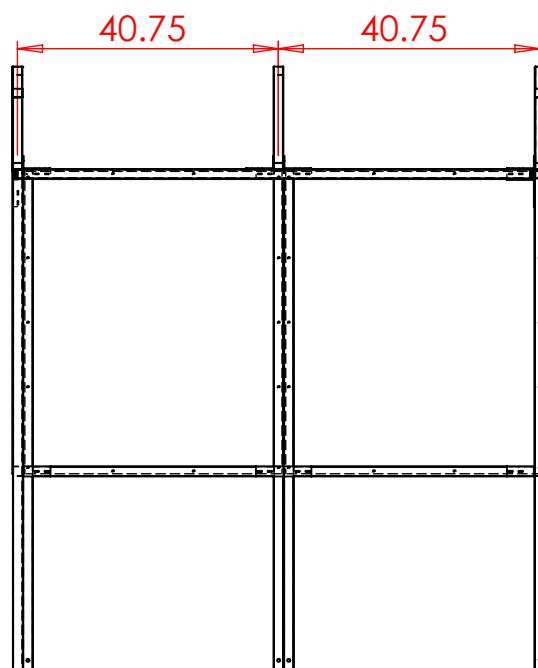


Step 3

Attach the **DR2PO** to the top of the rafters. Seal the gap between the panels using the **DR2T** strips. Then attach the **DRAT2** Trim parts to the lower part of the rafters as shown below.

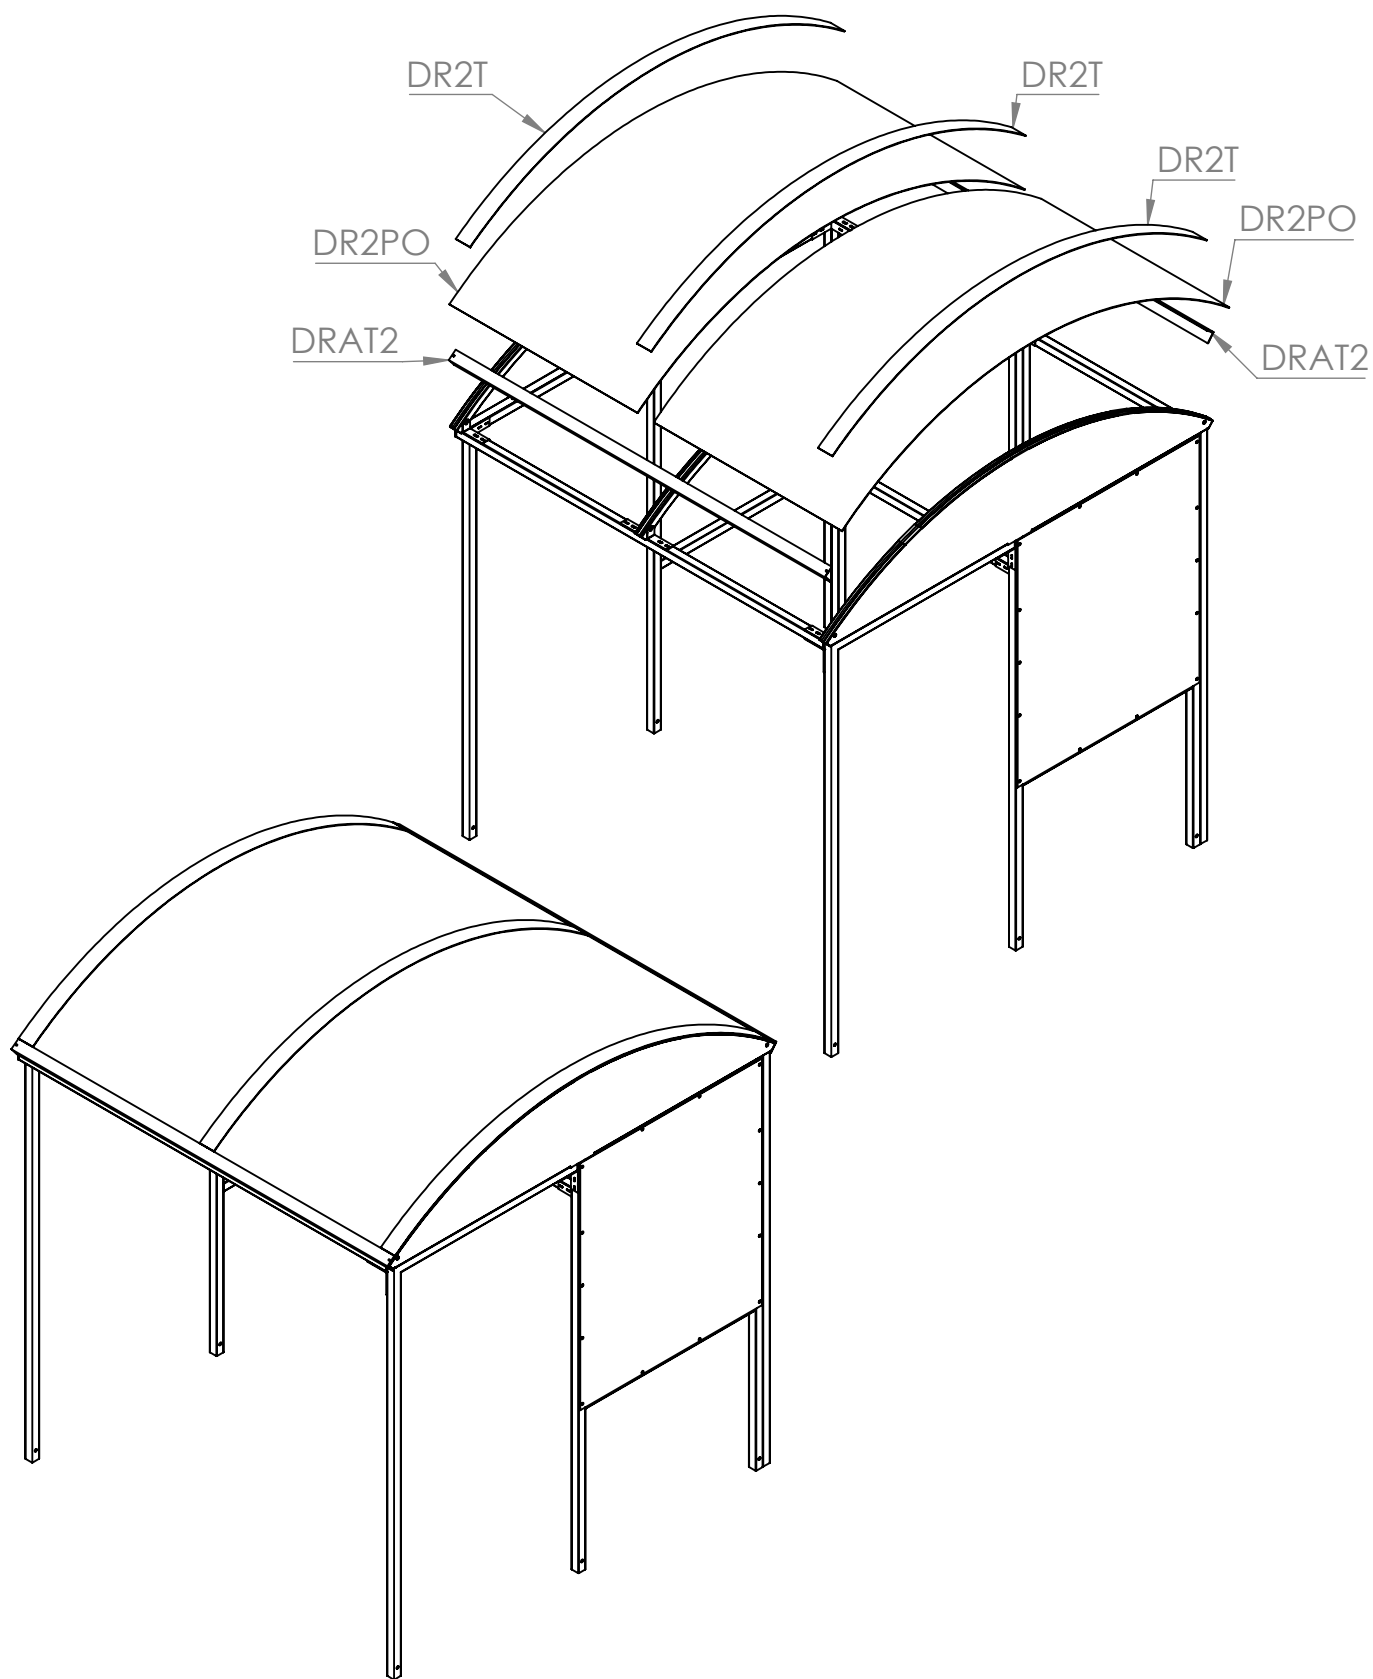


Step 4

Move the shelter into its desired position and attach the foot brackets **FT1/FT3** before fixing in place.

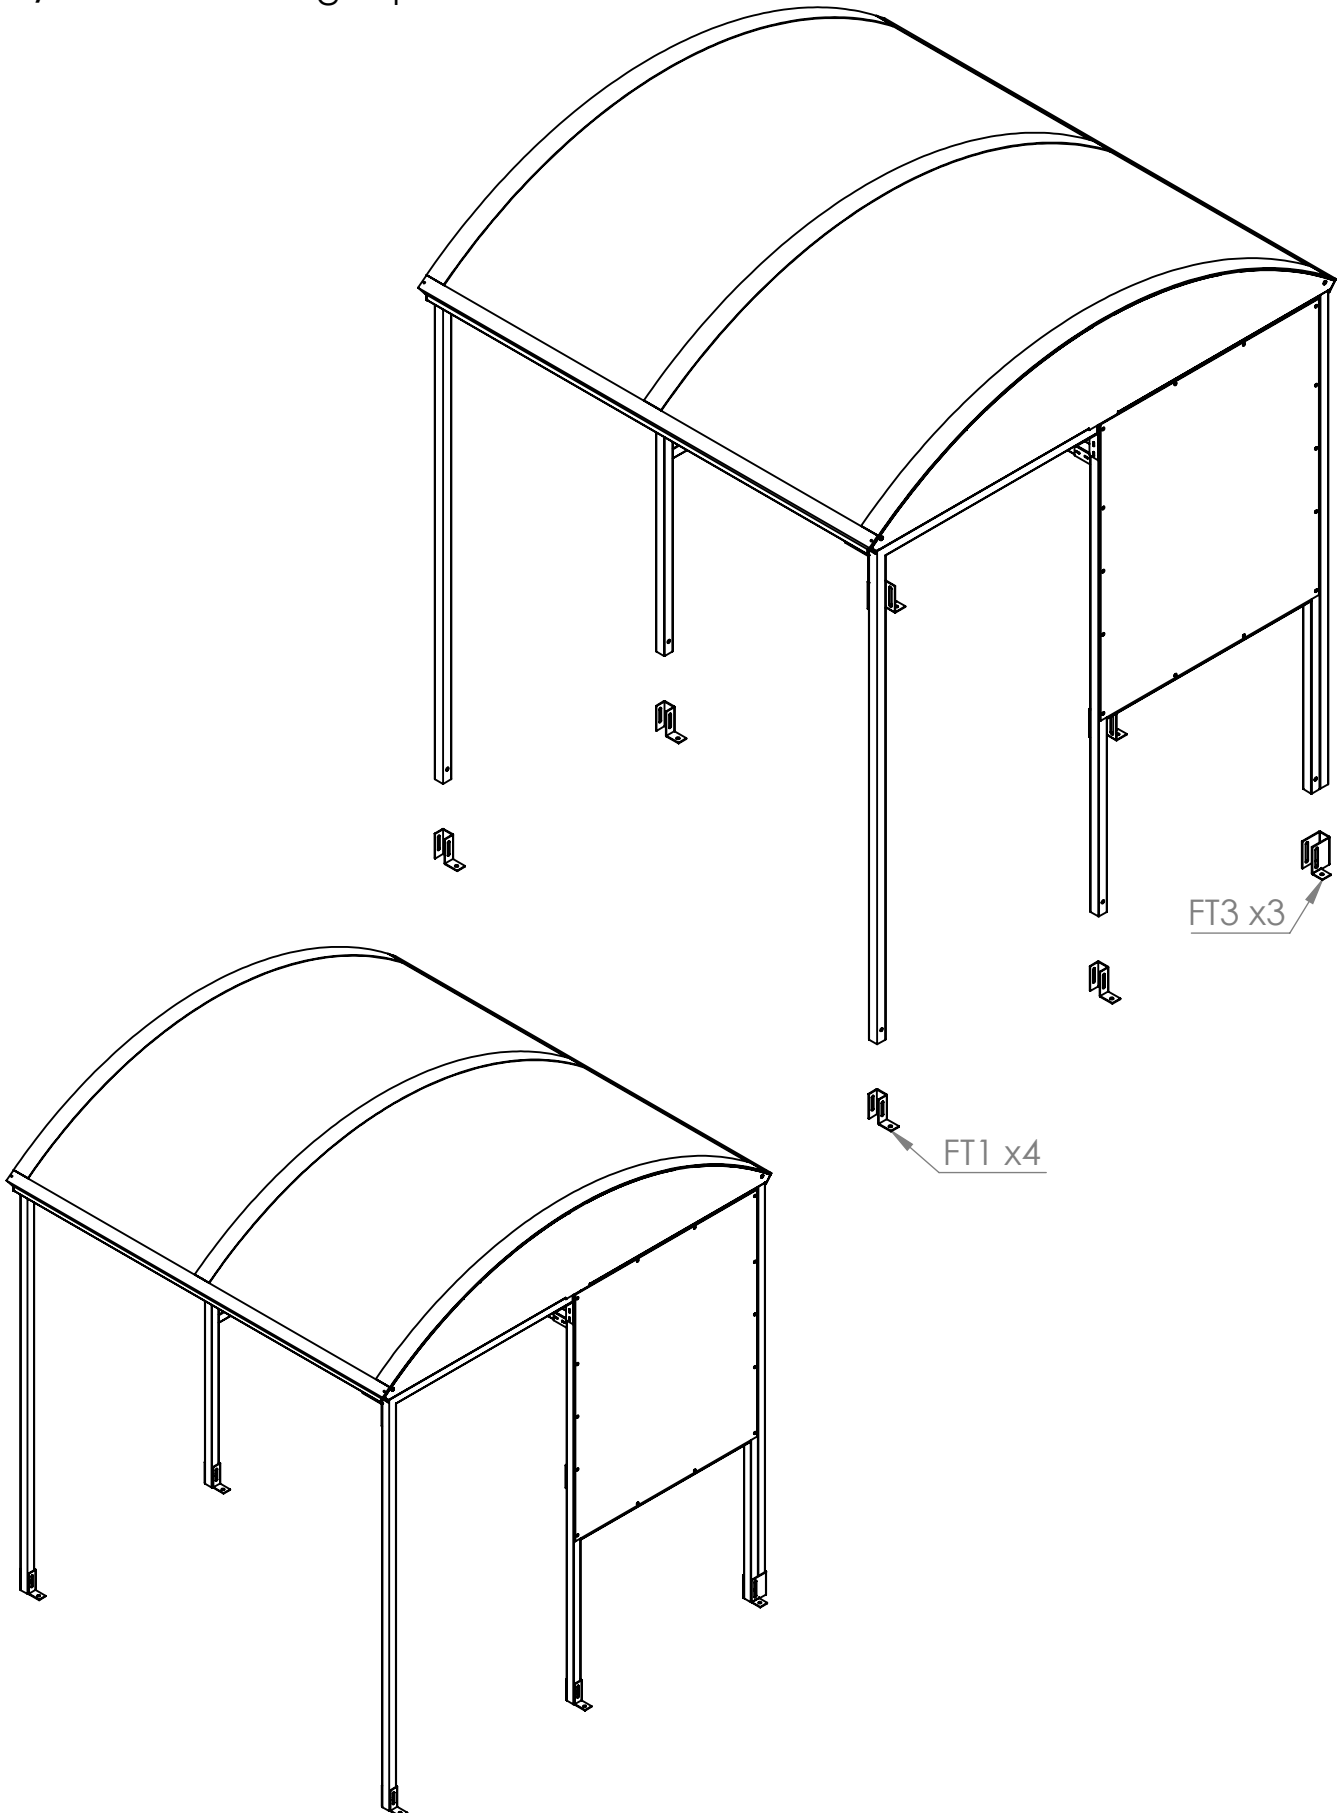

PLAN VIEW

OVERALL DIMENSIONS AND GROUND FIXING POSITIONS
Suggested size for concrete base: 8" oversized on all 4 sides.

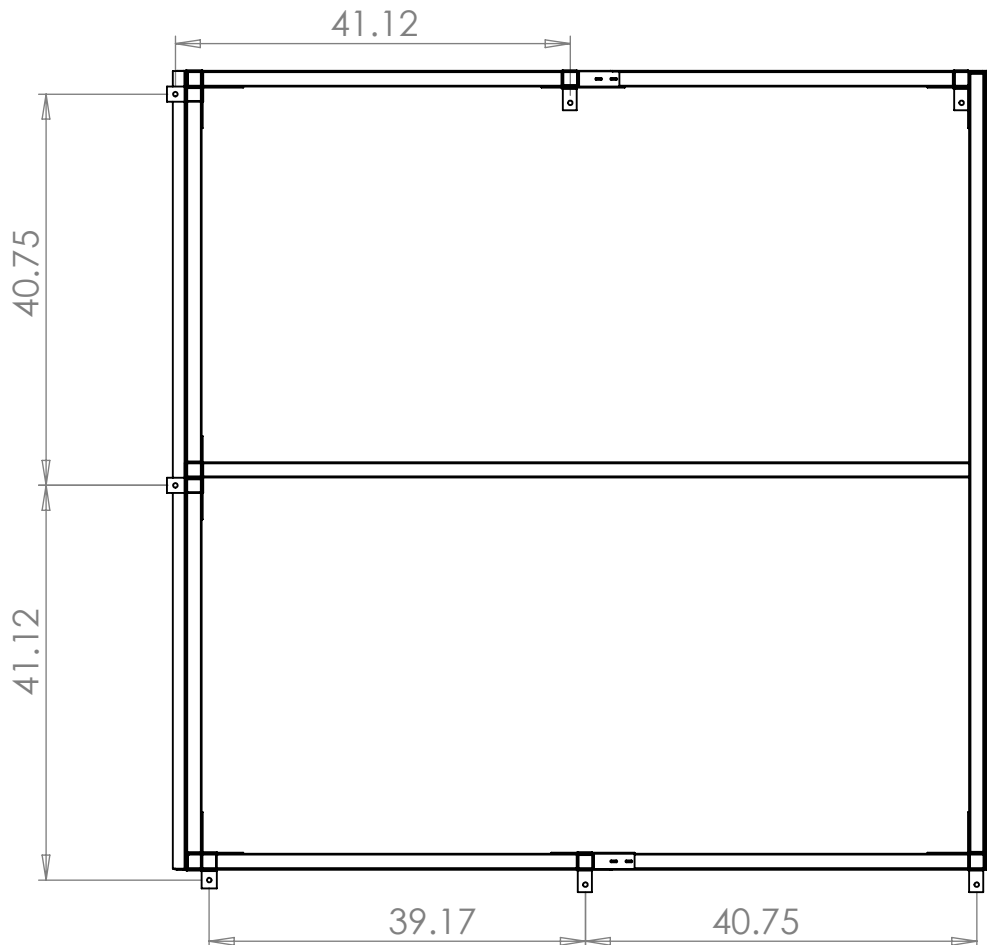

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@nobutts.com

Web : www.nobutts.com

Tel : 1-888-662-8887

No Butts Bin Company, Inc. 16 Birch Lane, Madison, CT 06443

| | |
|--|------------|
| All Parts and Fixings checked by: | |
| Print Name: | Signature: |
| | |