


Assembly Instructions

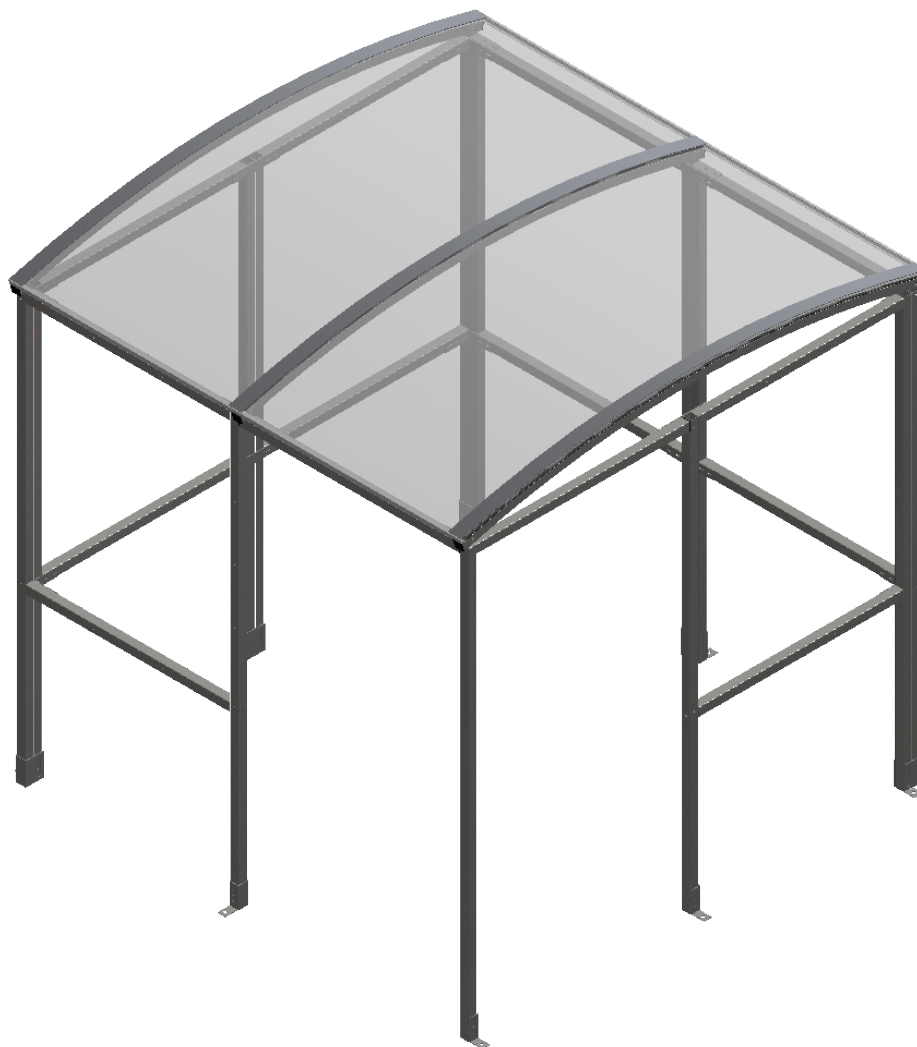


No Butts Bin Co.
Better Ash & Trash Solutions
Est. 1991

Email : Sales@nobutts.com
Web : www.nobutts.com
Tel : 1-888-662-8887

Shelter type: SR1554

SR1554-05-130219-USA

EXPLODED VIEW AND TOOLS

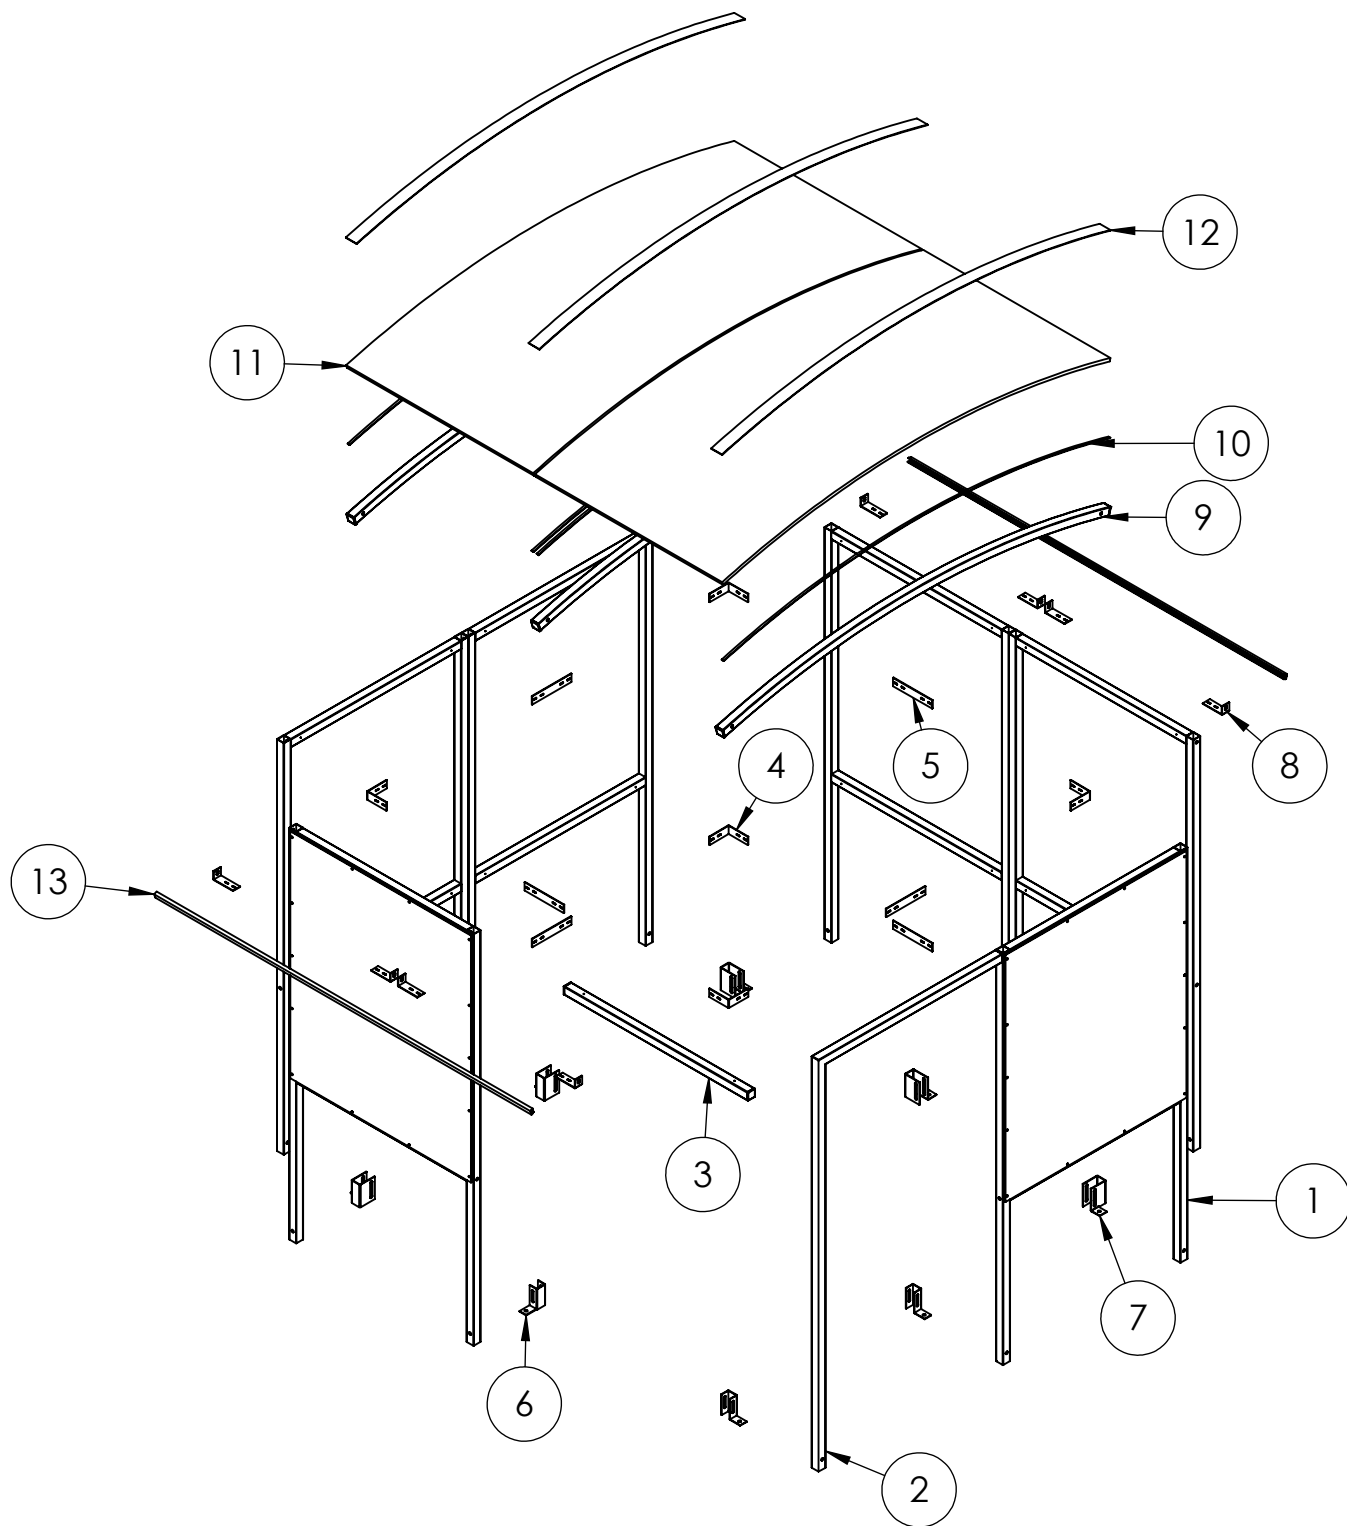

Tools required:



Drill/Screwdriver



Mallet



Hack saw

















Spanner



Torx bit

PARTS LIST

ITEM NO.	PART NO.	DESCRIPTION	DIMENSION (MM)	DIMENSION (INCHES)	IMAGE	QTY.
1	S1	Frame	2000x1035	78.74 x 40.55		6
2	P1	Post	1030x2000	40.55 x 78.74		1
3	ST1	Roof Tie	1025x40x40	40.35 x 1.75 x 1.75		1
4	CB1	Bracket	110x110x40	4.33 x 4.33		7
5	JF1	Bracket	220x40	8.66 x 1.58		6
6	FT1	Foot Bracket	109x100x40	4.29 x 3.93 x 1.57		3
7	FT3	Foot Bracket	109x100x80	4.29 x 3.93 x 3.27		5
8	RB1	Bracket	110x46	4.33 x 1.81		8
9	R2	Rafter	2220x40x40	87.40 x 1.57 x 1.57		3
10	SS	Sealing Strip	Trim to 2180	Trim to 2180		2 ROLLS
11	PCE2	Roof Panel	2220x1050	87.40 x 41.34		2
12	RC2	Roof Strip	1130	87.40		3
13	2MD	Roof Edge Trim	Trim To Fit	Trim To Fit		3
14	EC40	Plastic end Cap	40x40	1.57 x 1.57		18

Fittings	Bolt set M10	Nut	Washer	Black Cap	T25	T38	AB1210
	M10 x 60mm				25 mm Tech screw	38 mm Tech screw	M10/12 x 10mm Concrete Bolt
Pack A	30	30	60	60	72	30	8
Required	14	14	28	28	68	30	8
Image							



Step 1 Assemble **S1** frames to make up the main structure using **CB1** brackets in the corners and **JF1** brackets on straight joints. Then attach **P1** Post using one **JF1** bracket.
Then attach **ST1** Tie bar using a **JF1** bracket and one **CB1** bracket.

NOTE: Insert **EC40** into **ST1** and **P1** before installing.


MEASUREMENTS IN BLUE - MM

MEASUREMENTS IN GREEN - INCHES


IMPORTANT:
Check overall dimensions to ensure correct alignment

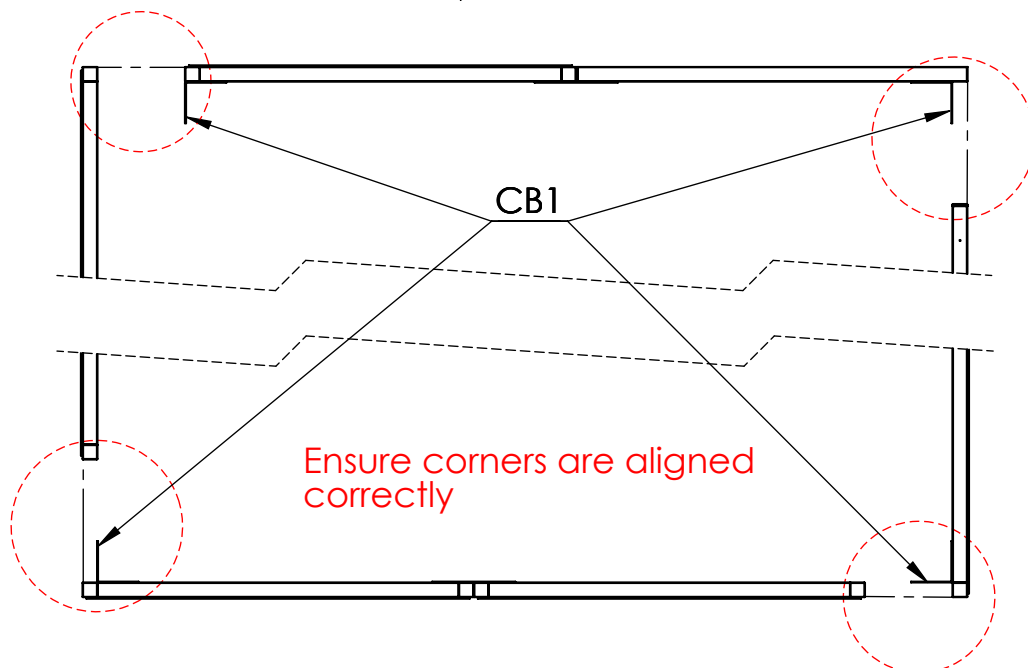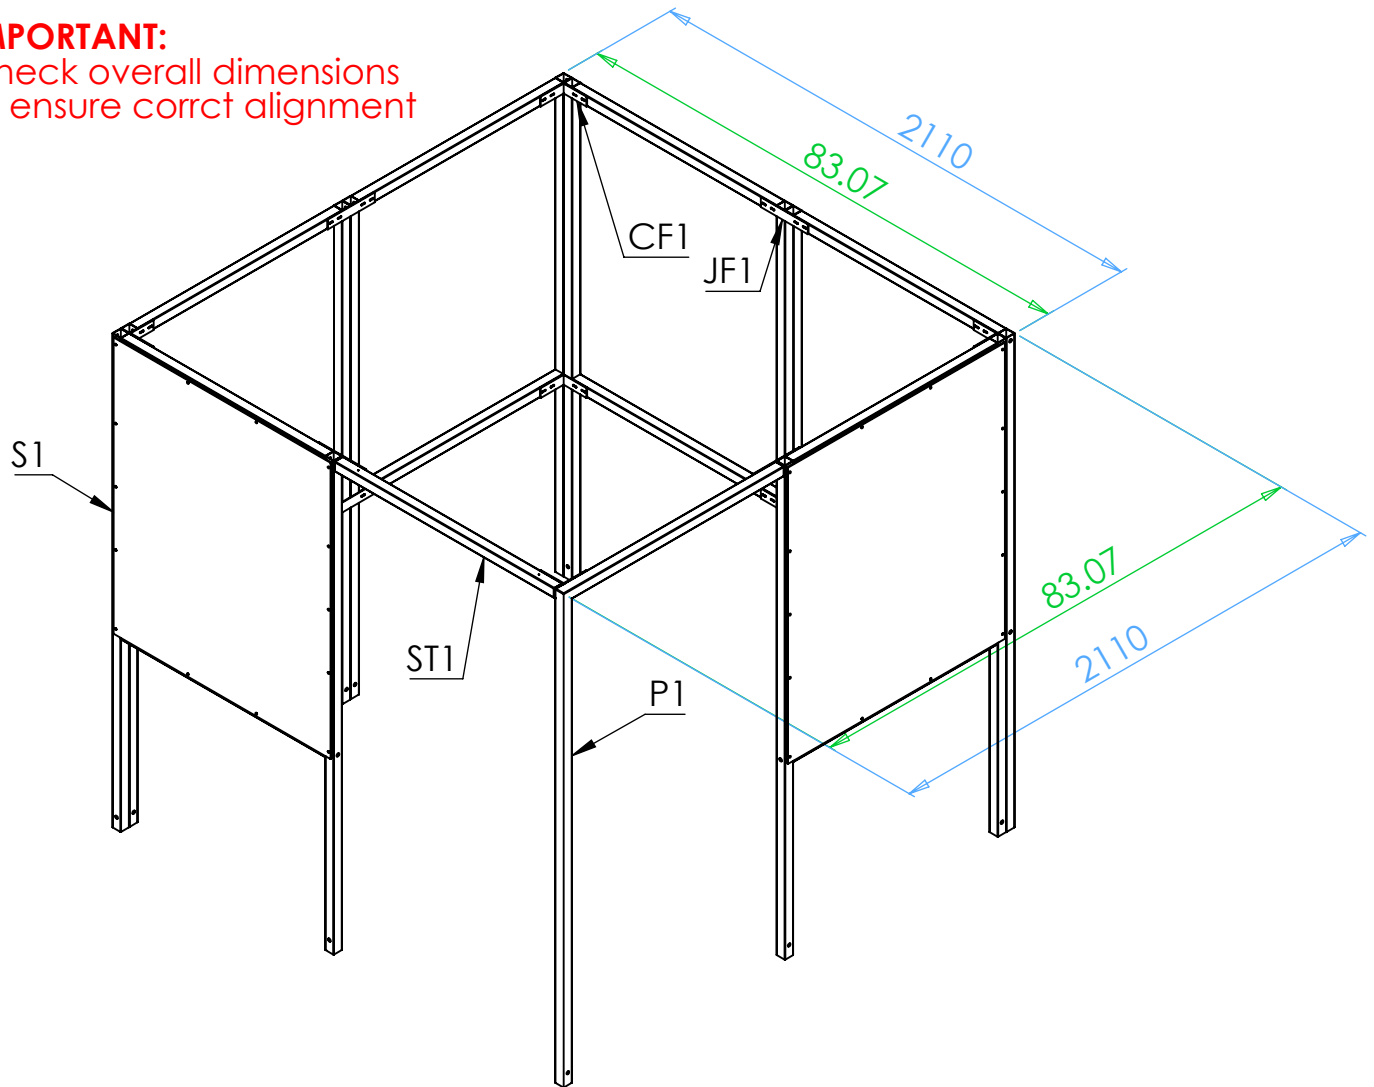

Step 2 Move shelter in to its final position, make sure everything is square and secure to the floor using **FT1** and **FT3** foot brackets. Attach **R2** roof rafters using **RB1** brackets.

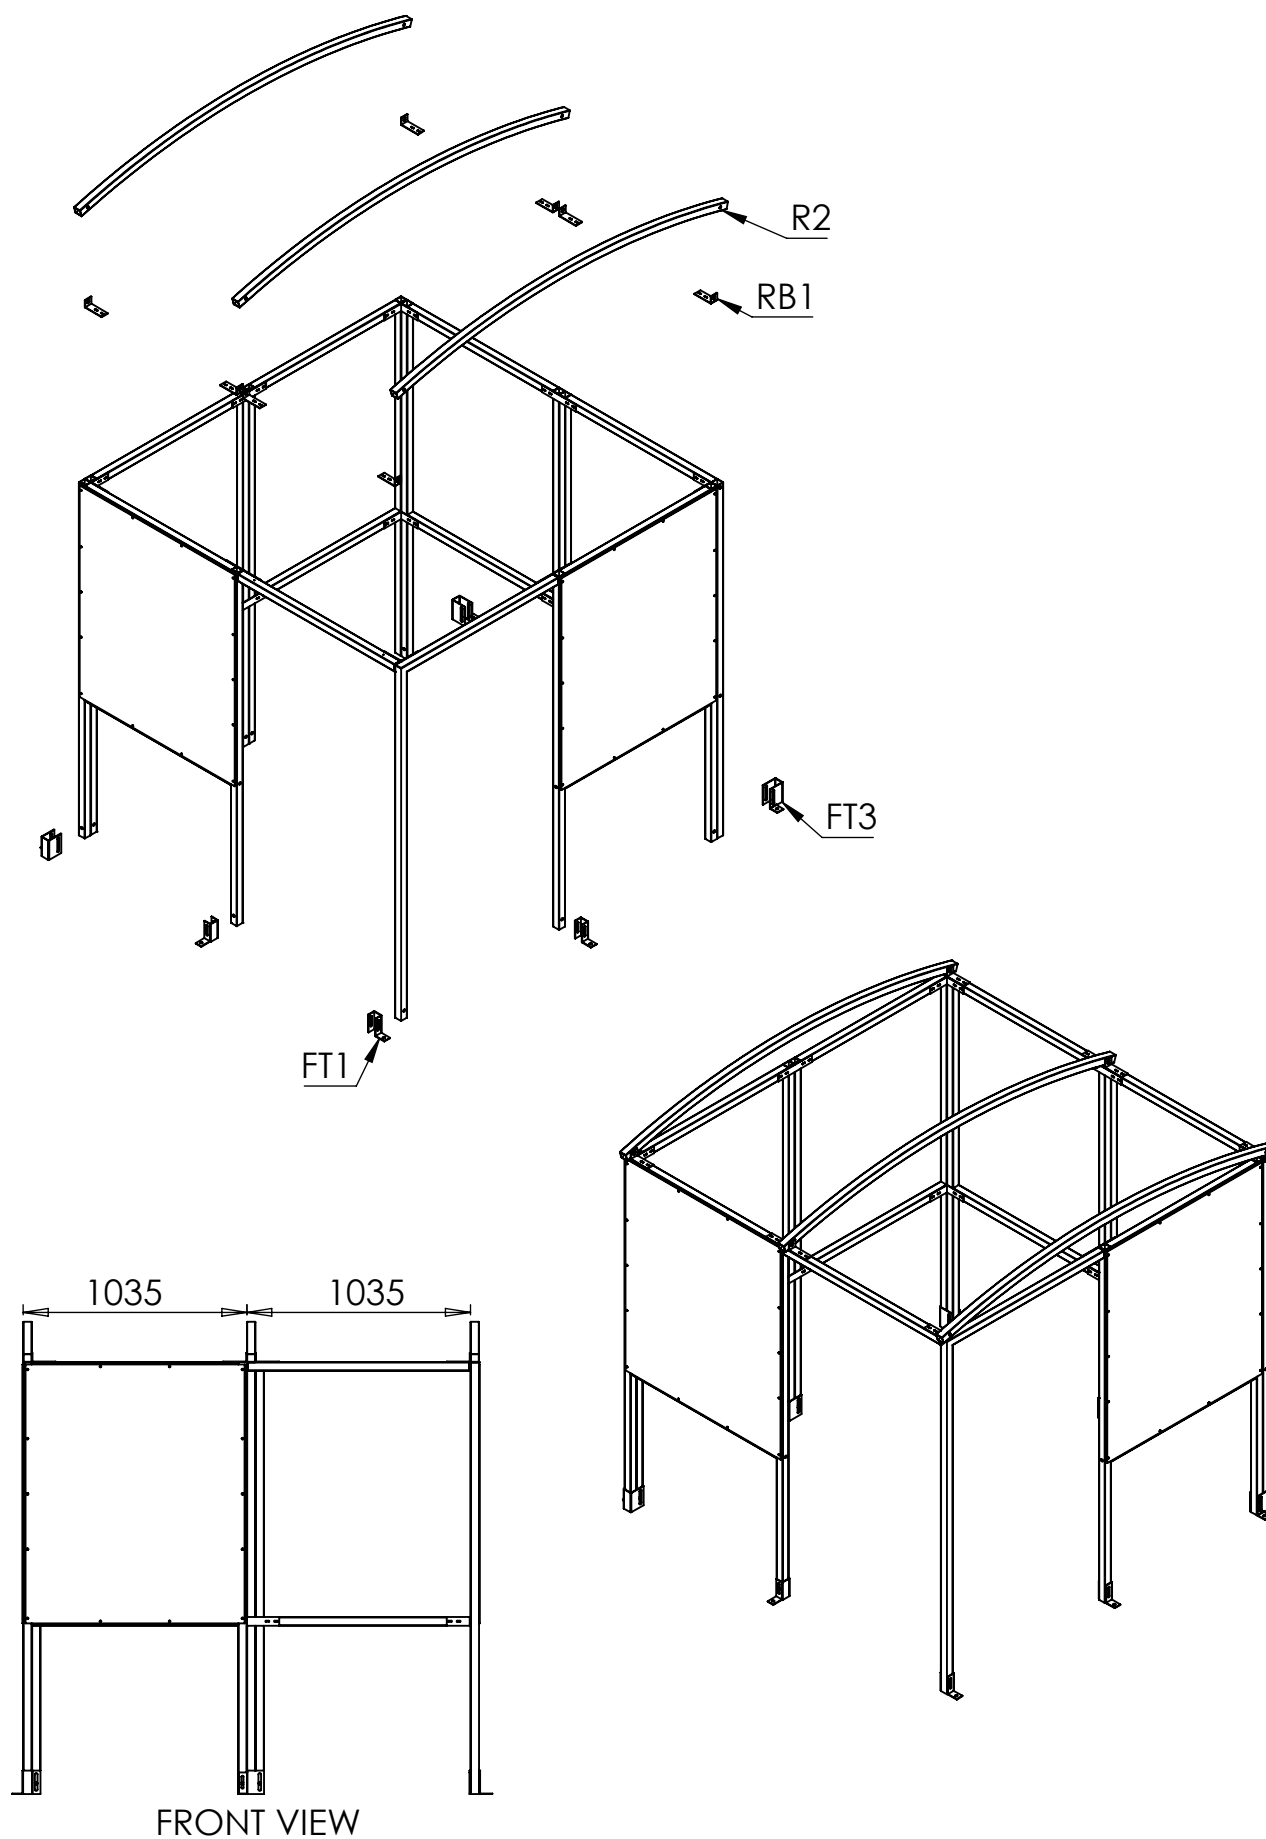


Step 3 Apply **SS** sealing strips to the rafters (two for central rafter) and line up the **PCE2** roof panels to the outside of the shelter, leaving a gap between them.

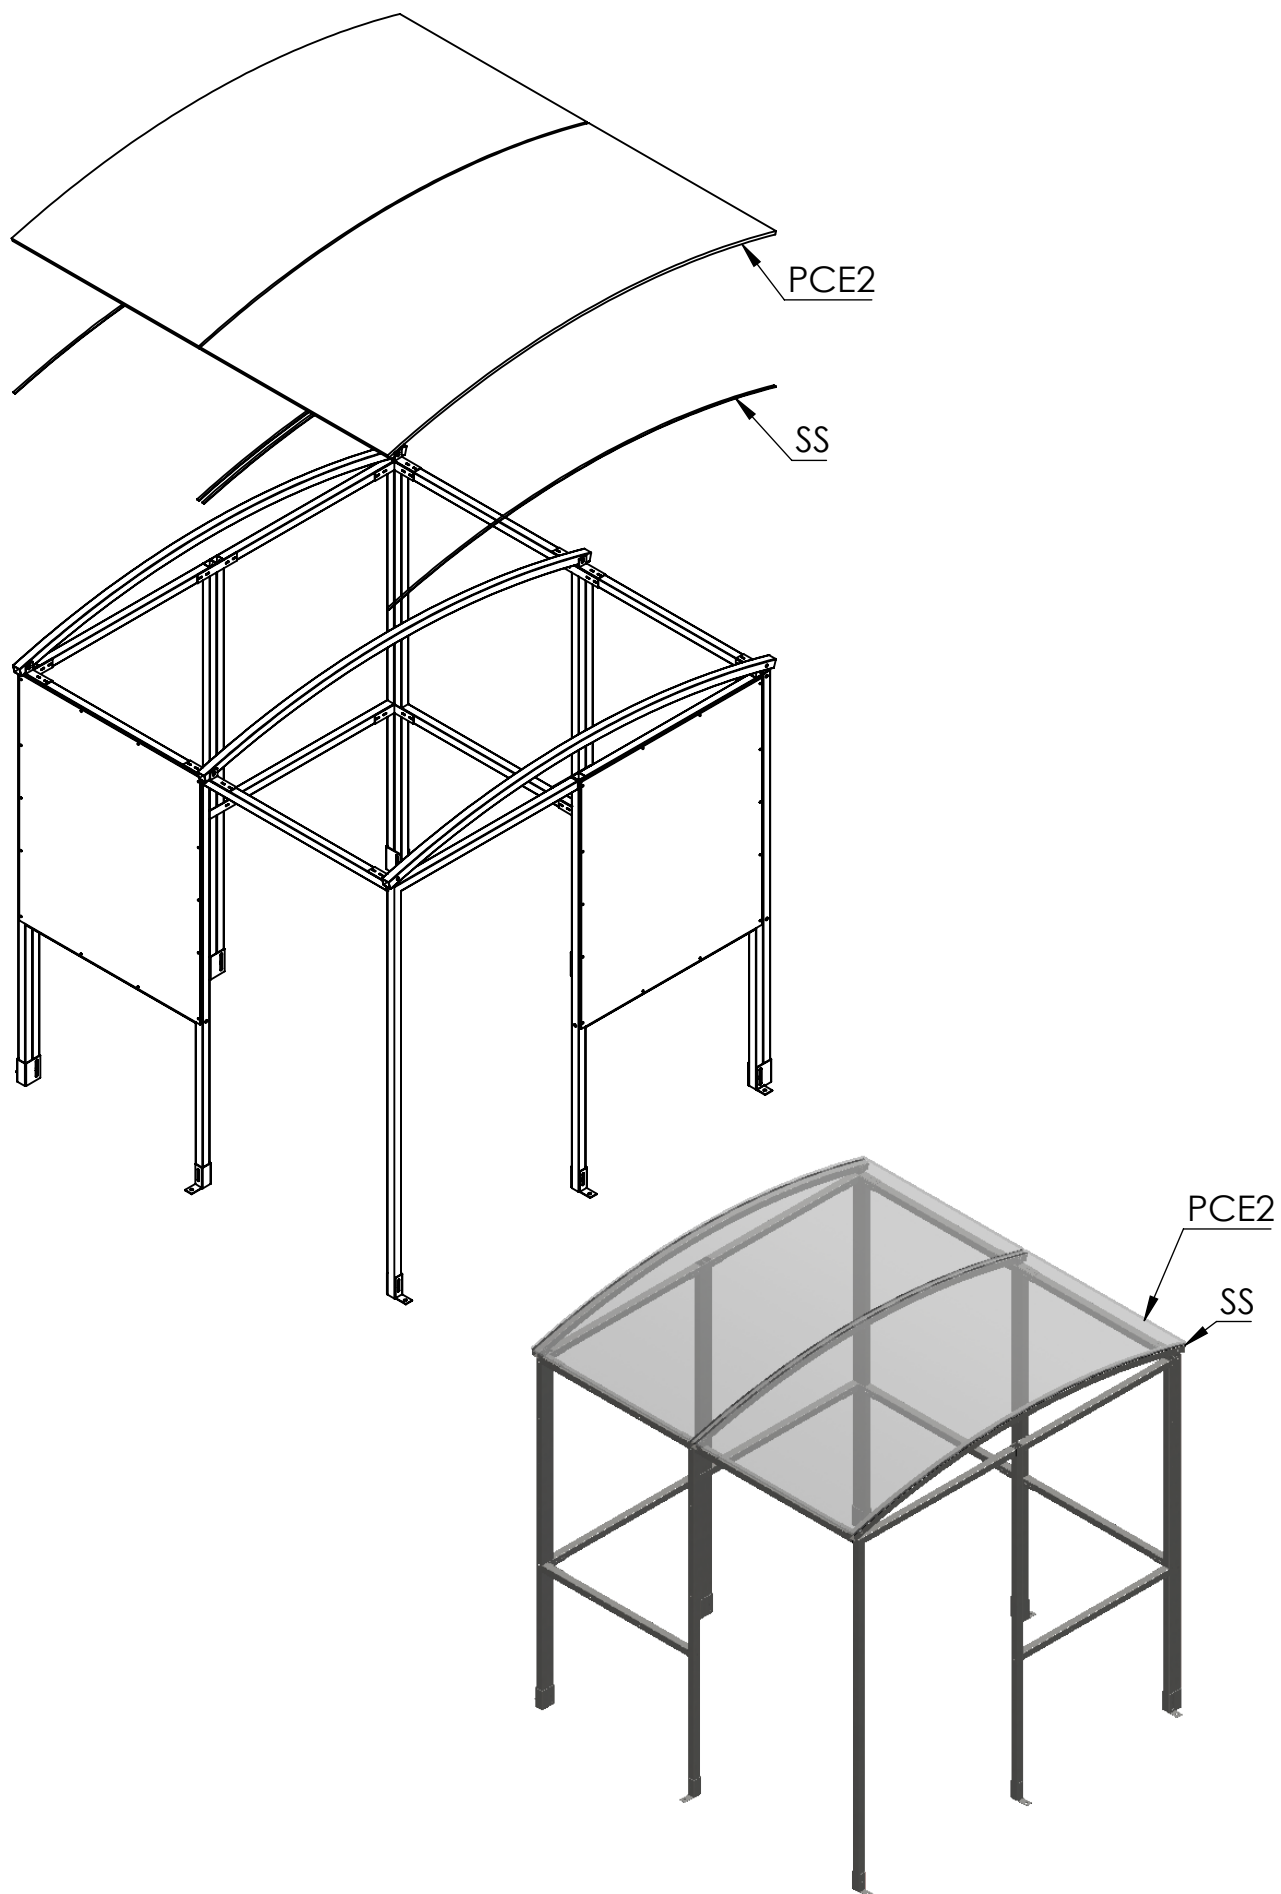

Step 4 Apply **RC2** strips on top of the panels and use **38mm Tech screws** to secure them in place, drilling through the panels and into the rafters. Then clip on the **2MD** edge trim to the edges of the roof panels, tapping it on with a mallet. Then fit the Black plastic caps on exposed nuts and bolts. Fit the square plastic end caps (**EC40**) to any open ends of box sections.


GENERAL NOTE:
THE 38mm TECH SCREWS
ARE FOR FIXING ROOF STRIPS
(RC) ONLY

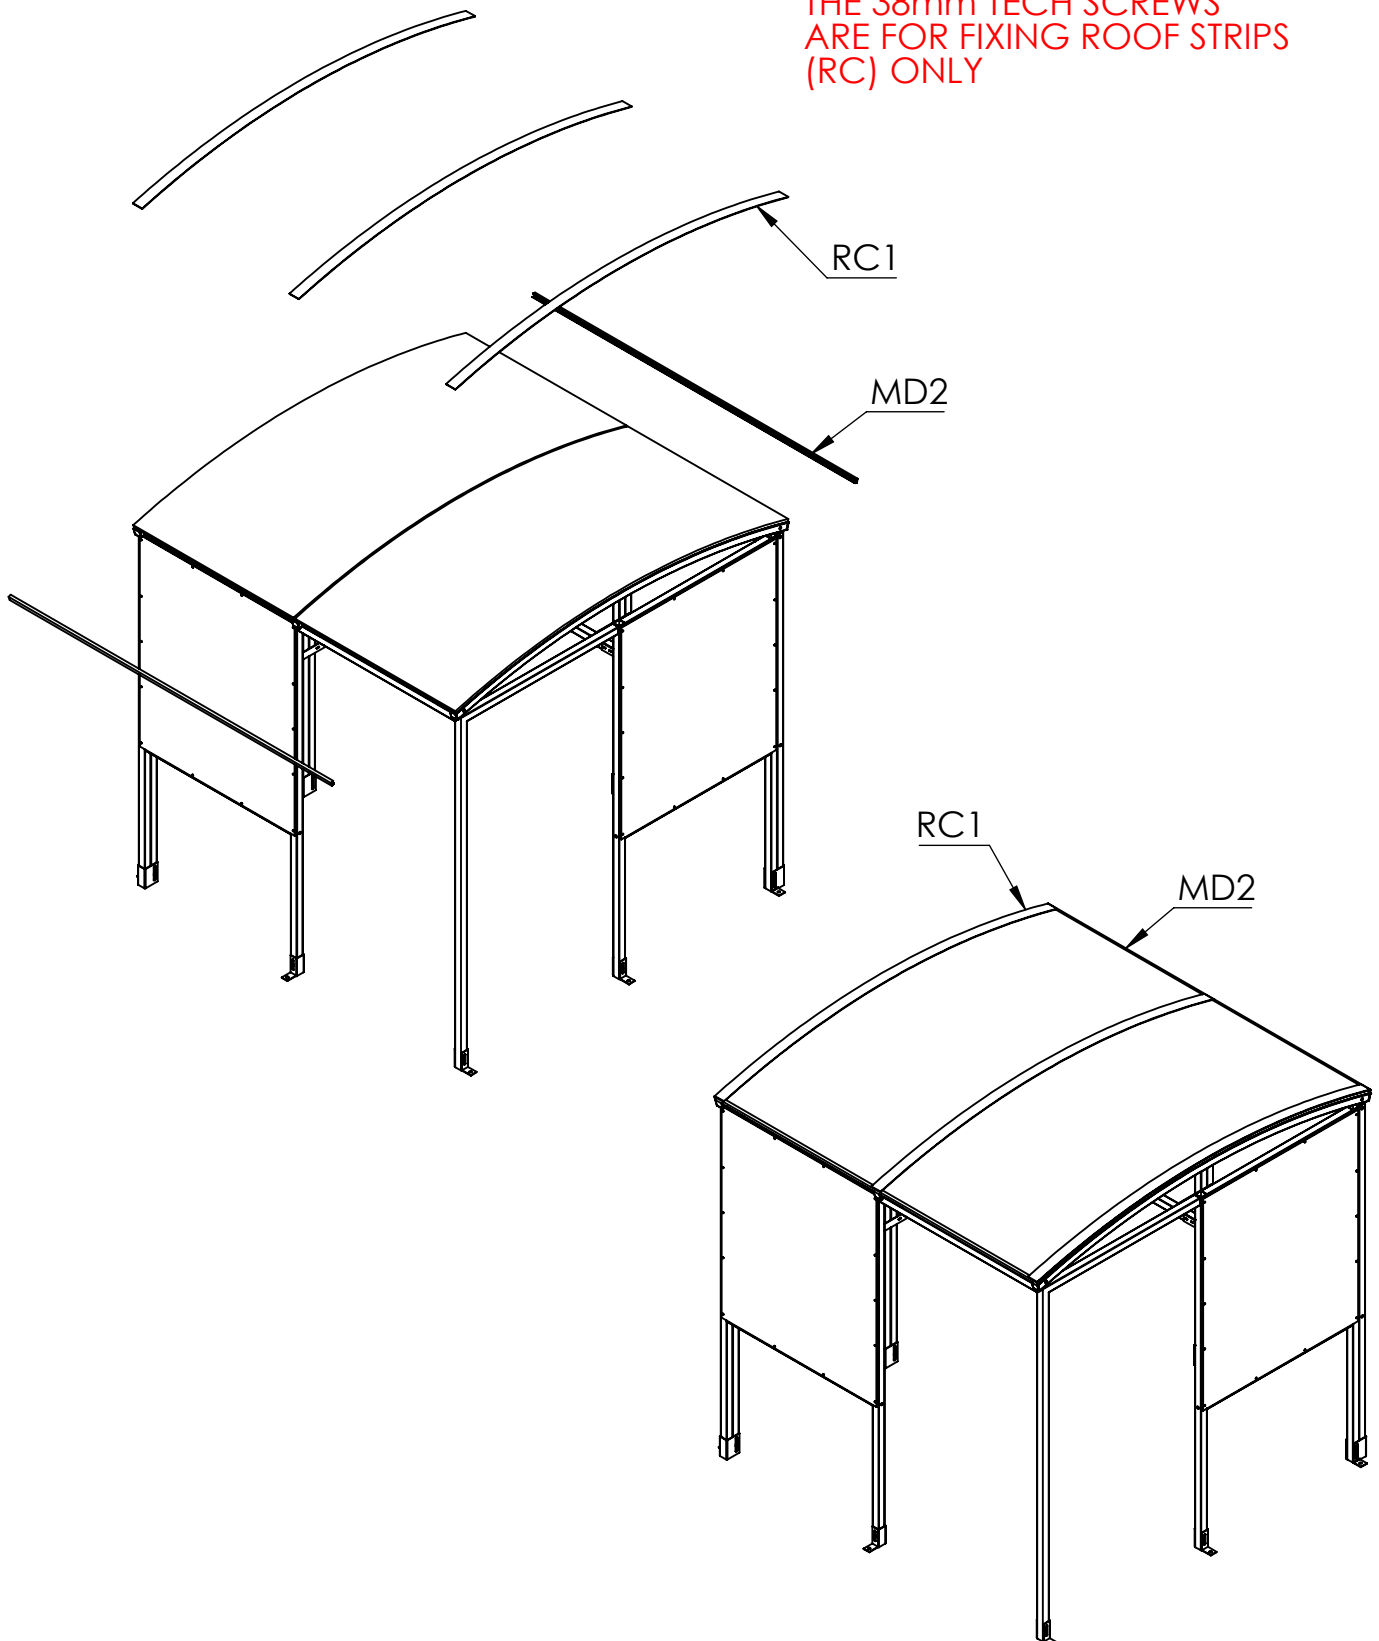

Ground anchor positions and overall size

Suggested concrete base size: 200mm/7.87in oversized on all four sides

Scale 1:15

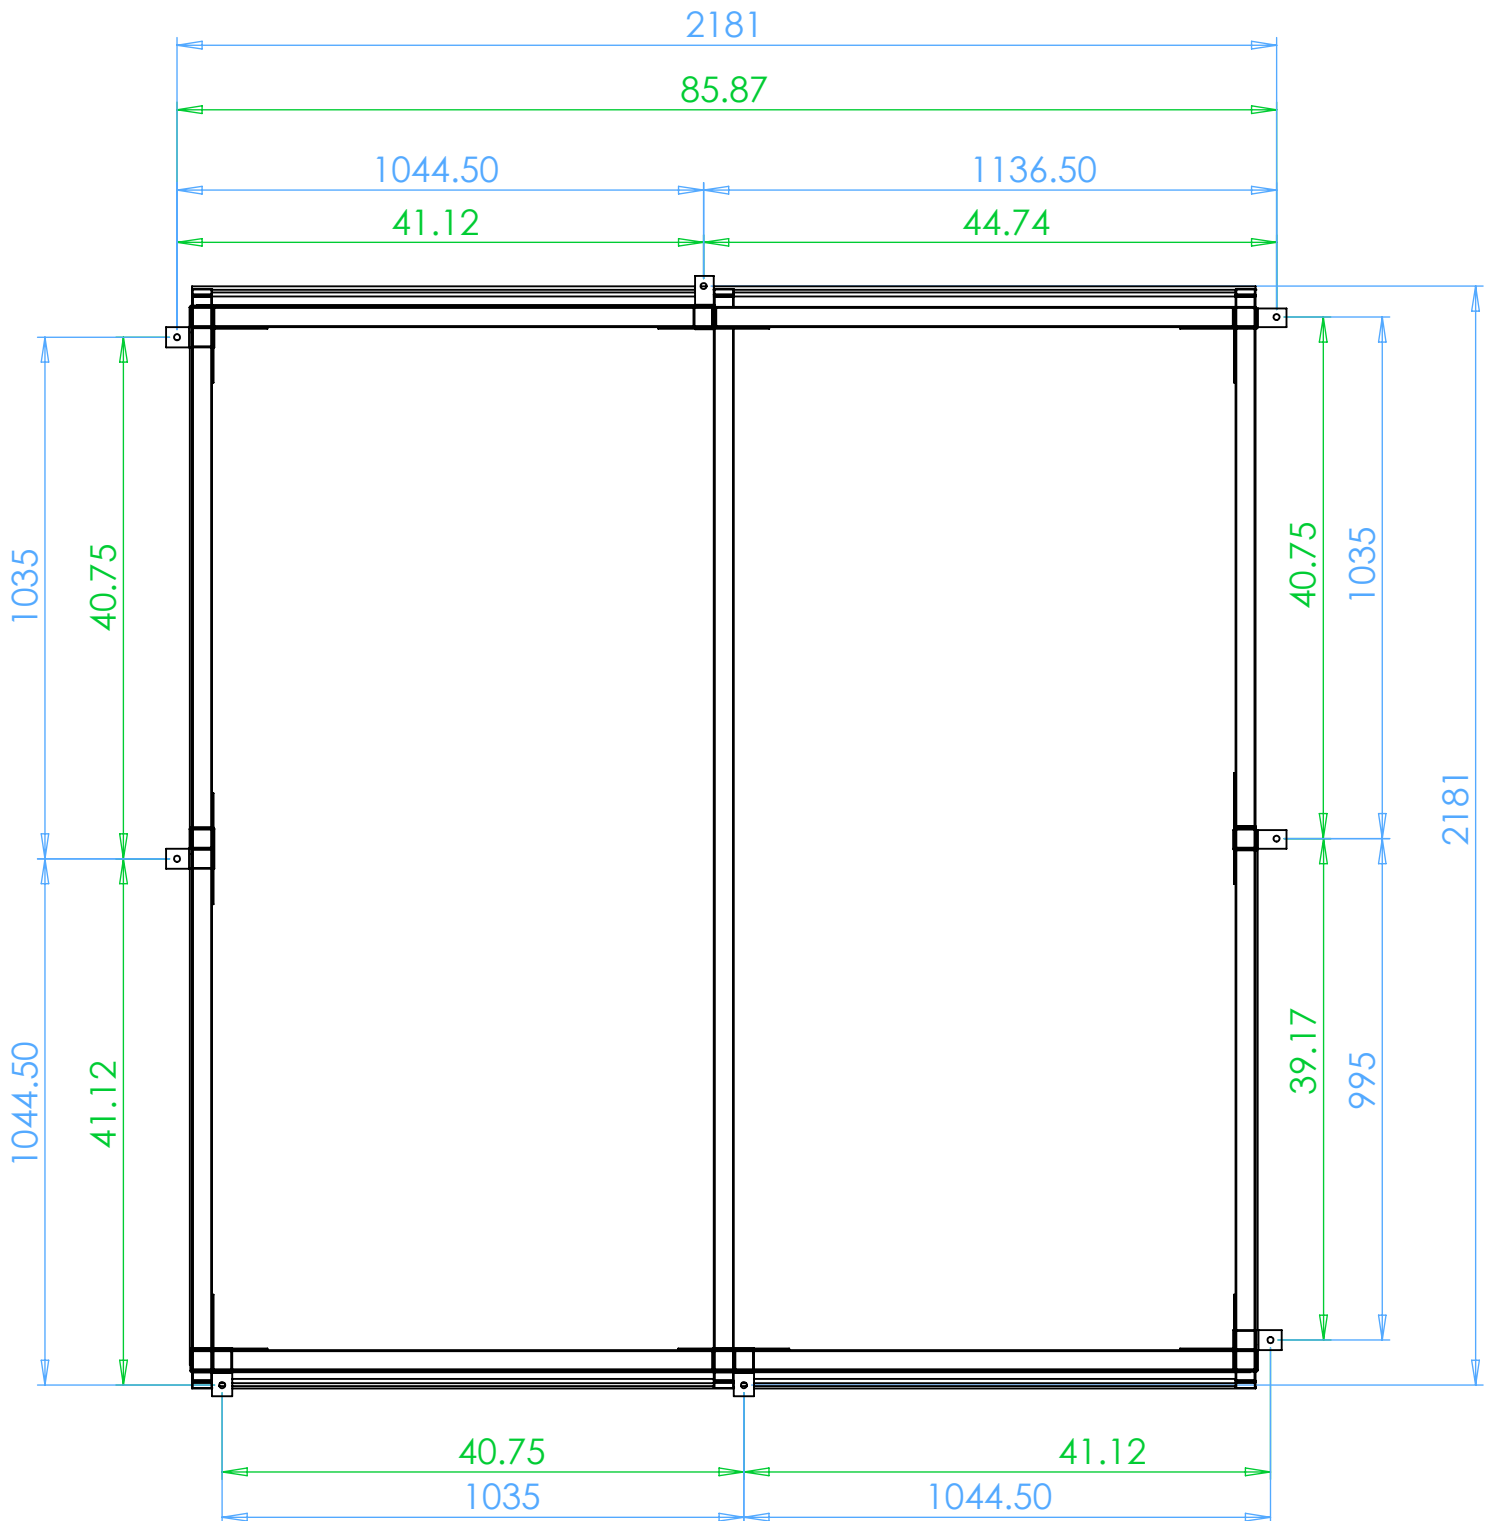

NOTES:

NOTES:

NOTES:

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@nobutts.com

Web : www.nobutts.com

Tel : 1-888-662-8887

No Butts Bin Company, Inc. 16 Birch Lane, Madison, CT 06443

All Parts and Fixings checked by:	
Print Name:	Signature: