


Assembly Instructions

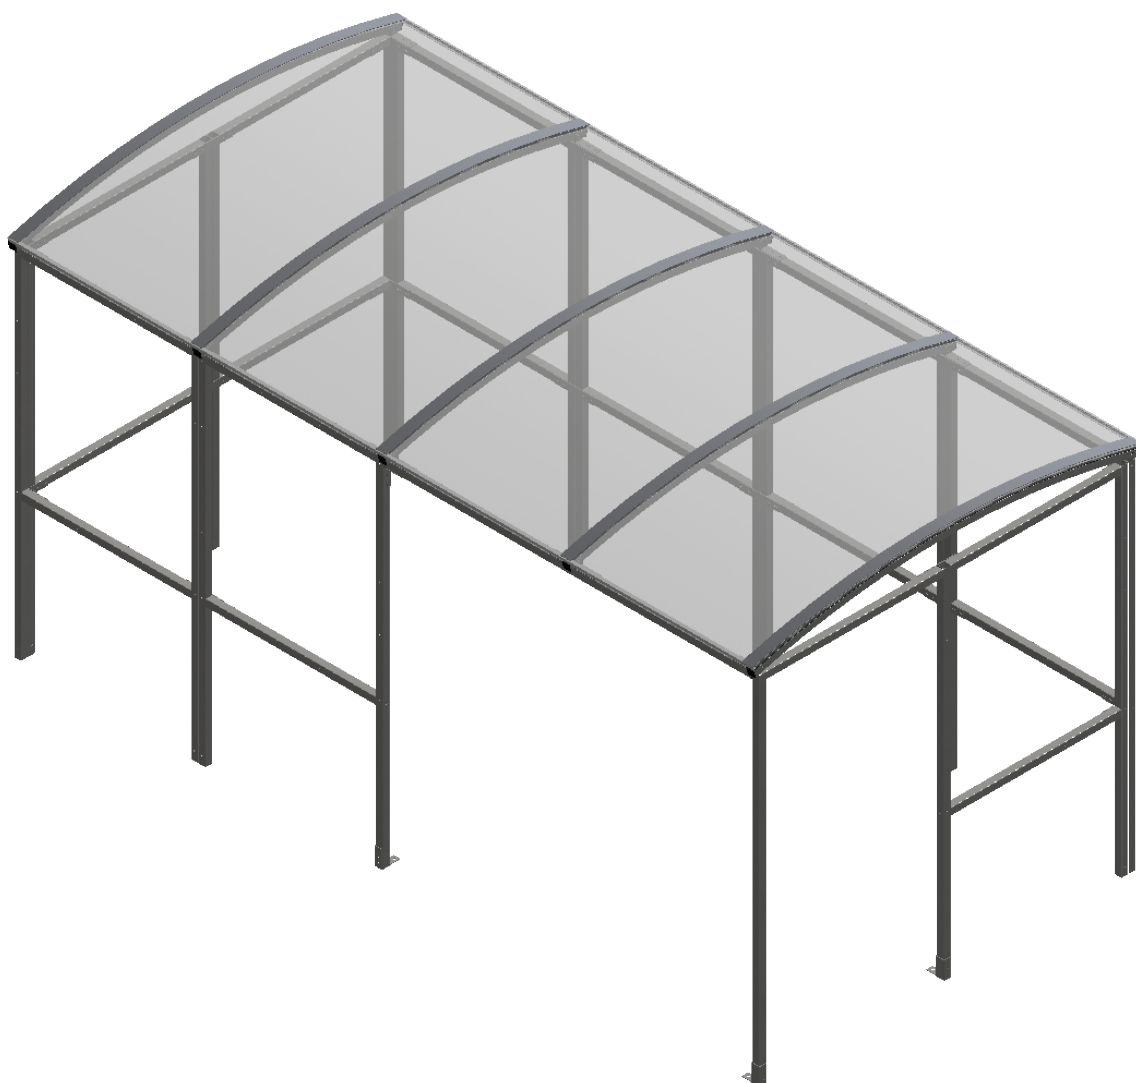


No Butts Bin Co.
Better Ash & Trash Solutions
Est. 1991

Email : Sales@nobutts.com
Web : www.nobutts.com
Tel : 1-888-662-8887






Shelter type: SR1556

SR1556-02-100119-USA


EXPLODED VIEW

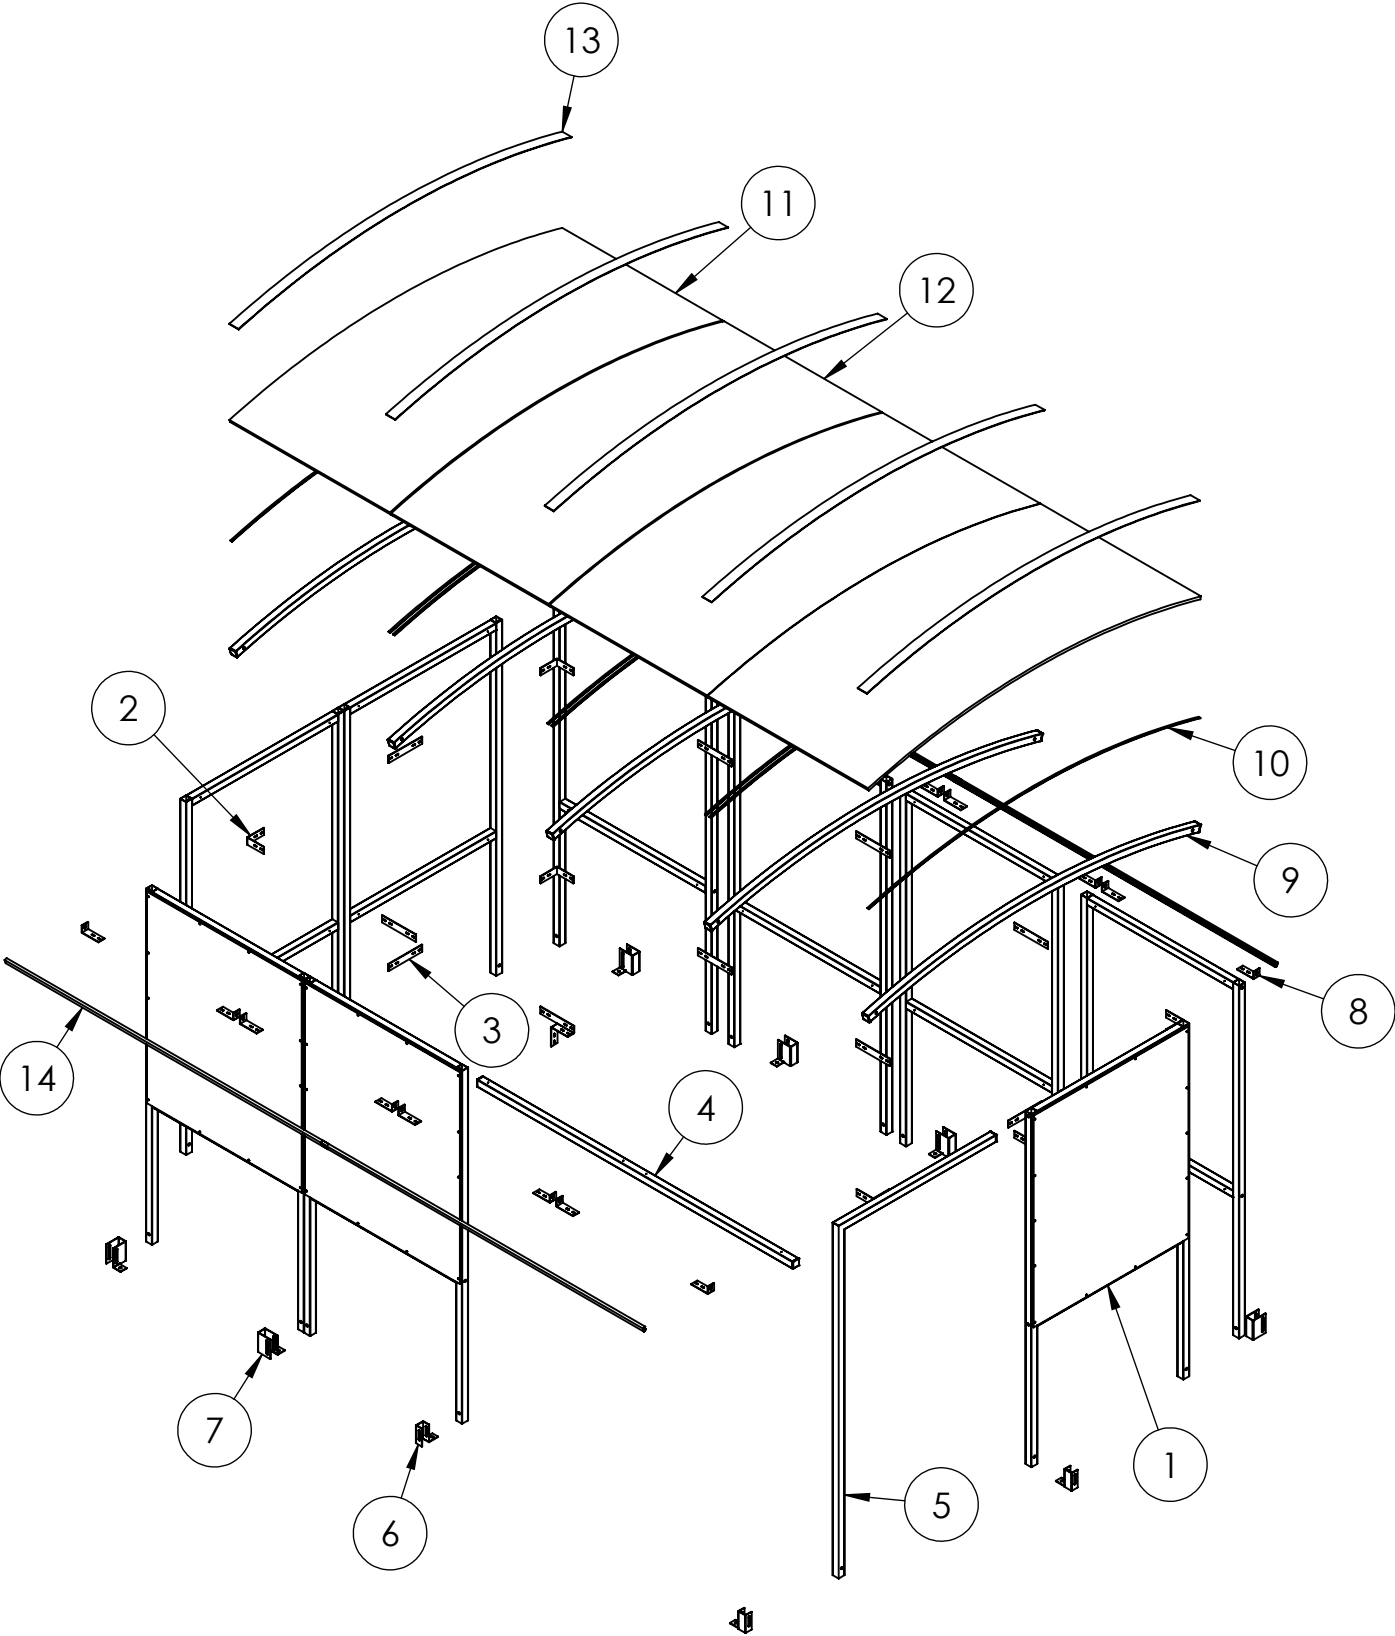

PARTS LIST

ITEM NO.	PART NO.	DESCRIPTION	DIMENSION (MM)	DIMENSION (INCHES)	IMAGE	QTY.
1	S1	Frame	2000 x 1035	78.74 x 40.55		9
2	CB1	Bracket	110 x 110	4.33 x 4.33		8
3	JF1	Bracket	220 x 40	8.66 x 1.58		12
4	ST3	Roof Tie	2060 x 40 x 40	81.10 x 1.57 x 1.57		1
5	P1	Post	2000 x 1030	78.74 x 40.55		1
6	FT1	Foot Bracket	109 x 110 x 40	4.29 x 3.93 x 1.57		3
7	FT3	Foot Bracket	109 x 100 x 80	4.29 x 3.93 x 3.27		8
8	RB1	Bracket	110 x 46	4.33 x 1.81		16
9	R2	Rafter	2200 x 40 x 40	87.40 x 1.57 x 1.57		5
10	SS	Sealing Strip	Trim To 2195	Trim To 86.61		4 ROLLS
11	PCE2	Roof Panel	2200 x 1050	87.40 x 41.34		2
12	PCC2	Roof Panel	2200 x 1030	87.40 x 40.55		2
13	RC2	Roof Strip	2200	87.40		5
14	2MD	Roof Edge Trim	Trim To Fit	Trim To Fit		5
15	EC40	Plastic End Cap	40 x 40	1.57 x 1.57		24

Fittings/Tools

	Bolt set M10	Nut	Washer	Black Cap	T25	T38	AB1210
	M10 x 60 mm				25 mm Tech screw	38 mm Tech screw	M10/12 x 100mm Concrete Bolt
Pack A+B	40	40	80	80	136	66	13
Required	21	21	42	42	112	50	11
Spare	19	19	38	38	24	16	2
Image							

Tools required:



Drill/Screwdriver



Mallet



Hack saw





Spanner






Torx bit

Step 1 Assemble **S1** frames to make up the main structure using **CB1** brackets for the corners and **JF1** brackets for the straight joints.

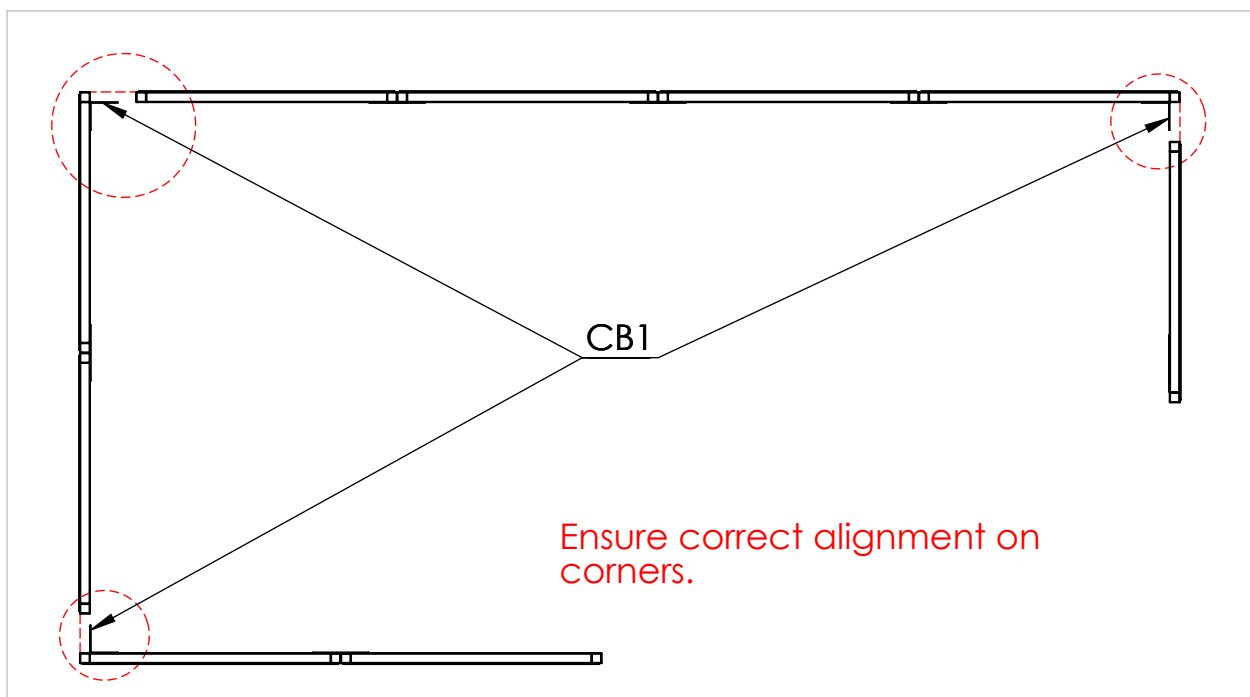
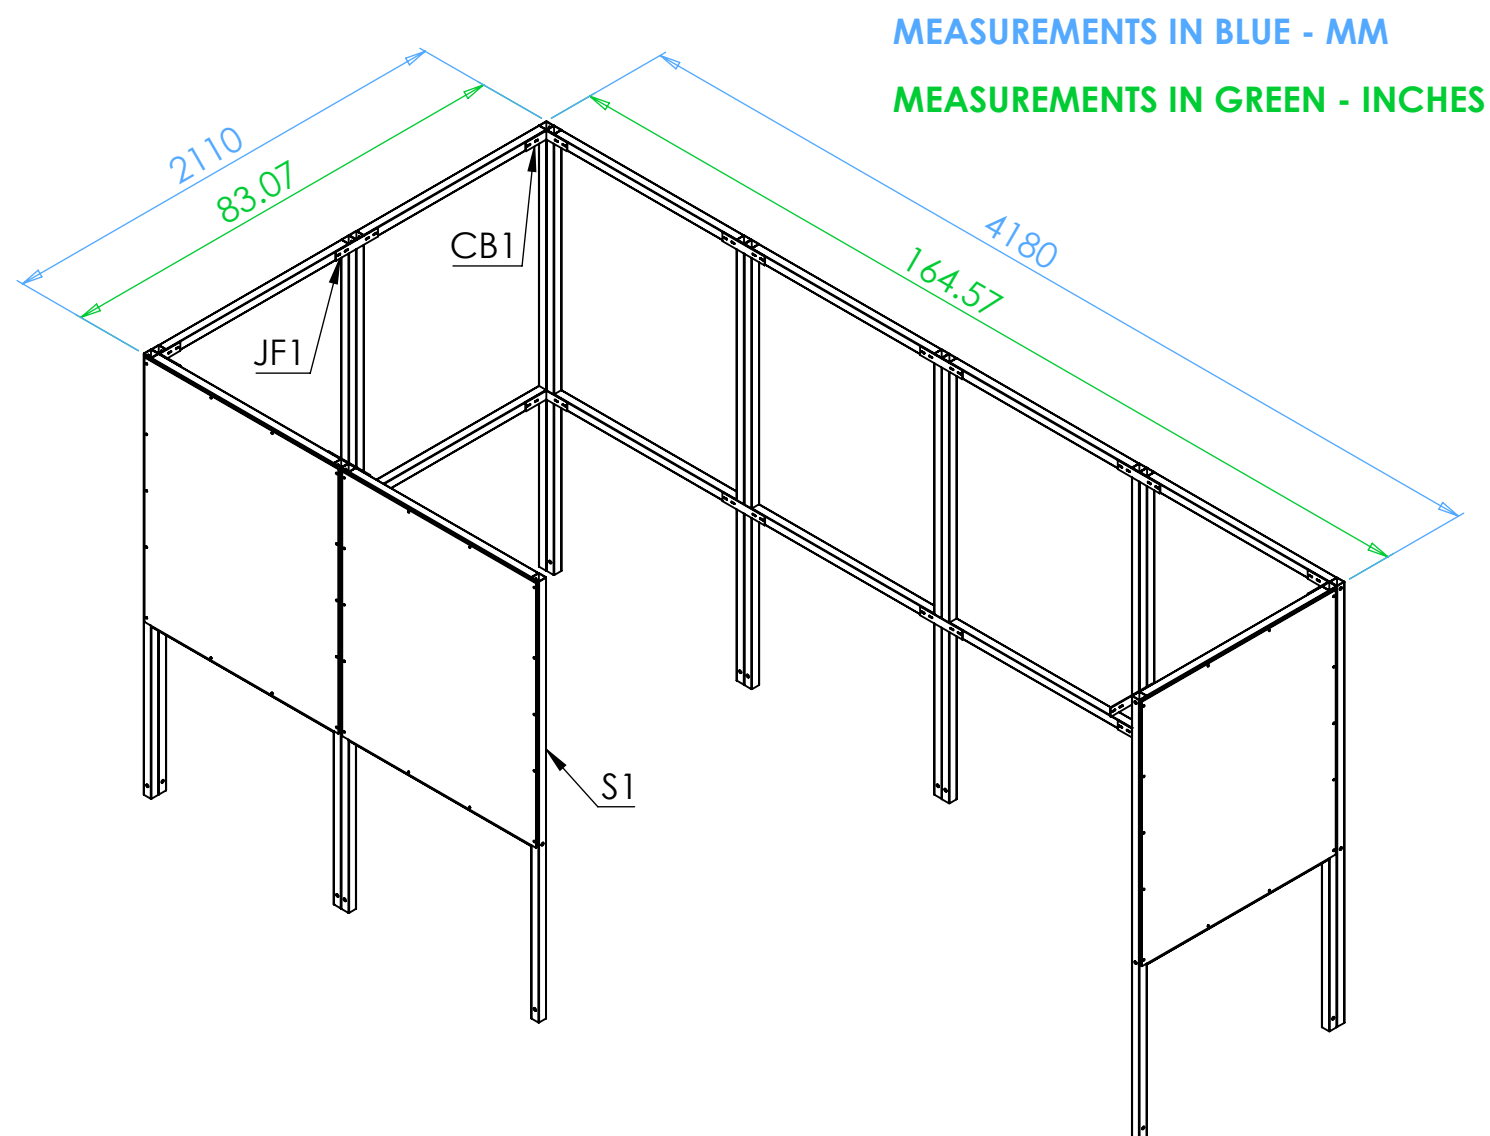


Step 2 Attach **P1** post using one **JF1** bracket, then attach **ST3** tie bar using another **JF1** bracket and two **CB1** brackets. Move the shelter to its final position, make sure the structure is square and attach the **FT1** and **FT3** foot brackets to secure the shelter to the ground.

NOTE: Insert **EC40** into **ST3** and **P1** before installing.

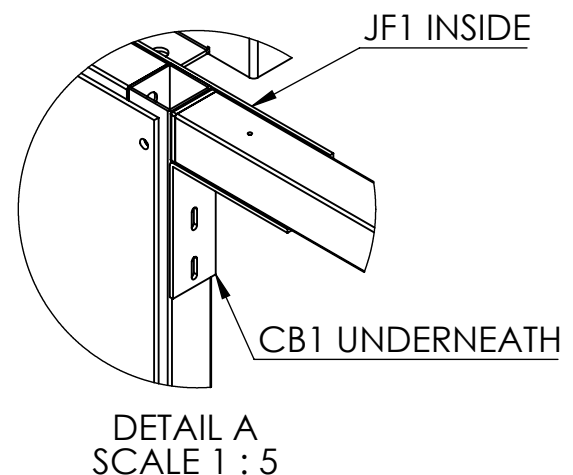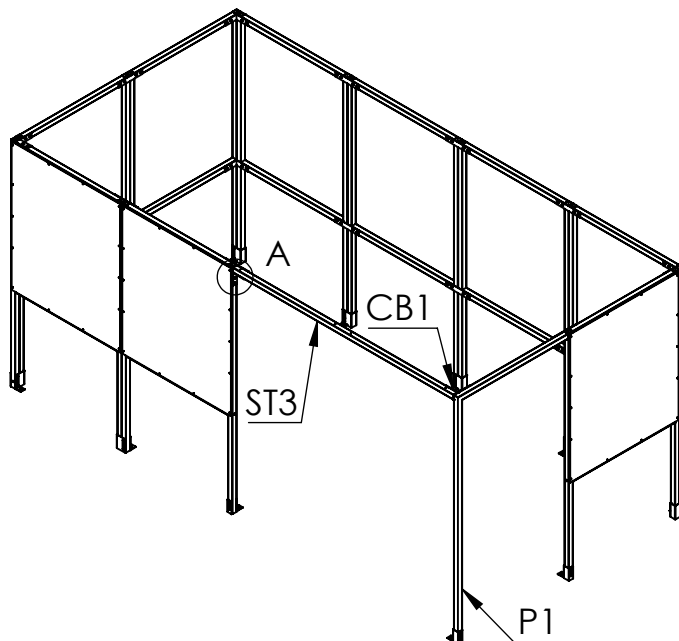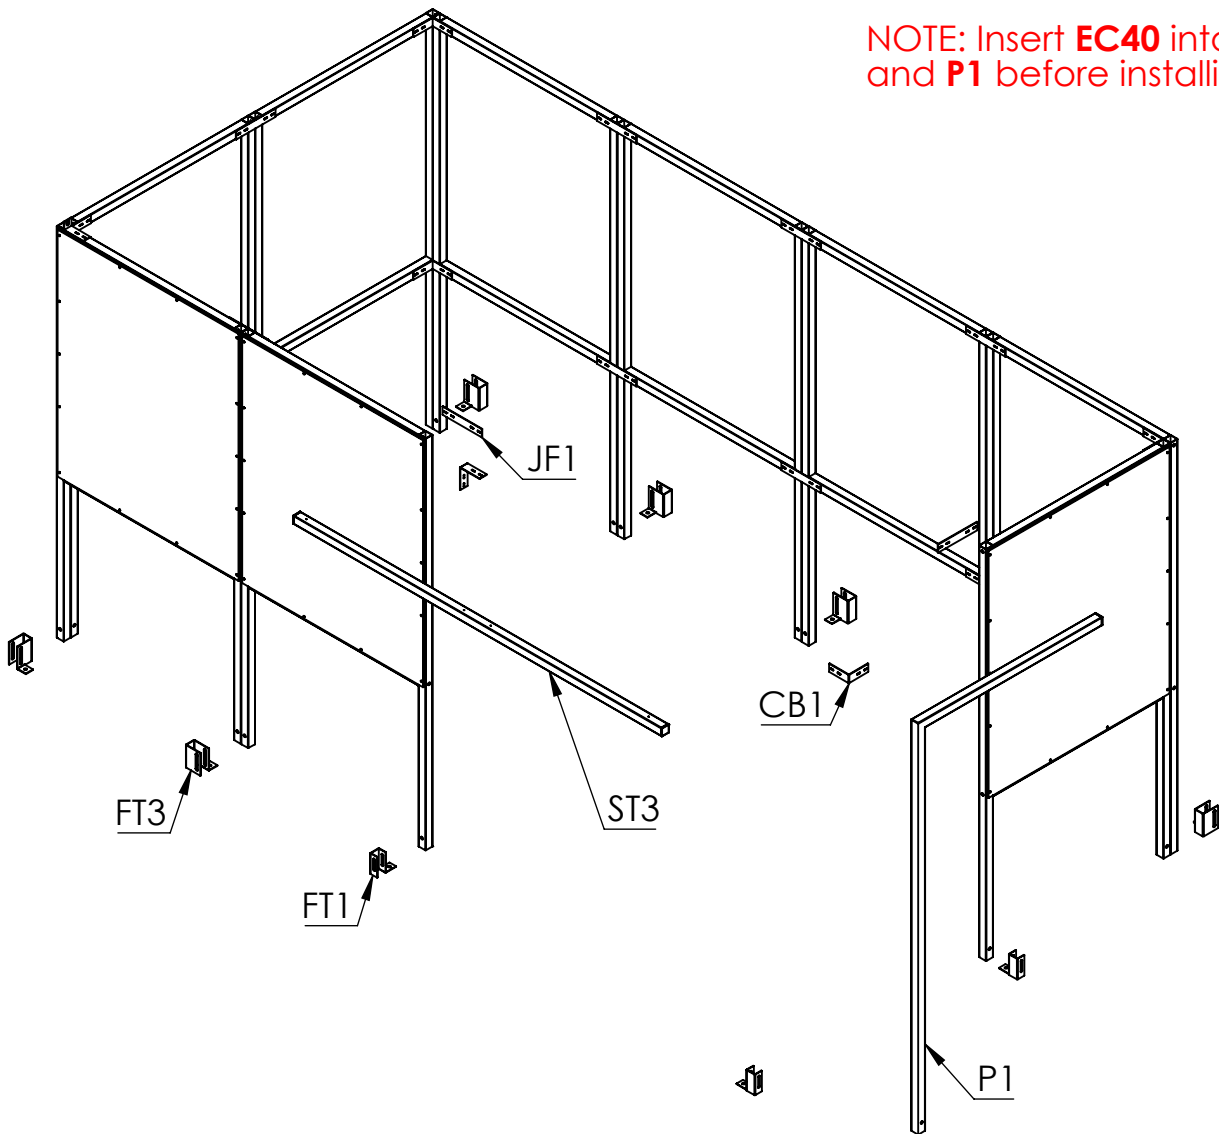


Step 3 Use **RB1** brackets to secure the **R2** roof rafters.

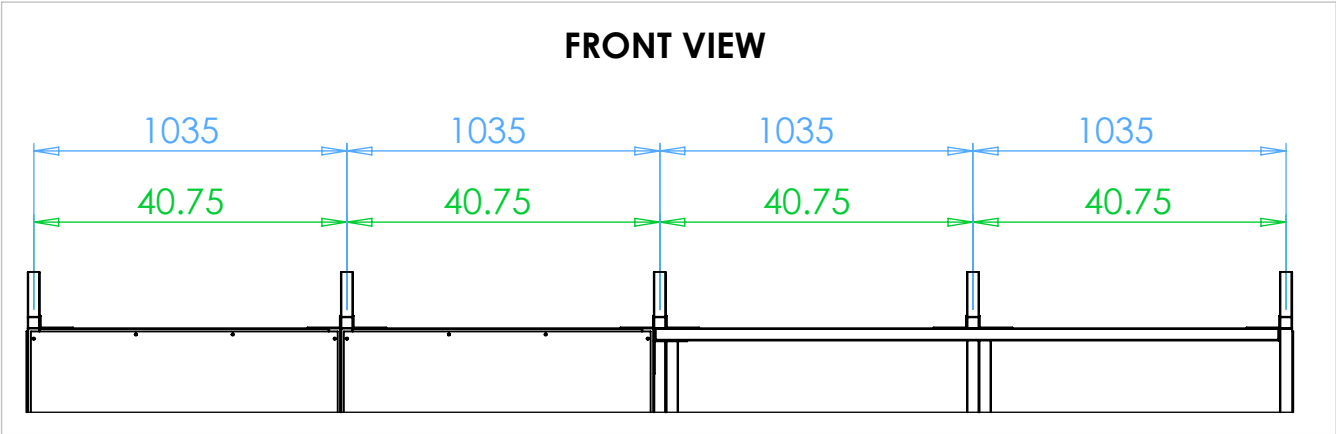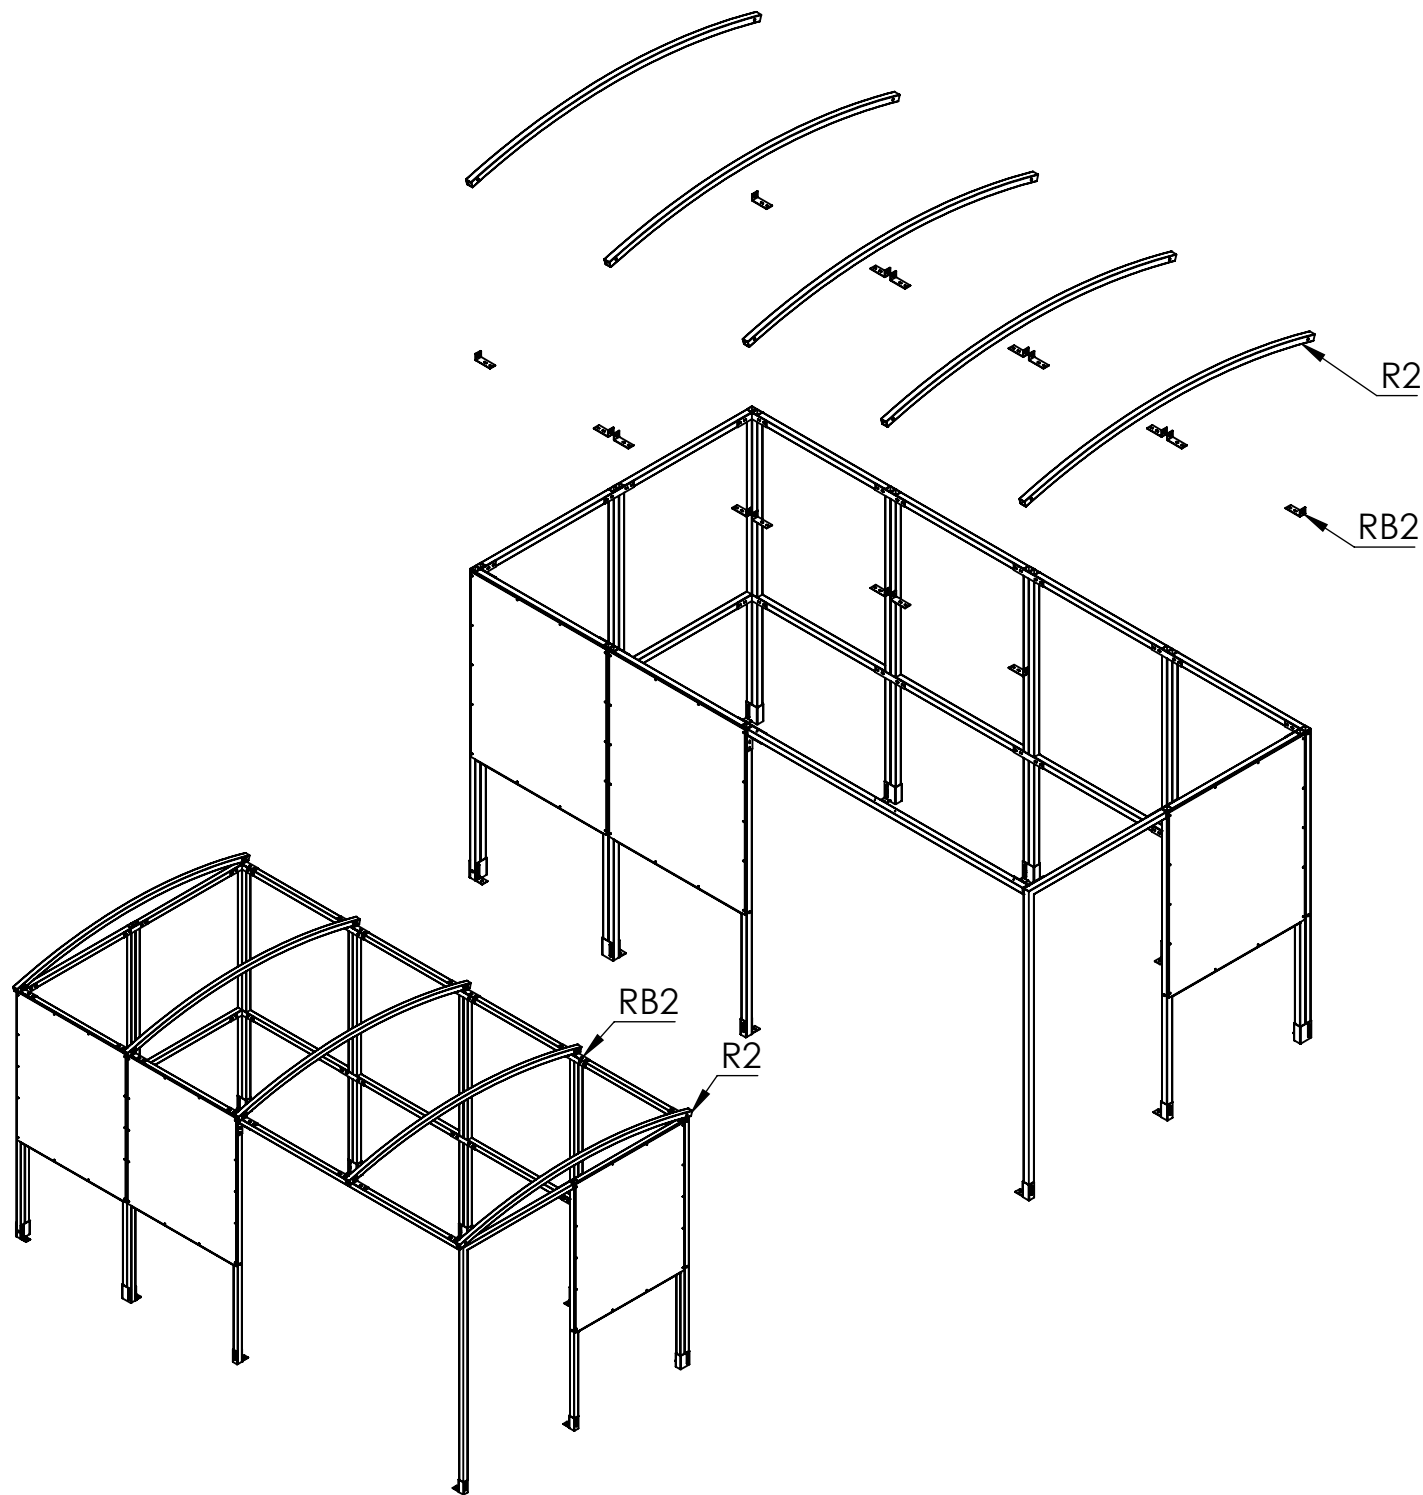


Step 4 Apply sealing strips (**SS**) to the top of the rafters. Align **PCE2** roof panels with the outer rafters then space out the **PCC2** panels evenly. Apply more **SS** strips to the top of the roof panels, directly above first strips. Cover the two edges along the outer rafters and gaps with **RC2** strips before screwing them into place using the **38mm TEC screws**.

GENERAL NOTE:
THE 38mm TECH SCREWS ARE
FOR FIXING ROOF STRIPS
(RC) ONLY

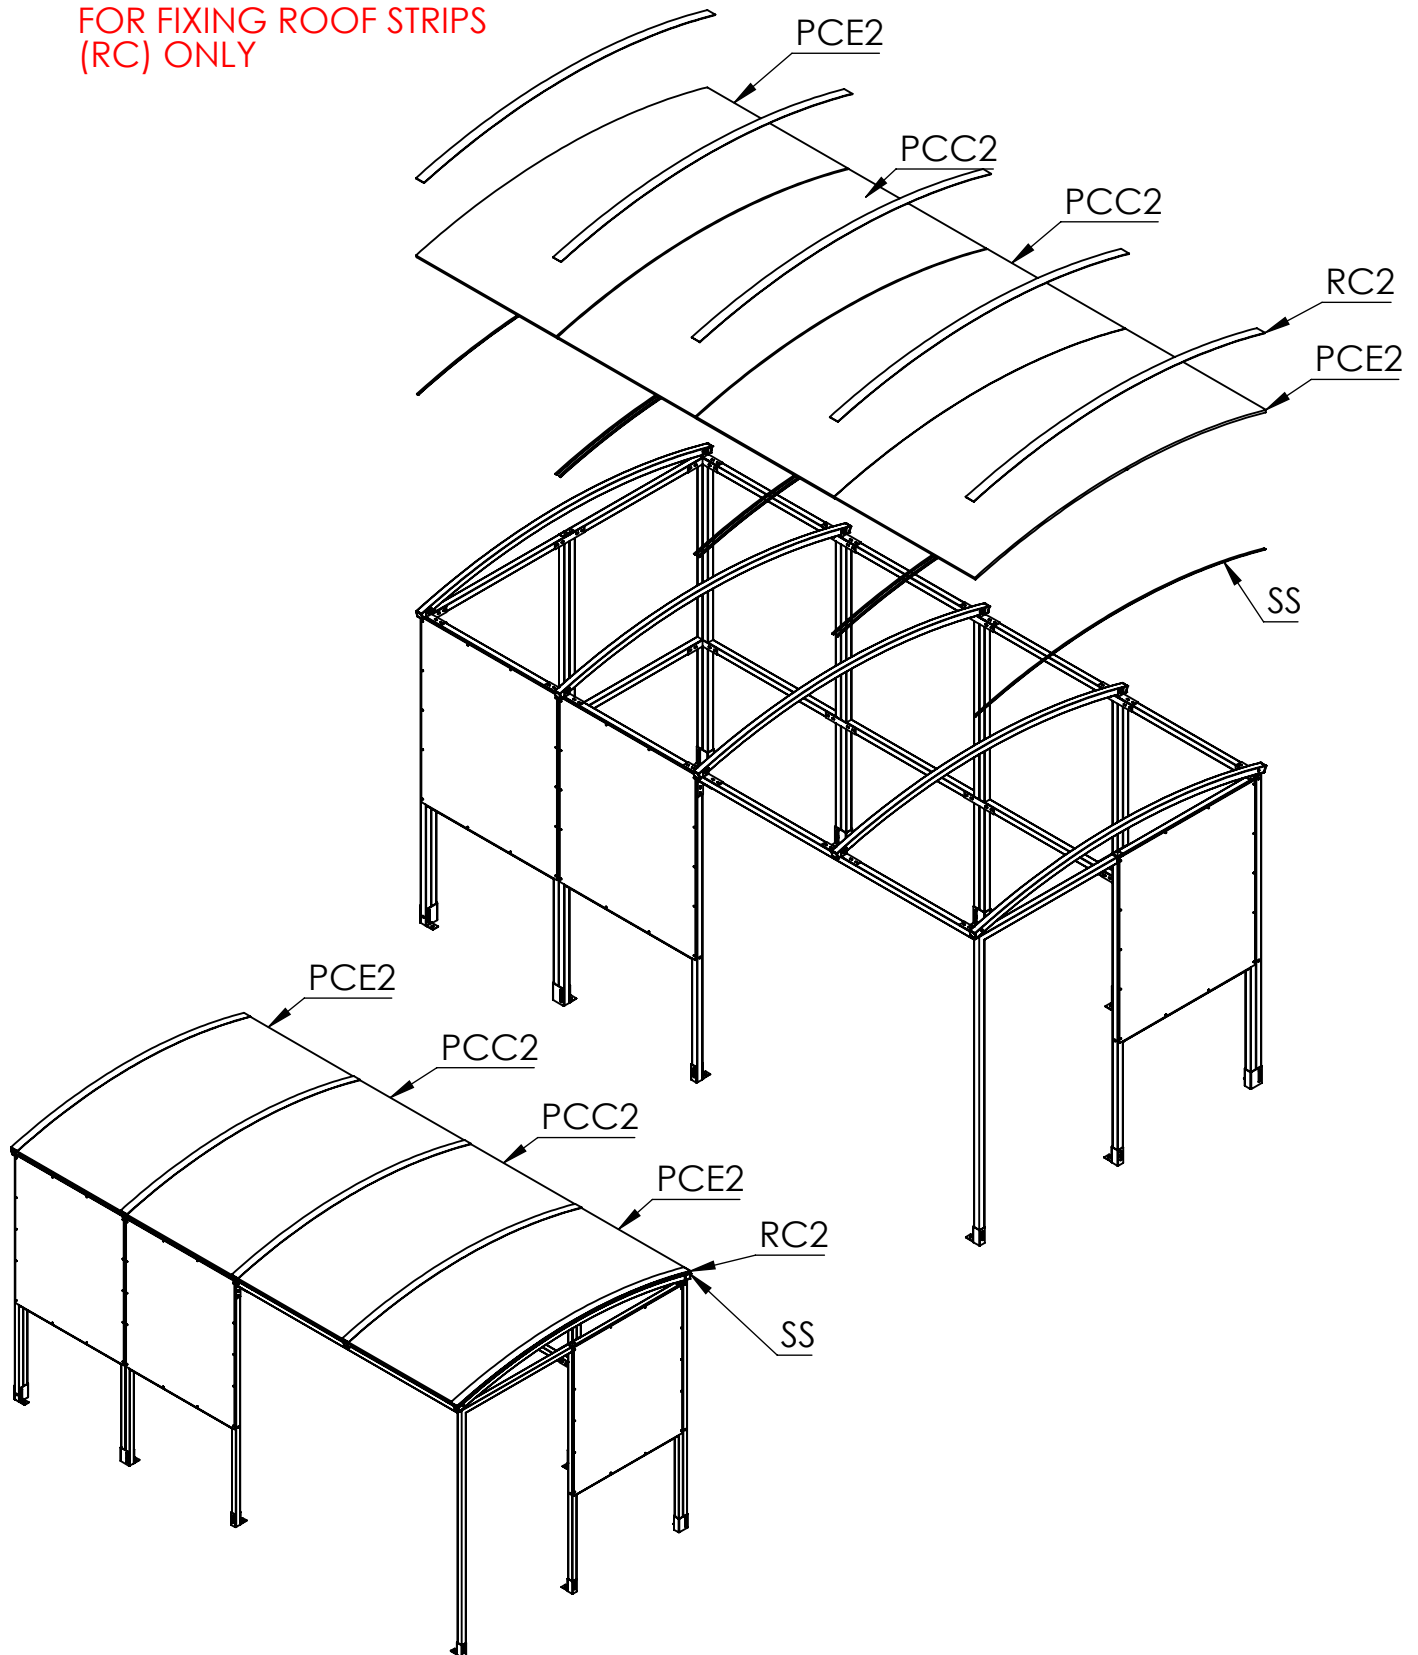


Step 5 Clip on the **2MD** end caps. Then fit the Black plastic caps on exposed nuts and bolts. Fit the square end caps to any open ends of box sections.

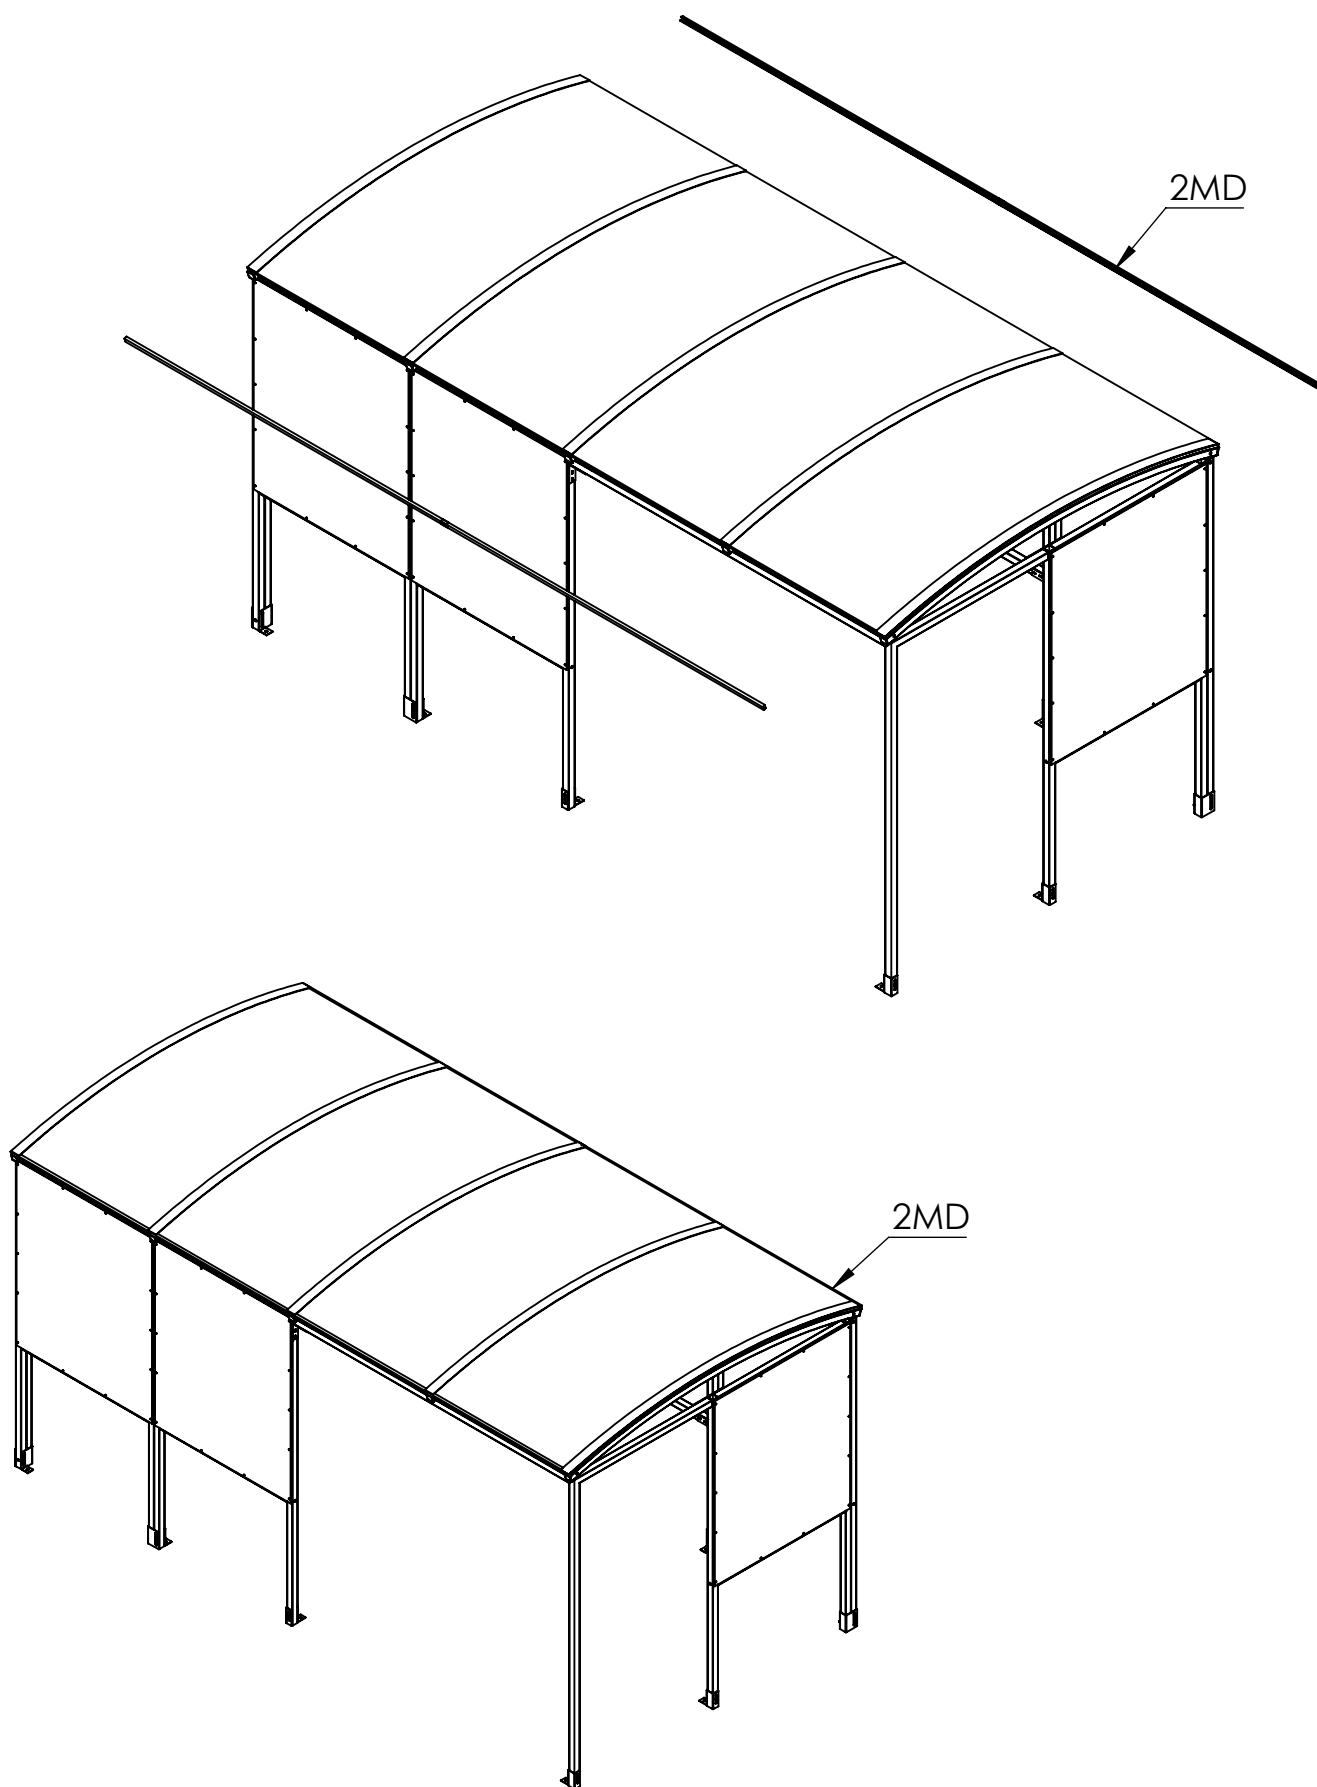

Plan view

Suggested size for concrete base: 200mm/7.87in oversized on all four sides.

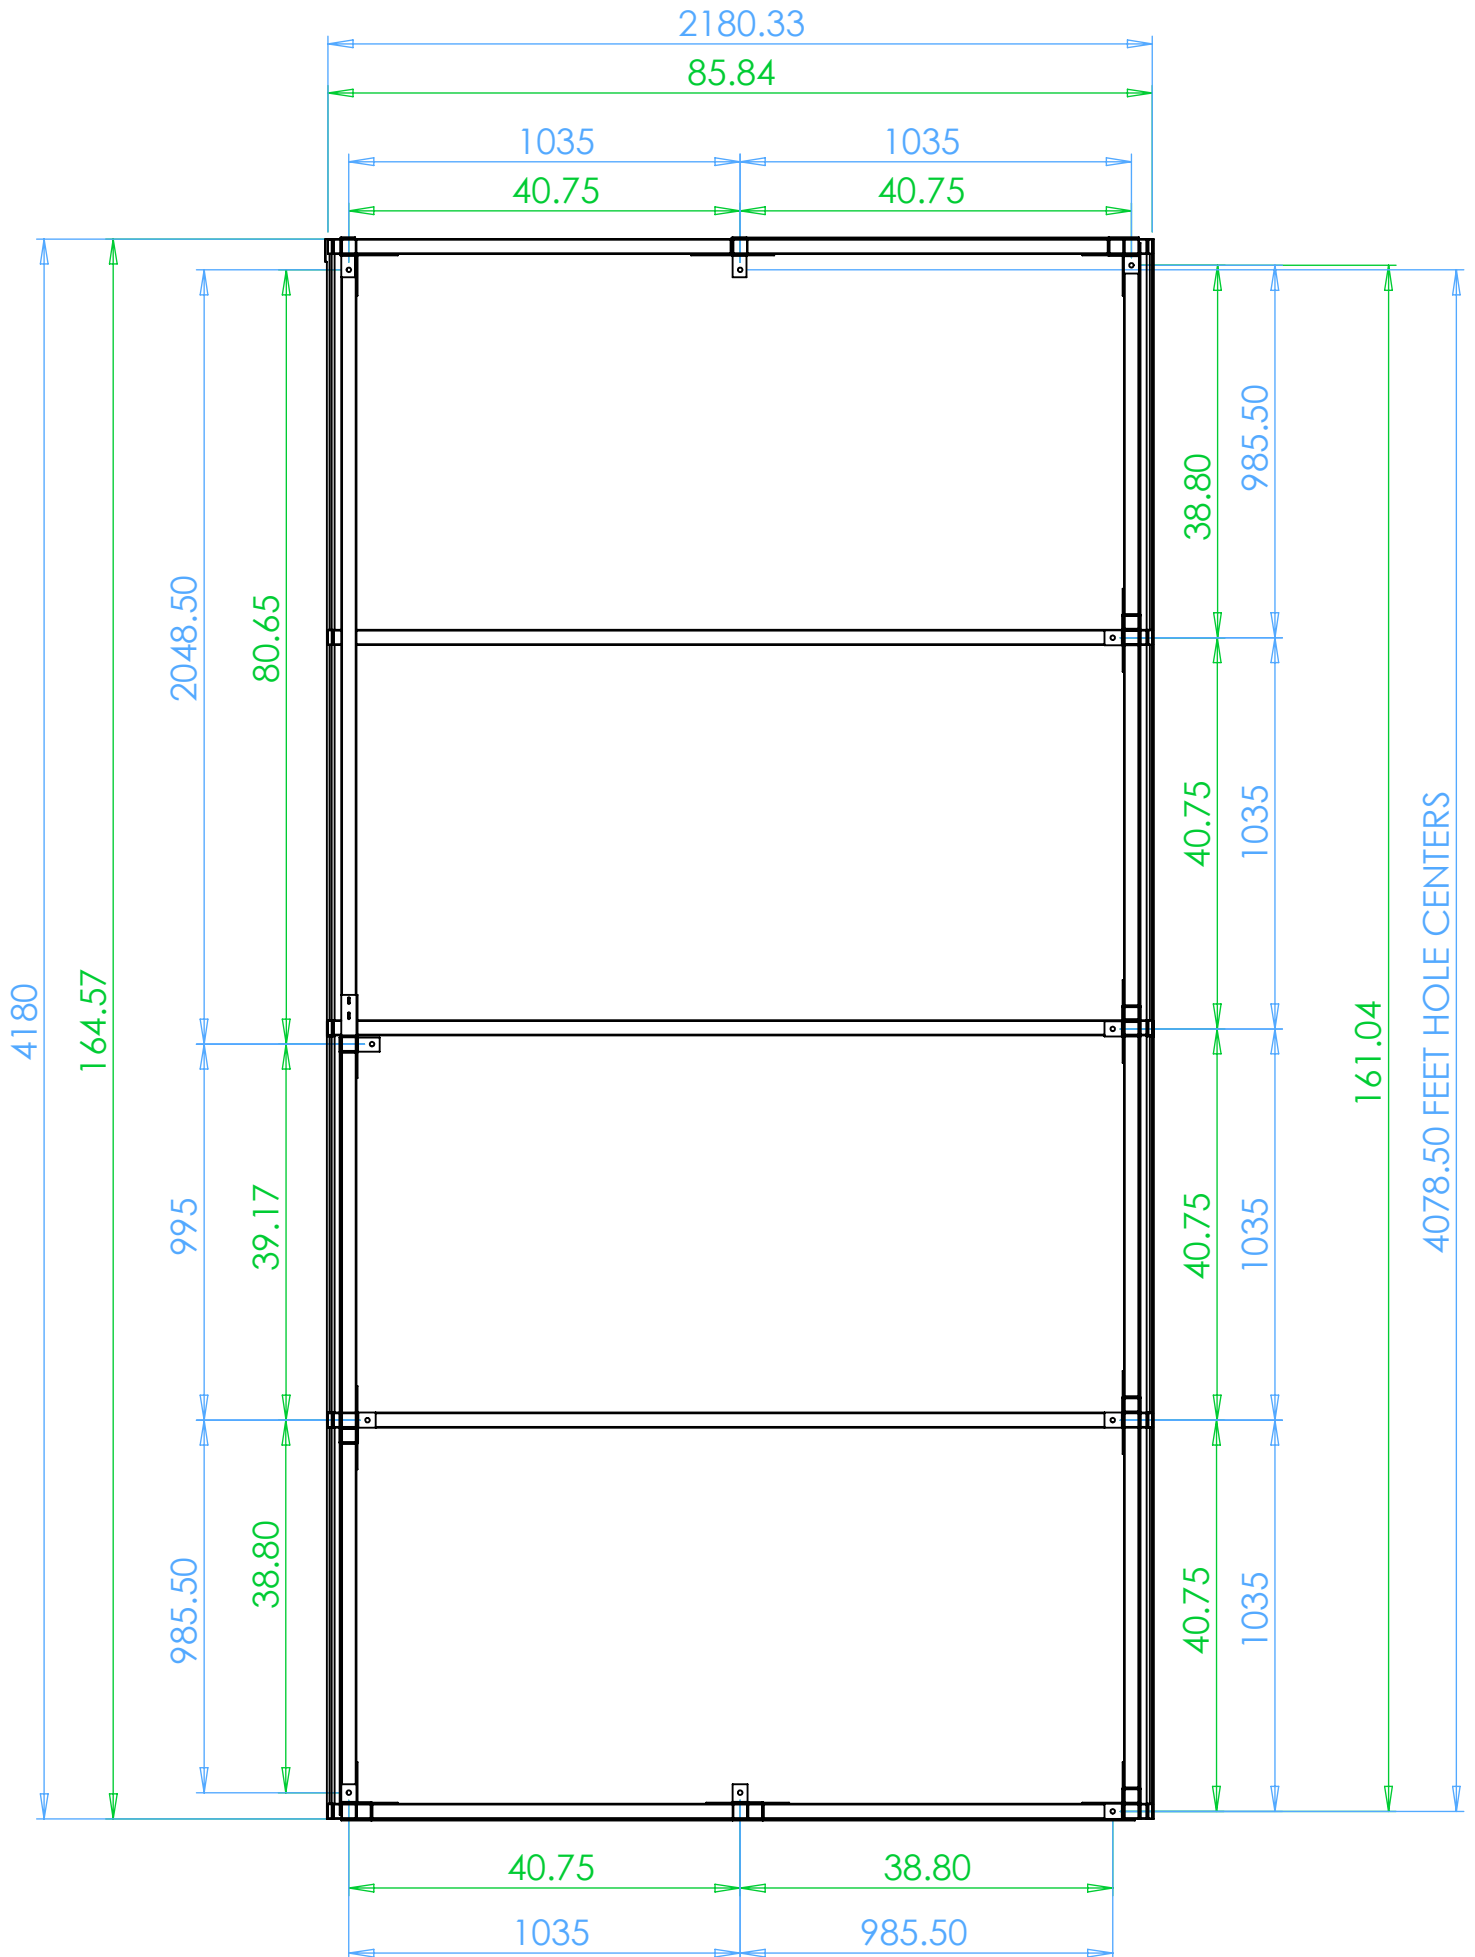

NOTES:

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@nobutts.com

Web : www.nobutts.com

Tel : 1-888-662-8887

No Butts Bin Company, Inc. 16 Birch Lane, Madison, CT 06443

All Parts and Fixings checked by:	
Print Name:	Signature: