


Assembly Instructions

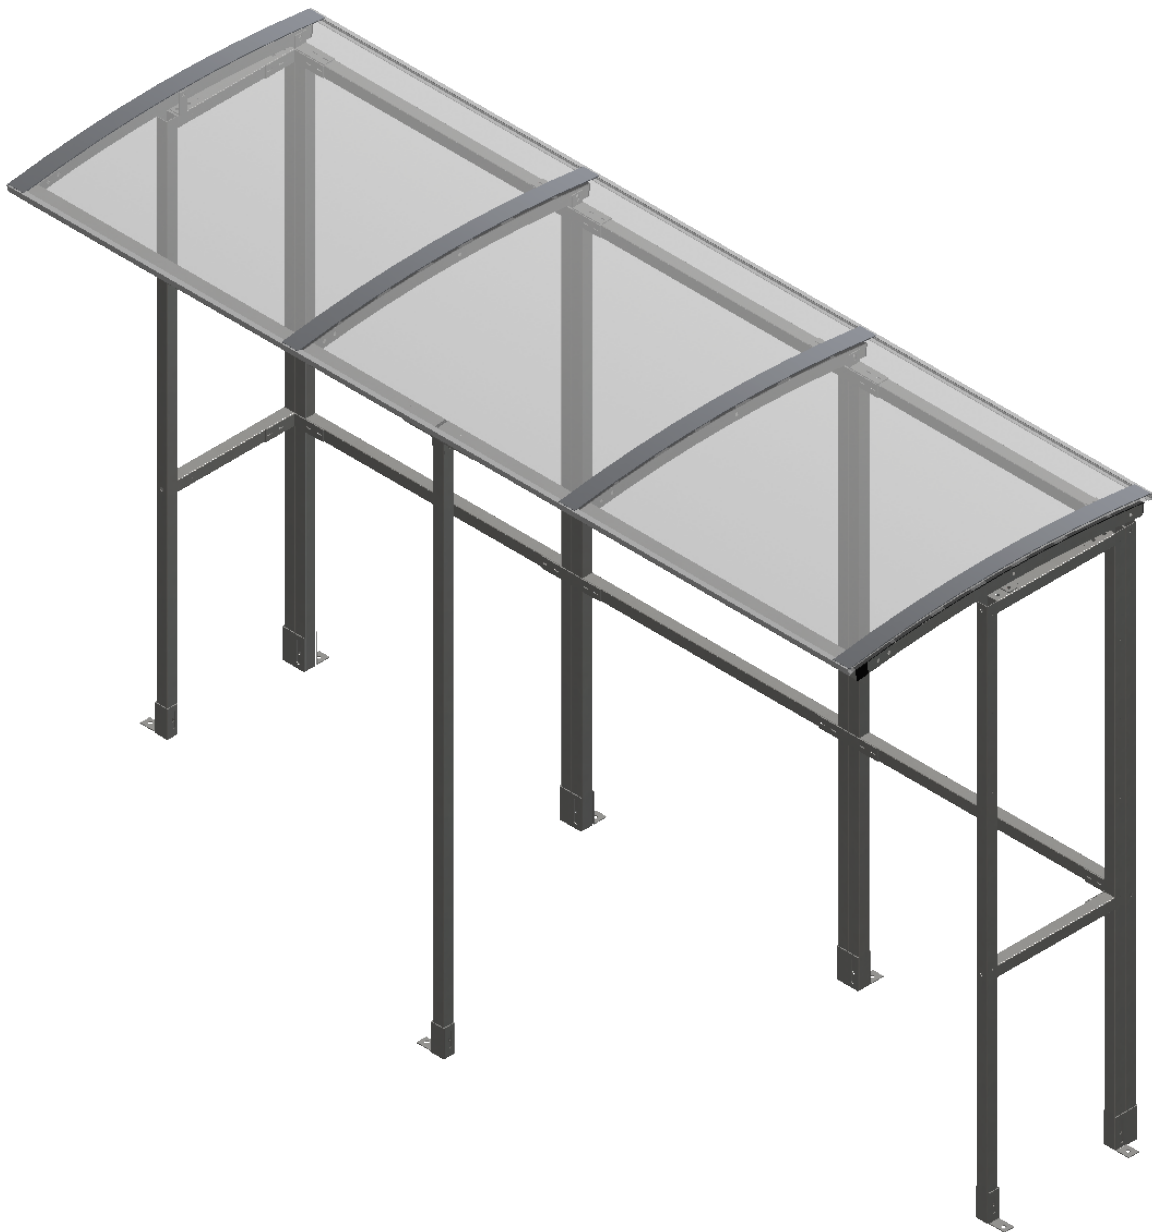


No Butts Bin Co.
Better Ash & Trash Solutions
Est. 1991

Email : Sales@nobutts.com
Web : www.nobutts.com
Tel : 1-888-662-8887

Shelter type: SR1602

SR1602-04-240219-USA

EXPLODED VIEW

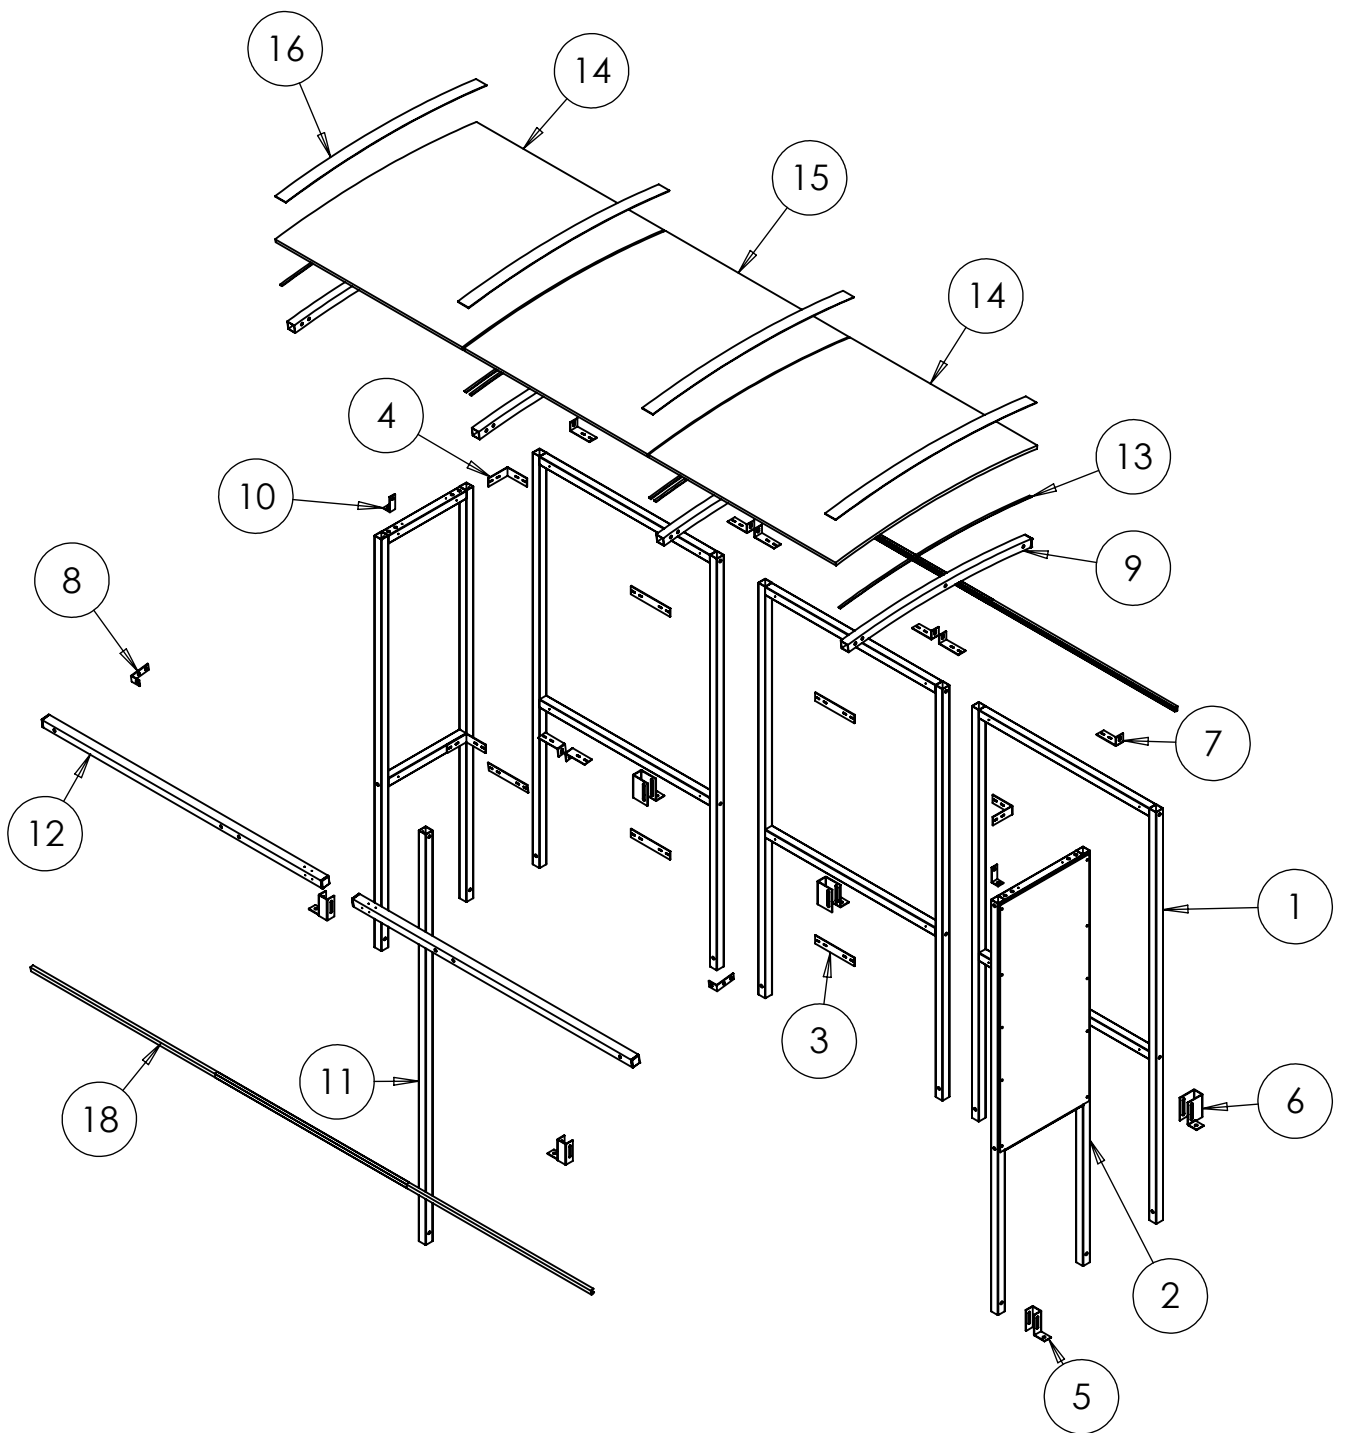

Tools required:



Drill/Screwdriver



Spanner



Mallet























Torx bit




Hack saw

PARTS LIST


ITEM NO.	PART NO.	DESCRIPTION	MEASUREMENT (MM)	MEASUREMENT (INCHES)	IMAGE	QTY.
1	S1	FRAME	2000 x 1035	78.74 x 40.55		3
2	S3	FRAME	2000 x 517	78.74 x 20.35		2
3	JF1	PLATE / BRACKET	220 x 40	8.66 x 1.57		5
4	CB1	BRACKET	110 x 110 x 40	4.33 x 4.33		4
5	FT1	FOOT BRACKET	109 x 100 x 40	4.29 x 3.93 x 1.57		3
6	FT3	FOOT BRACKET	109 x 100 x 80	4.29 x 3.93 x 3.27		4
7	RB1	BRACKET	110 x 46	4.33 x 1.81		8
8	L3	BRACKET	73 x 38	2.87 x 1.50		2
9	R3	CURVED RAFTER	1035	40.75 x 1.57 x 1.57		4
10	L1	BRACKET	95 x 45 x 30	3.74 x 1.77		6
11	P4	POST	1996	78.54 x 1.57 x 1.57		1
12	B3	BEAM	1562 x 40 x 40	61.50 x 1.57 x 1.57		2
13	SS	SEALING STRIP	Trim To Suit	Trim To Suit		2 ROLLS
14	PCE1	ROOF PANEL	1150 x 1050	44.49 x 41.34		2
15	PCC1	ROOF PANEL	1150 x 1030	44.49 x 40.55		1
16	RC1	ROOF STRIP	1130	44.49		4
17	2MD	ROOF EDGE TRIM	Trim To Fit	Trim To Fit		4
18	EC40	PLASTIC END CAP	40 X 40	1.57 x 1.57		14

Fittings	Bolt set M10	Nut	Washer	Black Cap	T25	T38	AB1210
	M10 x 60mm				25mm Tech screw	38mm Tech screw	M10 X 100mm Concrete Bolt
Pack A	30	30	60	60	72	30	8
Required	30	30	60	60	52	20	7
Image							


Step 1 Assemble **S1** frames to make up the main structure using **CB1** brackets in the corners and **JF1** brackets on the straight joints.

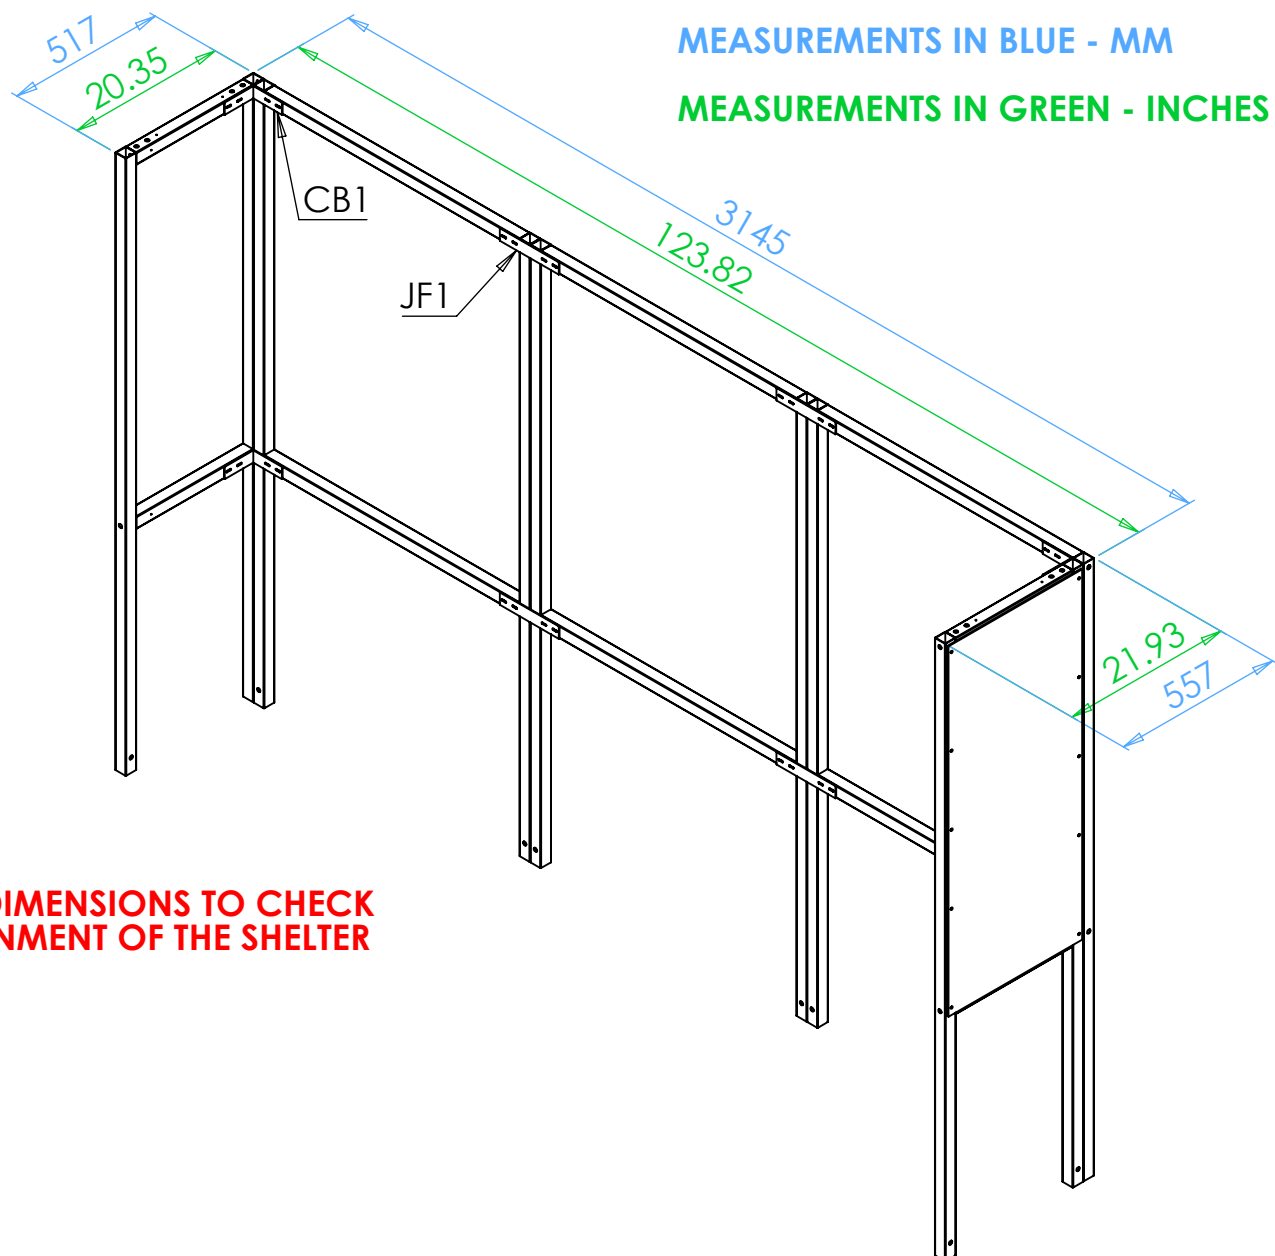


**USE DIMENSIONS TO CHECK
ALIGNMENT OF THE SHELTER**

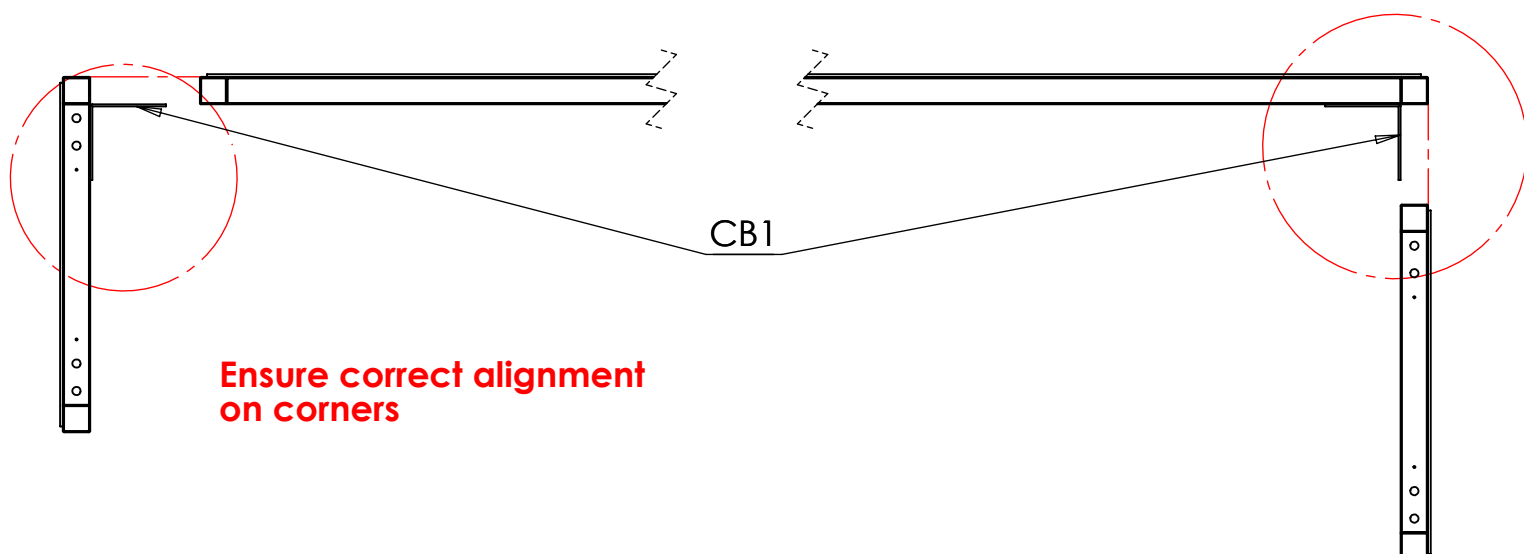


Step 2 Attach **R3** rafters using **RB1** brackets on the back of the shelter and **L3** brackets in the middle.

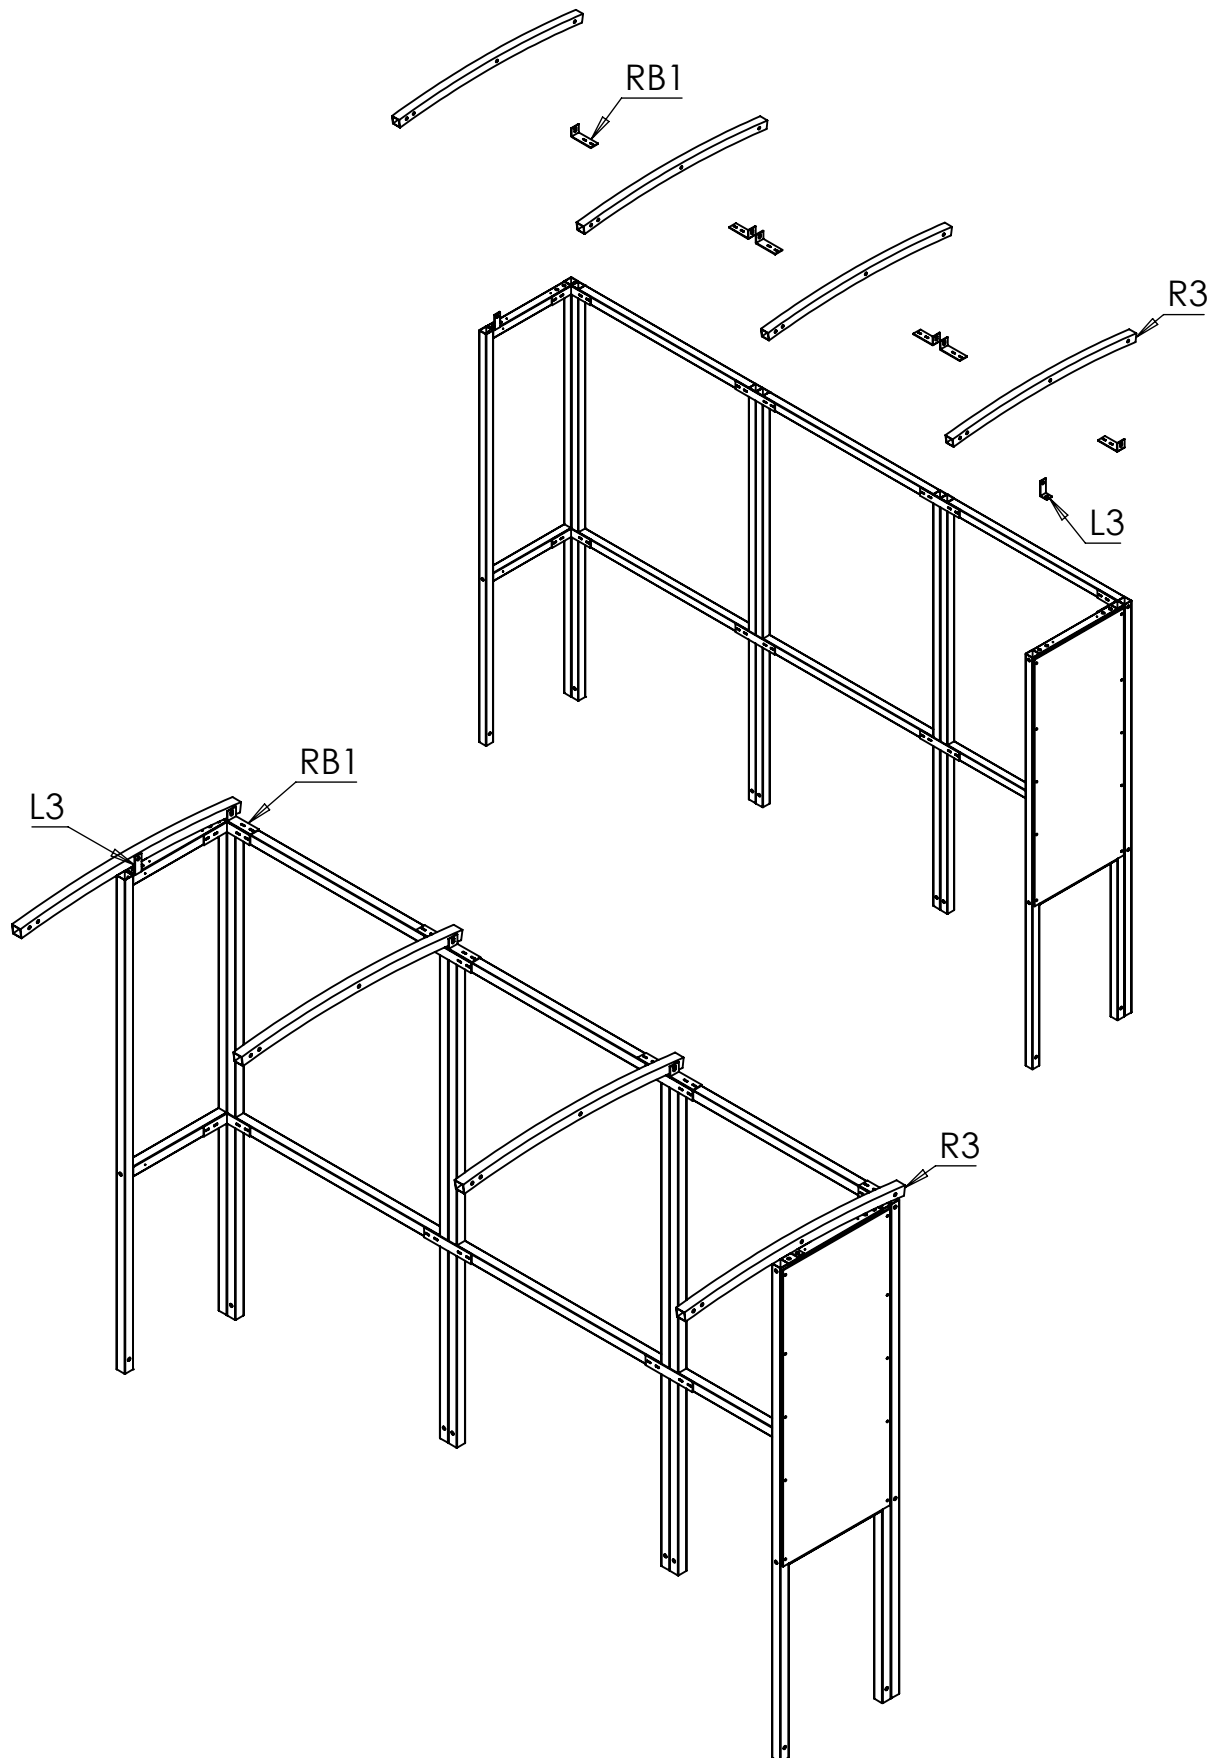


Step 3 Assemble the **B3**'s and P1 using the JF1 and RB1 brackets as shown below. Attach front beams (**B3**) and centre post (**P3**) to the rafters using the **L1** brackets.

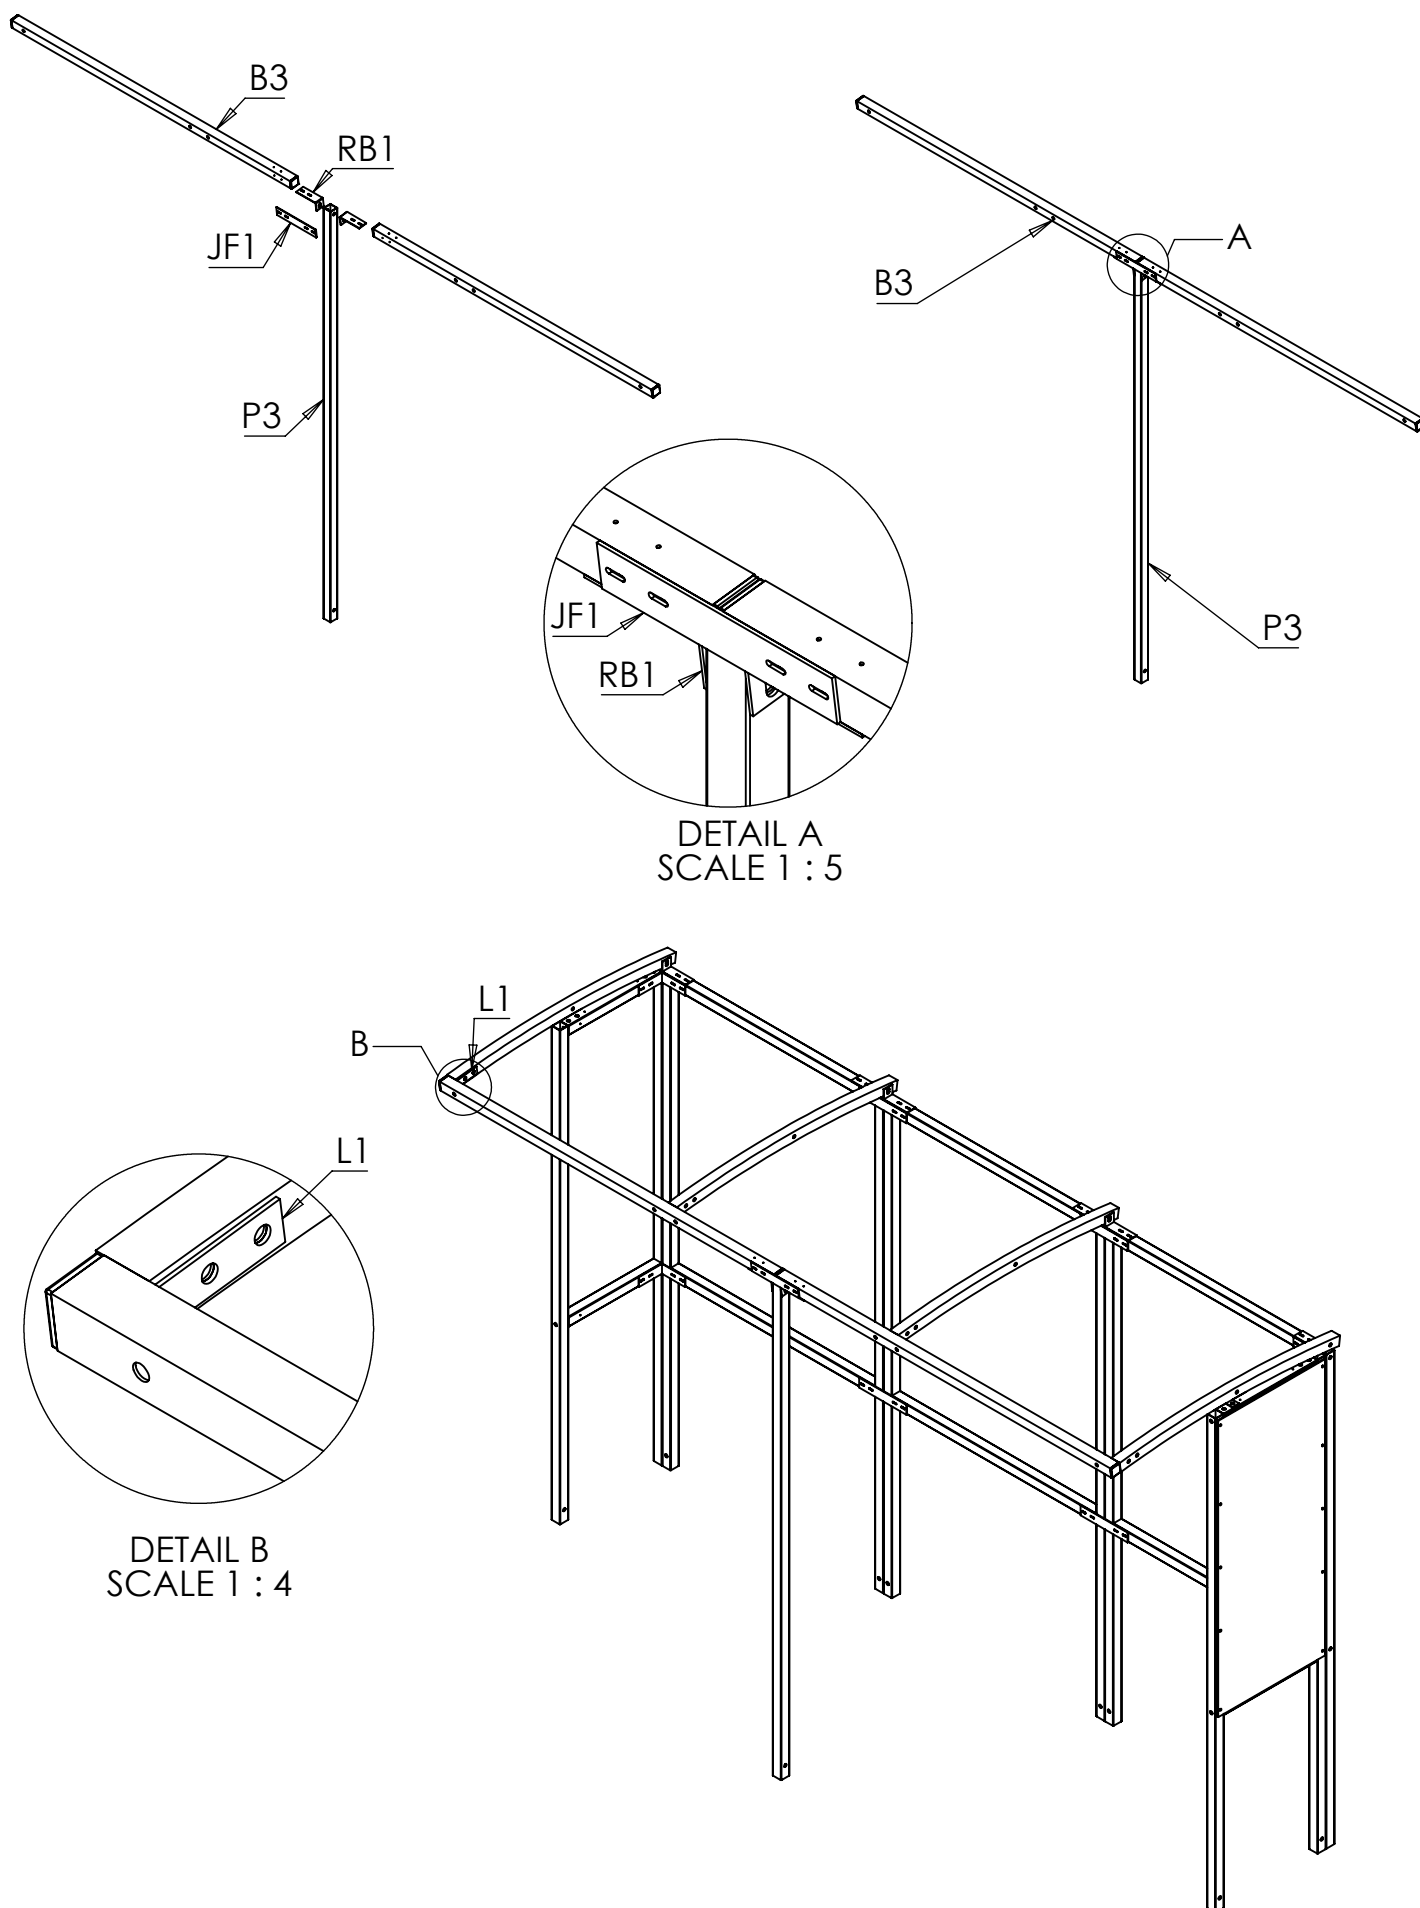


Step 4 Attach the **FT1** and **FT3** foot brackets, Move the Shelter into its final position and make sure its square. Then use concrete anchor bolts to secure it to the the ground.

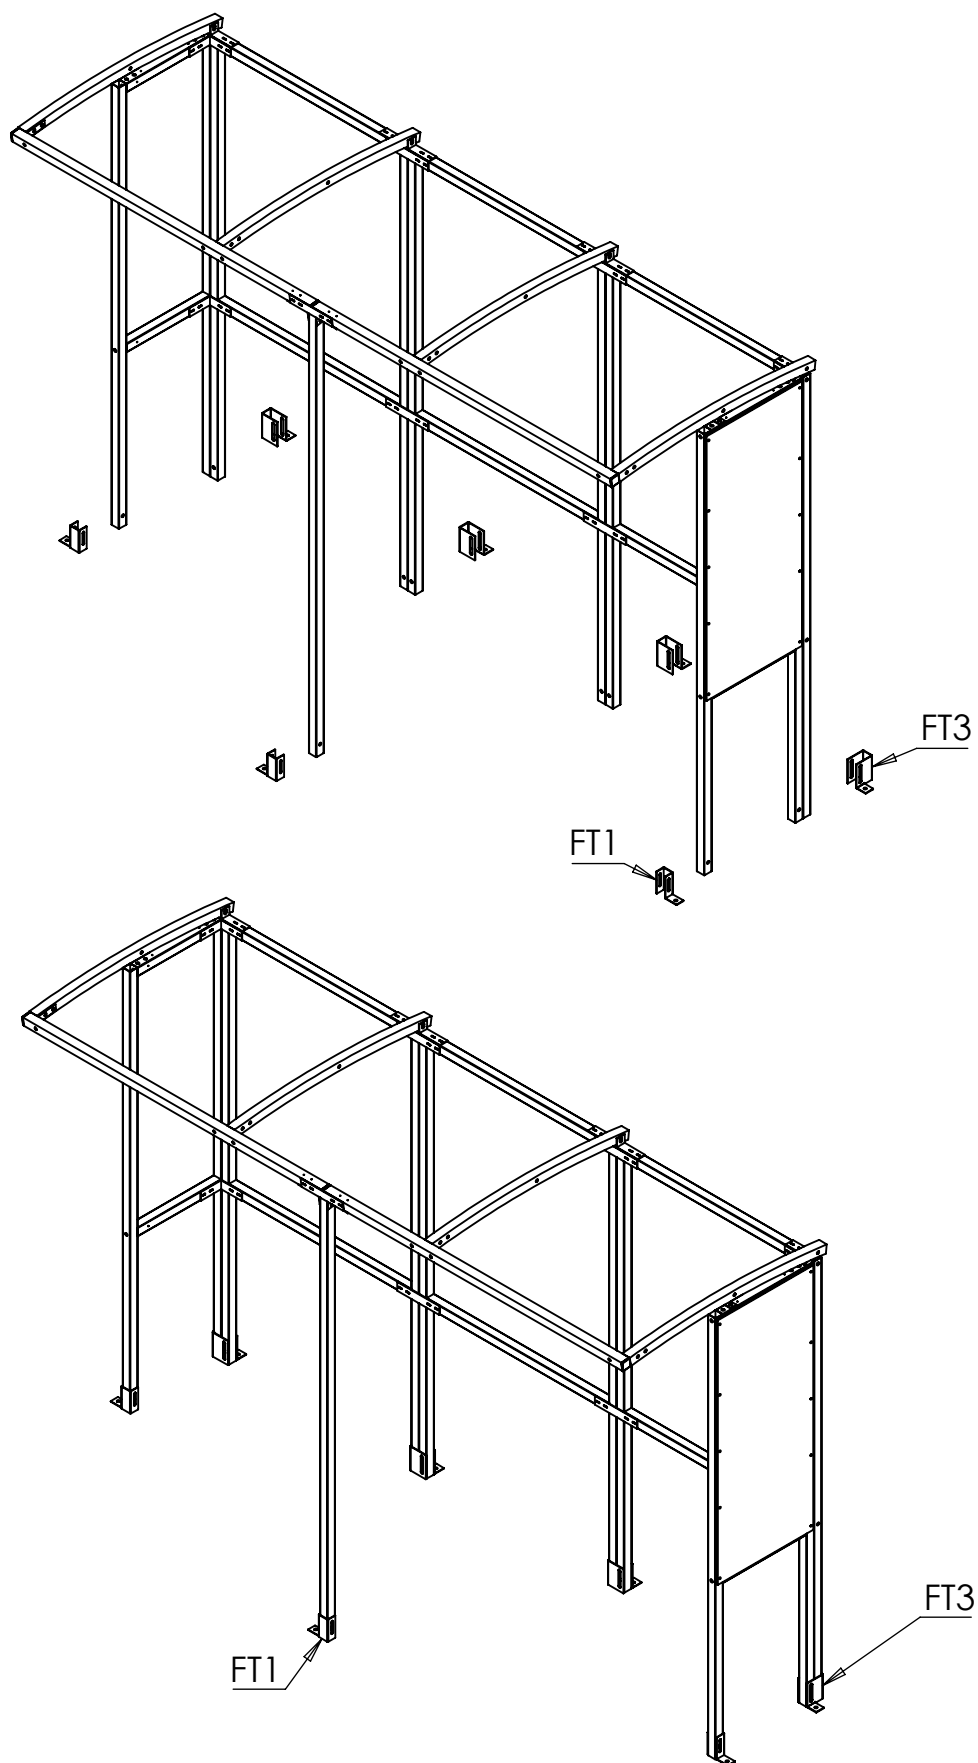


Step 5 Apply the sealing strips (**SS**) to the top of the R3 rafters as shown. Attach **PCE1** and the **PCC1** roof panels with a small gap between them.

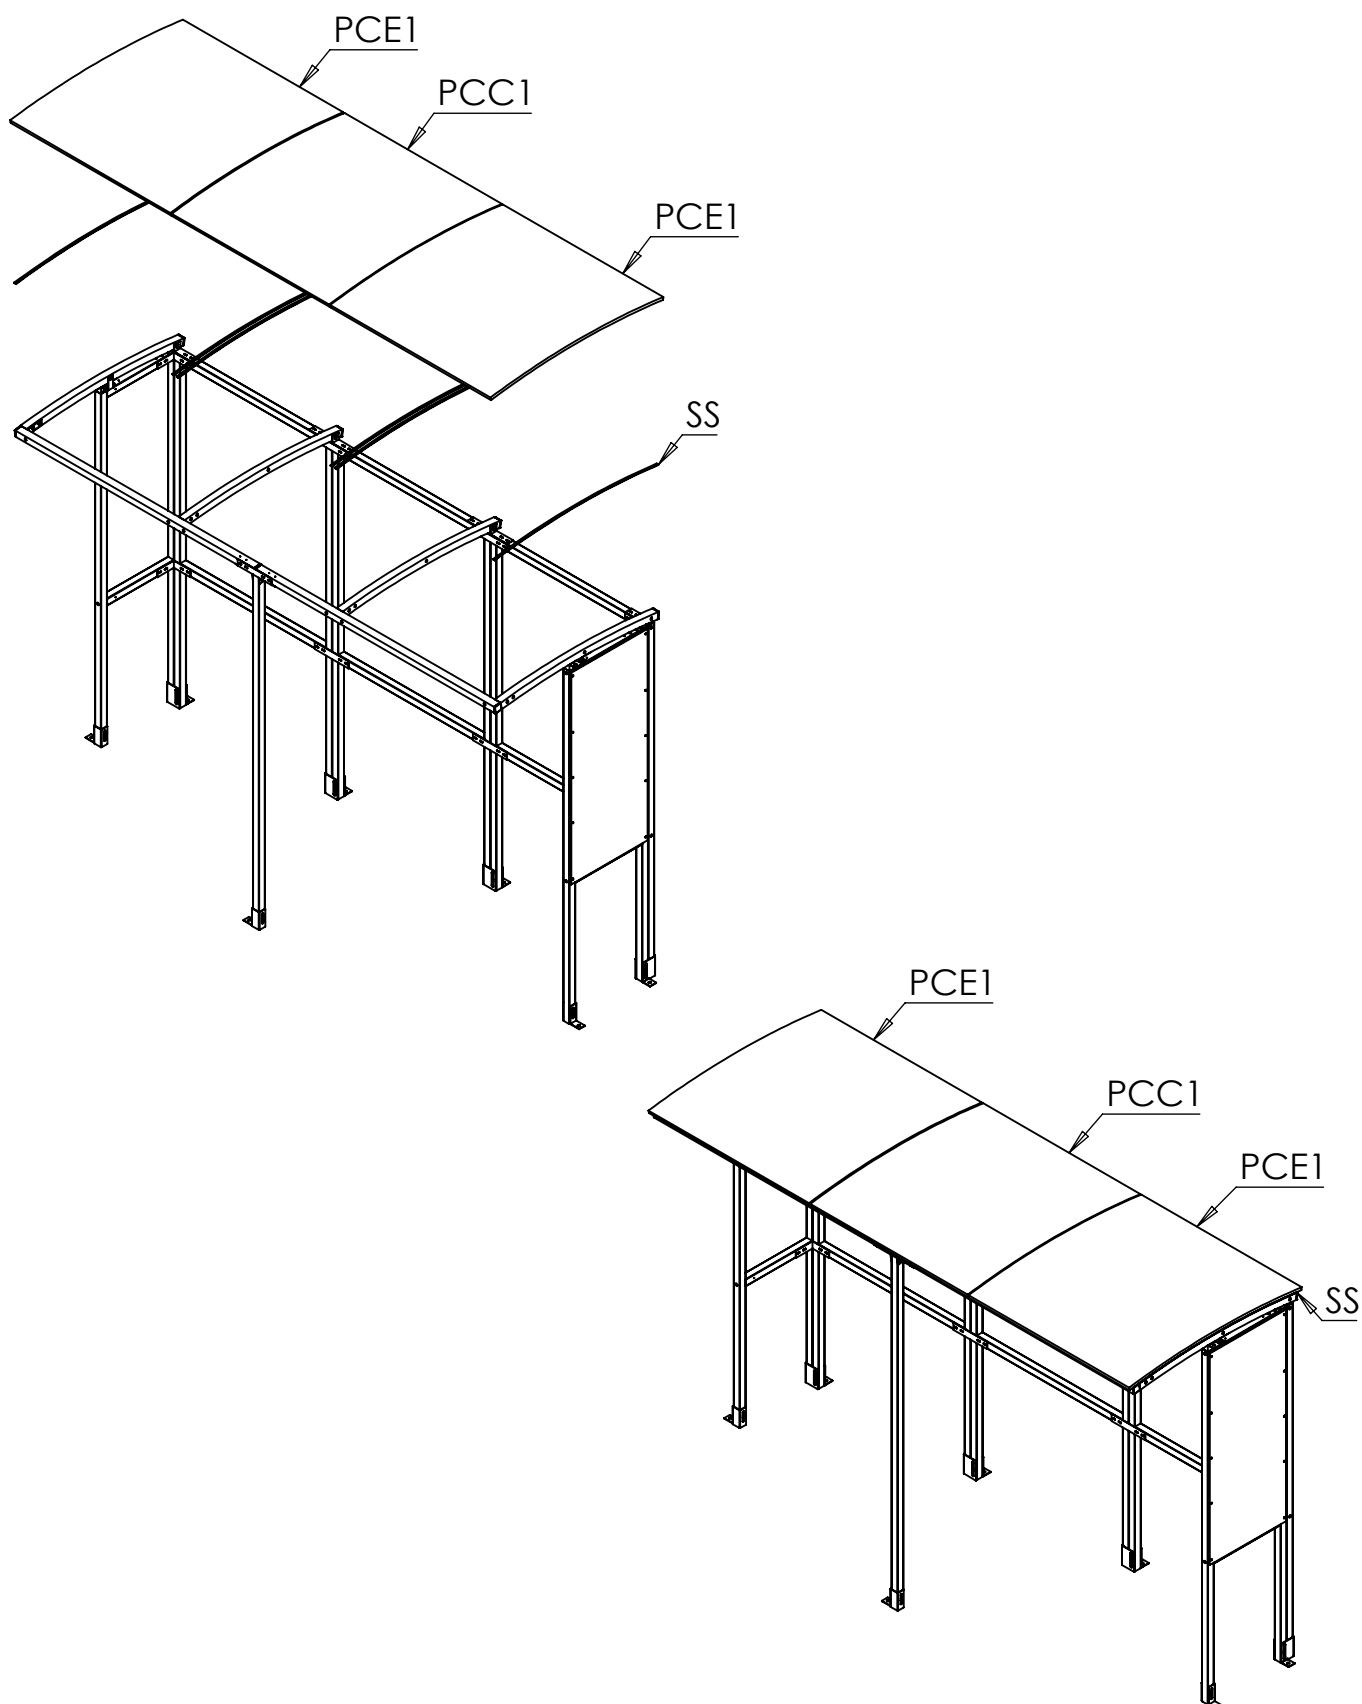

Step 6 Attach the **RC1** roof strips, screwing directly into the rafters using **38mm Tech Screws**. Push on the **2MD** edge trim. Then fit the Black plastic caps on exposed nuts and bolts. Fit the square end caps (**EC40**) to any open ends of box sections.

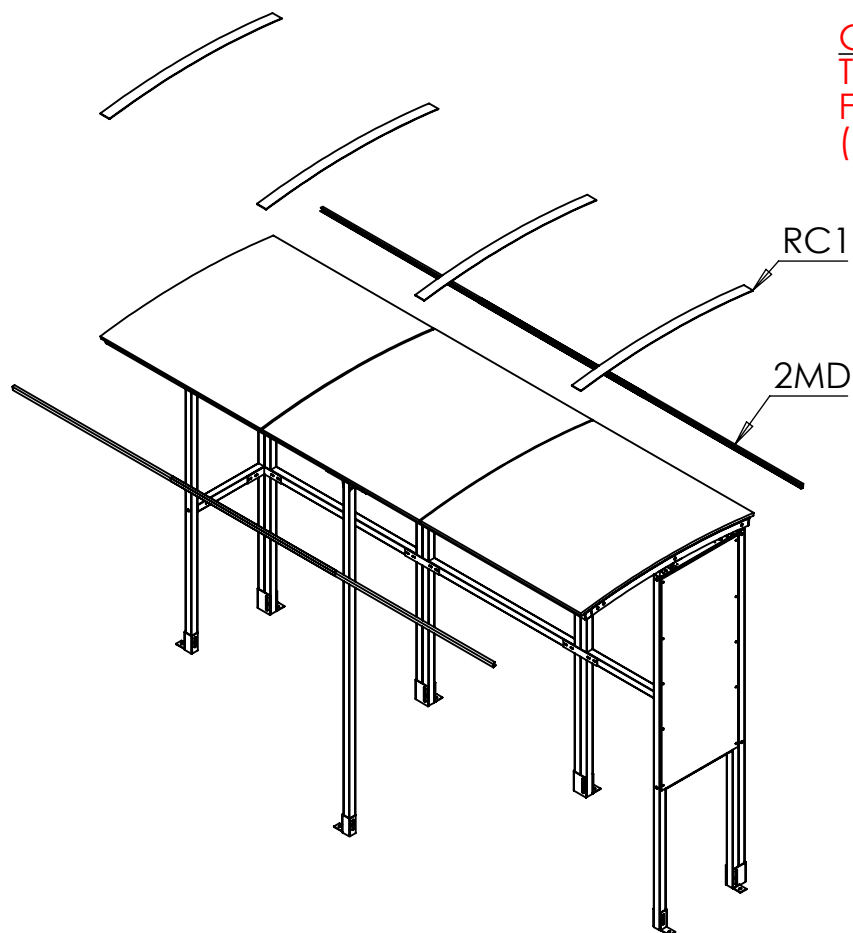


GENERAL NOTE:
THE 38mm TECH SCREWS ARE
FOR FIXING ROOF STRIPS
(RC) ONLY

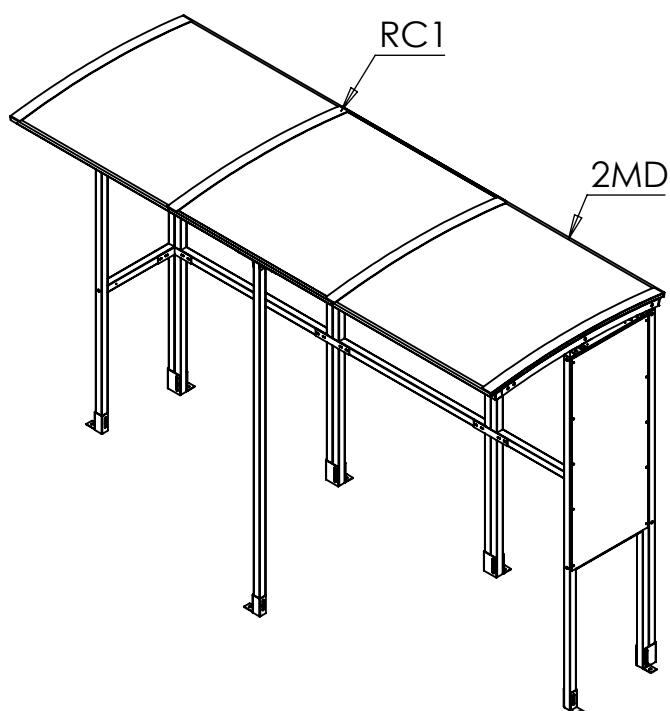

PLAN VIEW

OVERALL DIMENSIONS AND GROUND FIXING POSITIONS

Suggested size for concrete
base: 200mm/7.87in
oversized on all four sides.

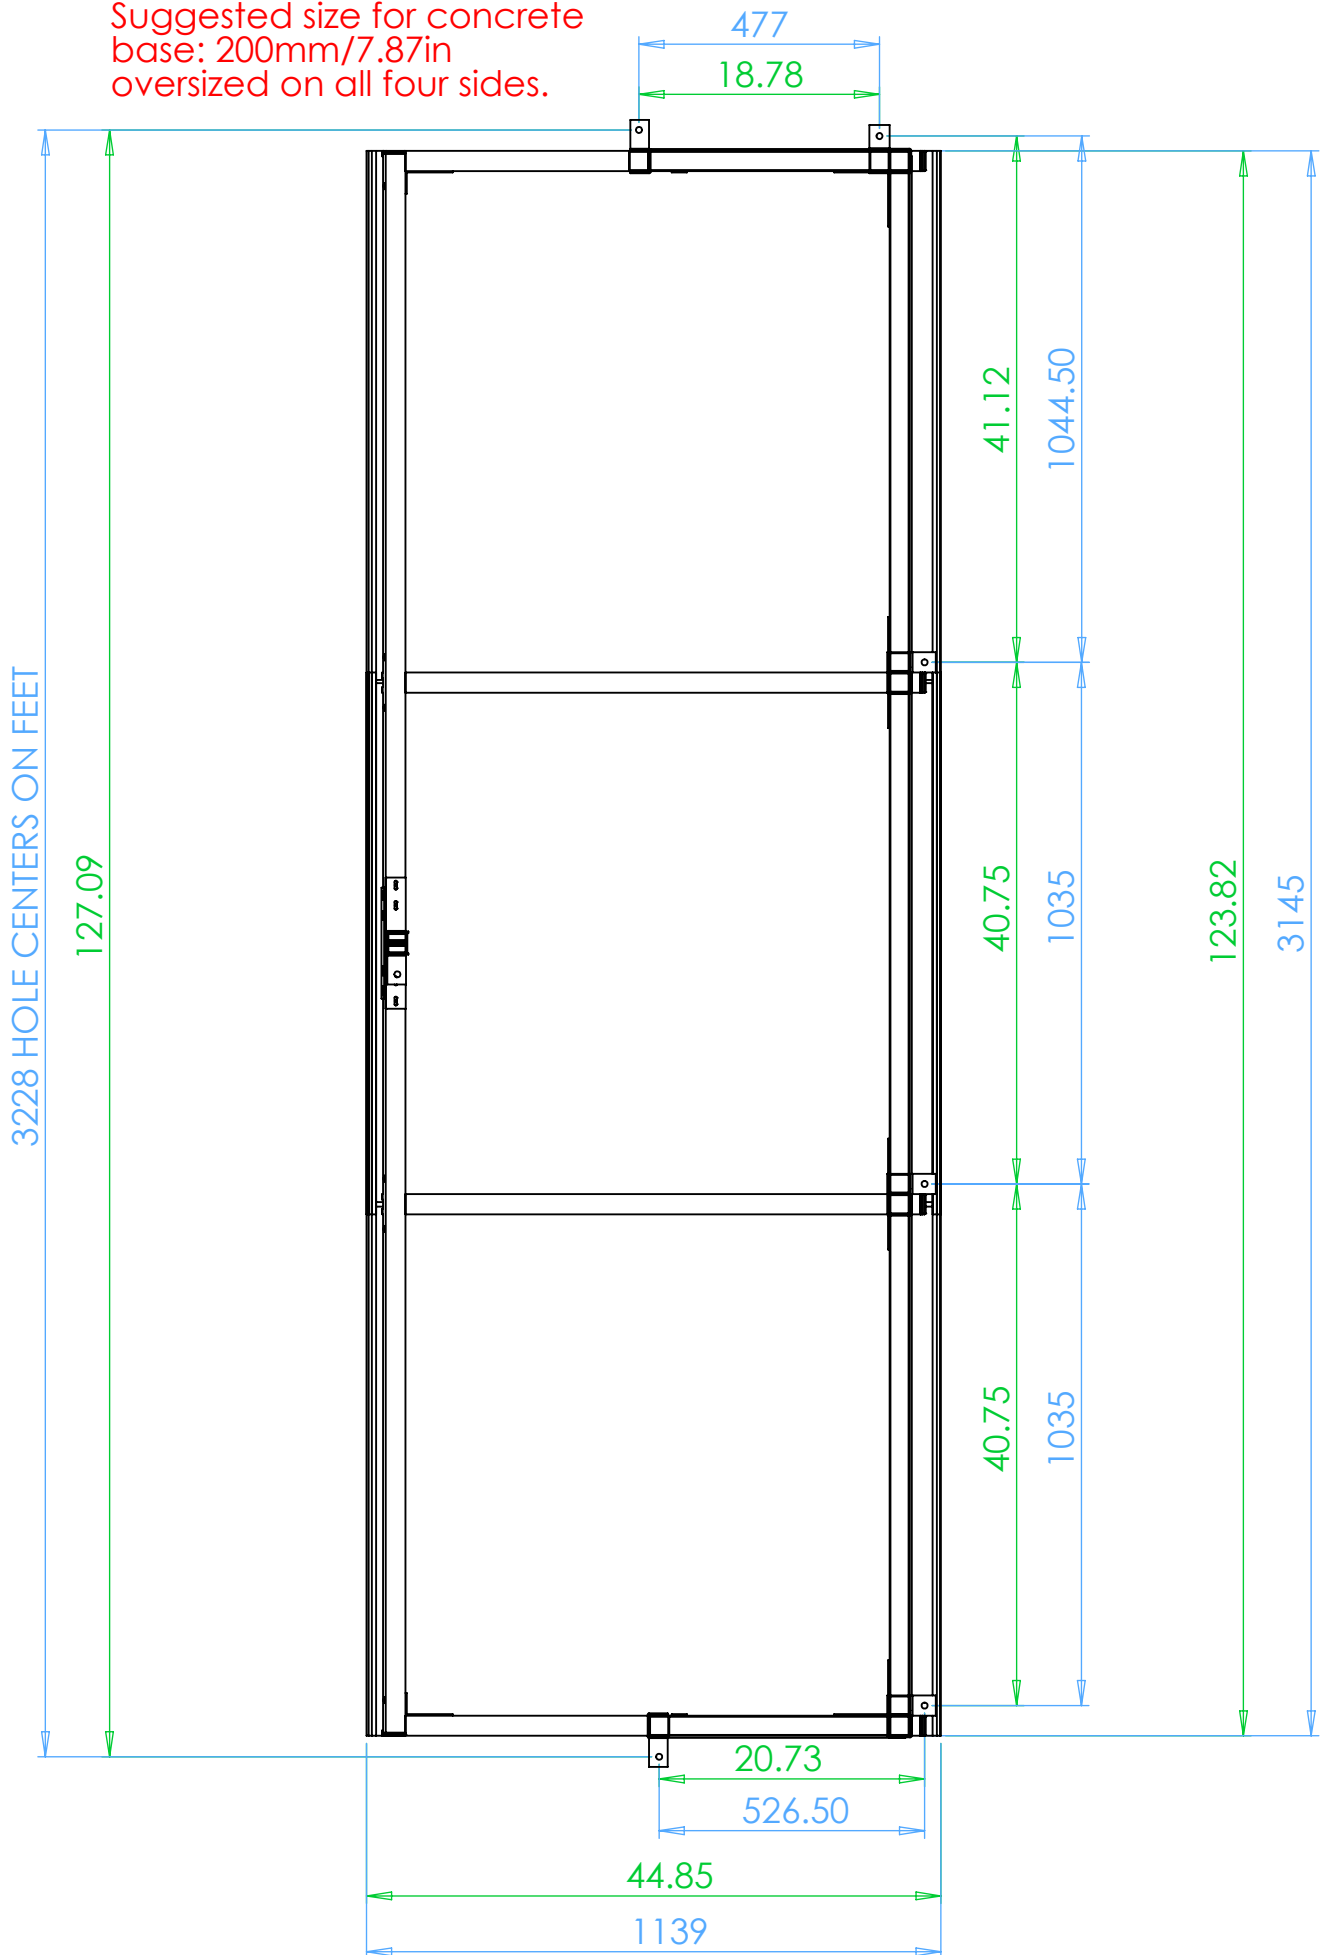

NOTES:

THANK YOU FOR PURCHASING THIS PRODUCT

MAINTENANCE:

To ensure your products give you many years of use we recommend that you:

- Clean panels regularly with soapy water
- Ensure all fittings are tight (for example after a big storm)
- Touch up any exposed metal should it get scratched

CONTACT DETAILS:

Email : Sales@nobutts.com

Web : www.nobutts.com

Tel : 1-888-662-8887

No Butts Bin Company, Inc. 16 Birch Lane, Madison, CT 06443

All Parts and Fixing checked by:	
Print Name:	Signature: