Wheelchair Octagonal / Round Table Instructions



Assembly Guide



ROPTW-02-220818-RF

0808 1699 838

Parts and Fittings

Two People required for safe assembly

ITEM NO.	PART NAME	DRG NO:	IMAGE	QTY.
1	Octagon - Round Seat - 995x294 - OR	OR-001-01		3
2	UC2 - 400x88x38 - OR	OR-021-01	••	8
3	UC3 - 643X88X38 - OR	OR-022-01	0 0	3
4	UC5 - 900x88x38 - OR	OR-025-03		4
5	UC1 - 995x88x38 - OR	OR-020-01	•	4
6	UC - 312x88x38 Block -OR	OR-024-02		1
7	Octagonal Table Assembly - OR	OR-005-06		1
8	Wheelchair Octagonal Seat Assembly	WOR-002-01		1
9	UC3 - 378.5x88x38 - WOR	WOR-003-01	• •	1

Fixings

FIXING	QTY.
M10 X 140	4
M10 X 130	5
M10 X 90	14
M10 X 60	12
M10 WASHER	66
M10 NUT	31

Tools Required



17mm Spanner




6mm Allen Key

x1




Step 1

Bolt leg to UC1 using 90mm bolts supplied, repeat for all other legs.

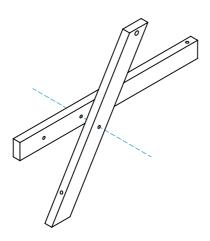

Do not over-tighten bolts during assembly as small adjustments will help parts fit.



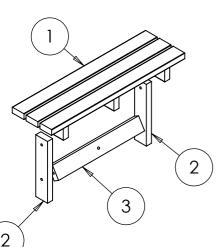


Assemble seats as below using bolts supplied



ITEM NO.	PART NAME	DRG NUMBER	Step 2/QTY.
1	Octagon - Round Seat - 995x294 - OR	OR-001-01	1
2	UC2 - 400x88x38 - OR	OR-021-01	2
3	UC3 - 643X88X38 - OR	OR-022-01	1

Step 3


Assemble half seat as below.

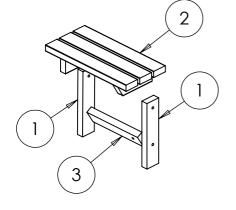




ITEM NO.	PART NAME	DRG NUMBER	Step 3/QTY.
1	UC2 - 400x88x38 - OR	OR-021-01	2
2	Wheelchair Octagonal Seat Assembly	WOR-002-01	1
3	UC3 - 378.5x88x38 - WOR	WOR-003-01	1

Step 4

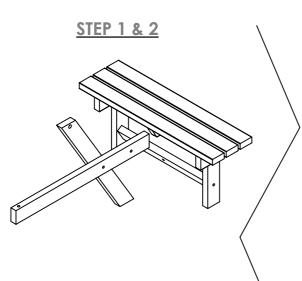

Bolt step 1,2 & 3 assemblies together using 90mm & 130mm bolts.

STEP 1 & 3

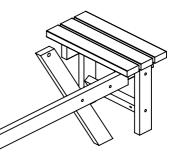


NOTE: Gap is now filled



Step 6

Bolt the table top to the 4 legs centrally.

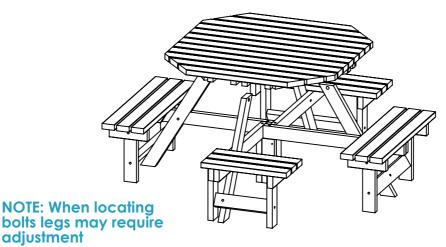

Finally Tighten all bolts fully before use.

Notes:

THANK YOU FOR PURCHASING THIS PRODUCT

CONTACT DETAILS:

Email: sales@vprecycledplastic.co.uk Web: www.vprecycledplastic.co.uk Tel: 0808 1699 838 Value Products Ltd Unit B, Sharp Road, Poole, BH12 4BG

All Parts and Fixings checked by:			
Print Name:	Signature		